


HOBART

HYPER


4WD ESC

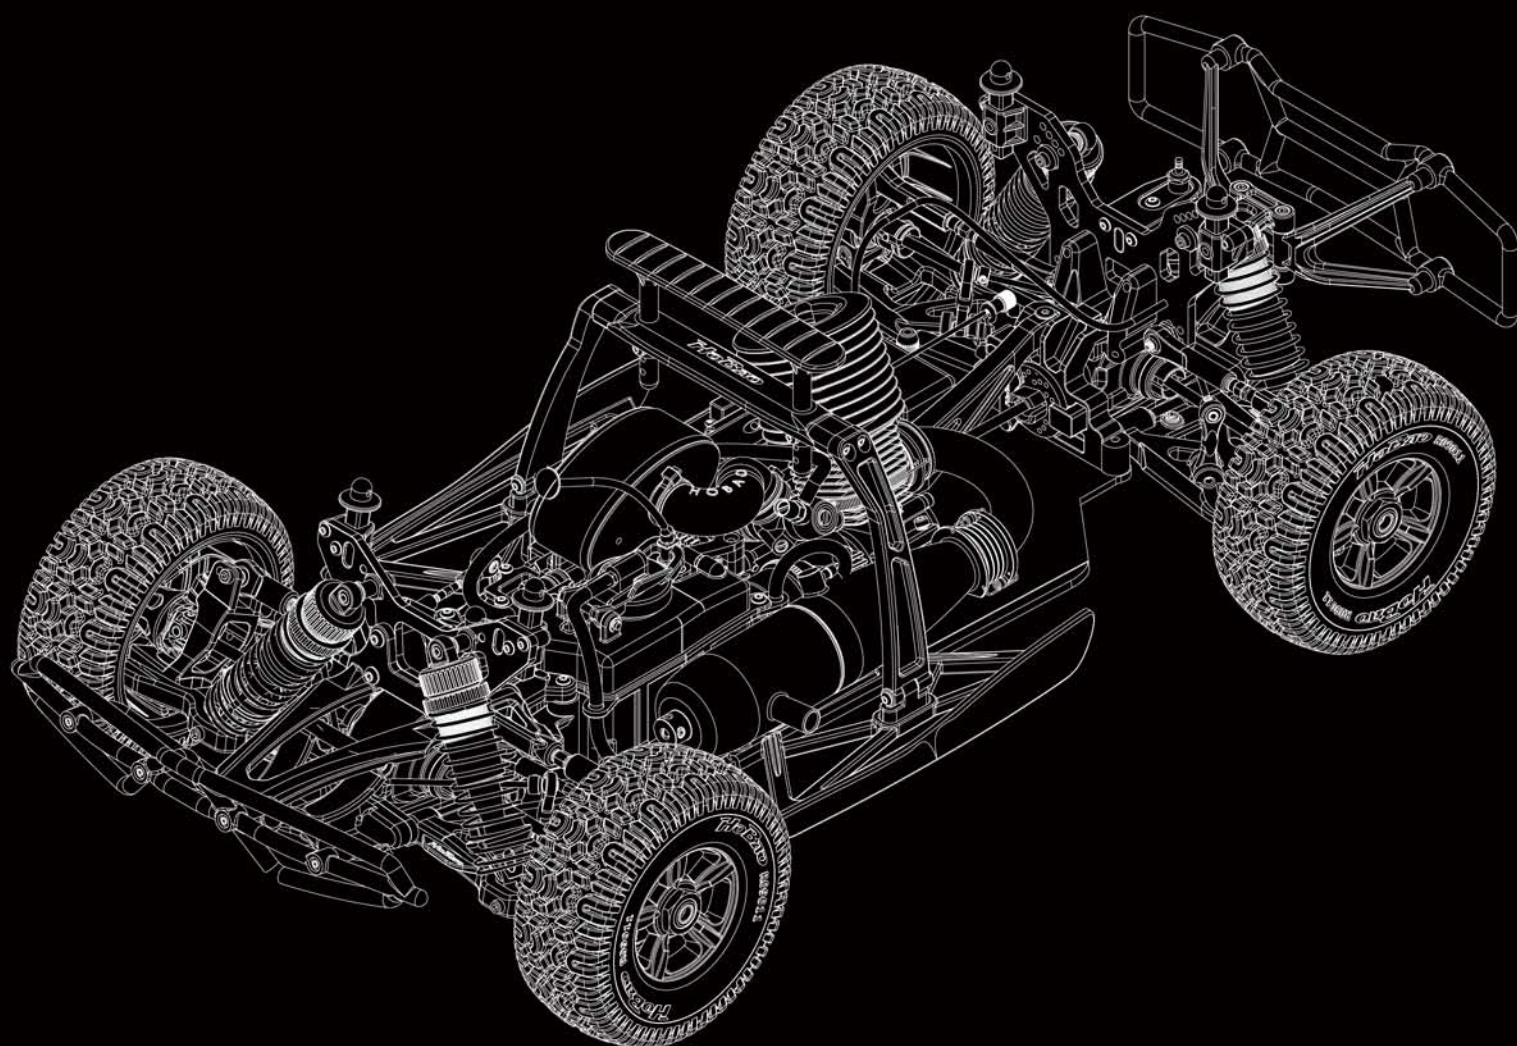


HYPER 8SC 4WD

Required


Radio control equipment set

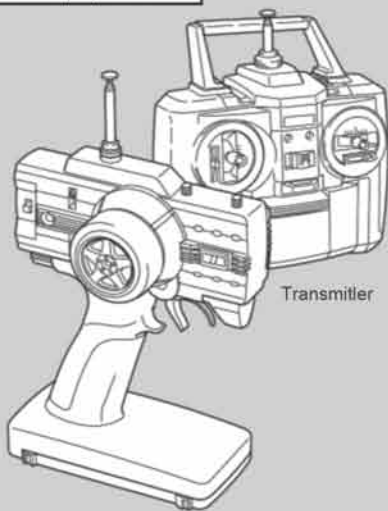


8 AA Size batteries
for transmitter

 


4 AA Size batteries
for receiver

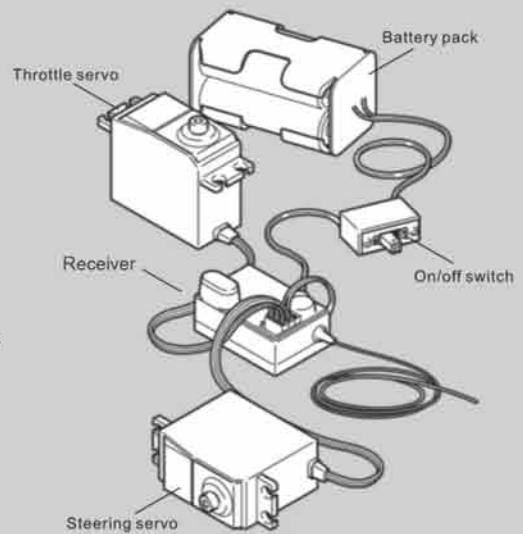

Hyper engine series

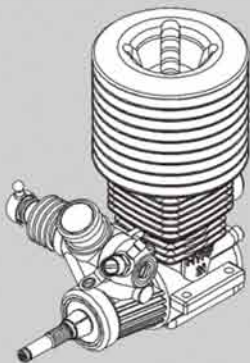

Required for engine starting

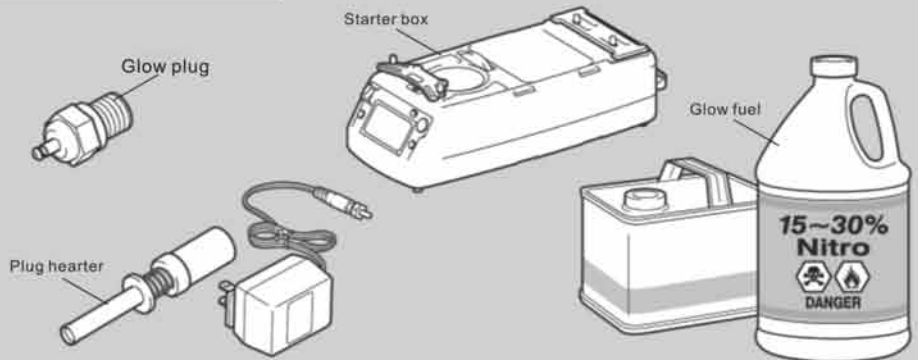

Tools recommended

Hex wrench

2.5mm


2mm

1.5mm

Screwdriver



Long nose pliers

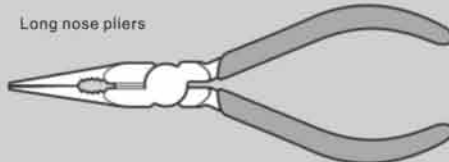

Modeling knife



Instant cement



Thread lock




Silicone Oil




Grease



Side cutter

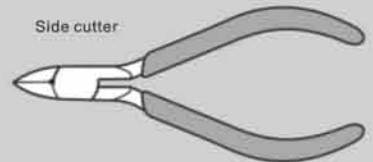

Curved scissor

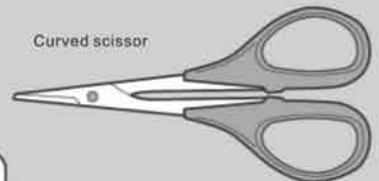

Reamer



Included items


Hex wrench with




Fuel bottle



Wrench

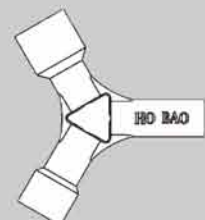

Assembly of Center Differential

 

89066
8x14x4mm x2
Ball bearing




89046
2.5x11.8mm x2
Shaft



89002
4x26.8mm x2
Shaft



89002
6x8mm x2
O-ring

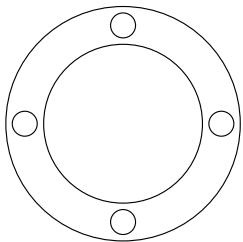

89004
Seal x1



89002
6x12mm x2
Washer



89004
3x10mm x4
F/H screws



1

3 1 2

89004

1

89045
40T

89004

89003

89066

89002

3

89002
Small bevel gear

Oil No.3000

* Silicone oil (hard)



2

*Put silicon oil (hard)
included in the package

89046

 
89002

89004

89046

89066

Assembly of Front / Rear Differential



89066
8x14x4mm x2
Ball bearing




89003
2.5x11.8mm x2
Shaft



89002
4x26.8mm x2
Shaft



89002
6x8mm x2
O-ring

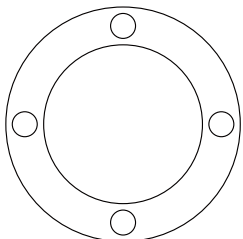

89004
Seal x1



89002
6x12mm x2
Washer



89004
3x10mm x4
F/H screws



2 x2

3 1 2

1

89004

89003

89066

89001
43T

89004

89002

89003

89002
Small bevel gear

Oil No.1000
No.3000

* Silicone oil (hard)



2

*Put silicon oil (hard)
included in the package

89003

 
 
89002

89004


89003

89066

Assembly of Front / Rear Differential Gear Box

-  89011
5x4mm x2
Set screw
-  89011
Steel joint cup x2
-  89005
Drive pinion gear x1
-  89066
8x14x4mm x2
Ball bearing
-  33315
3x15mm x2
Screws

3 x2

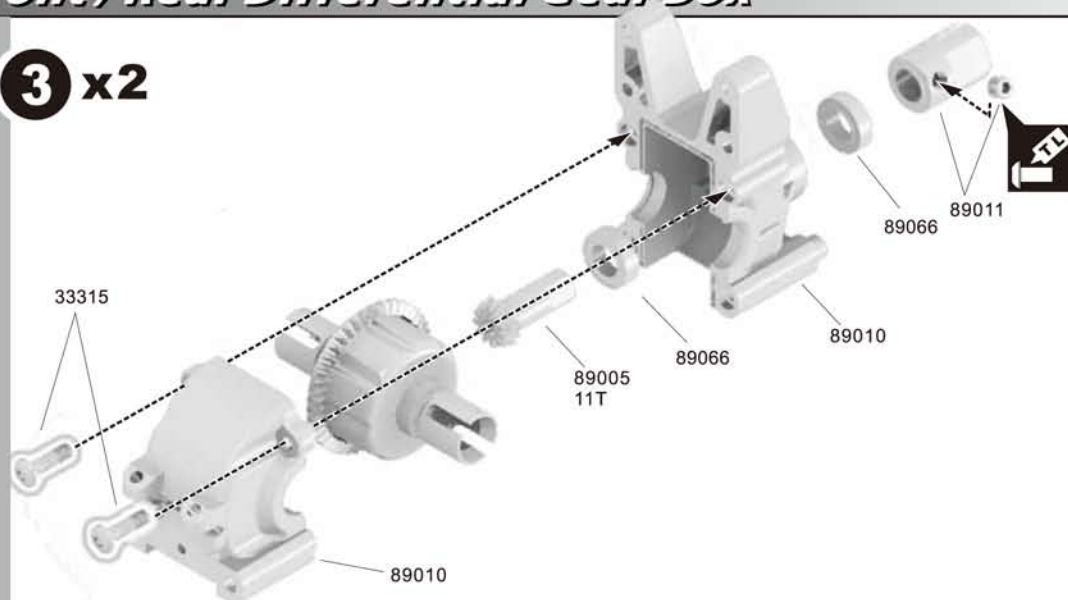


Assembly of Steering Knuckle & Steering Arm


-  89017
5x8mm
Set screw x2
-  33410
4x10mm x4
Screws
-  89078
6.8mm x2
Ball
-  89507
Steel collar x4
-  89066
8x14x4mm x4
Ball bearing
-  33310
3x10mm x4
Screws

4

LR

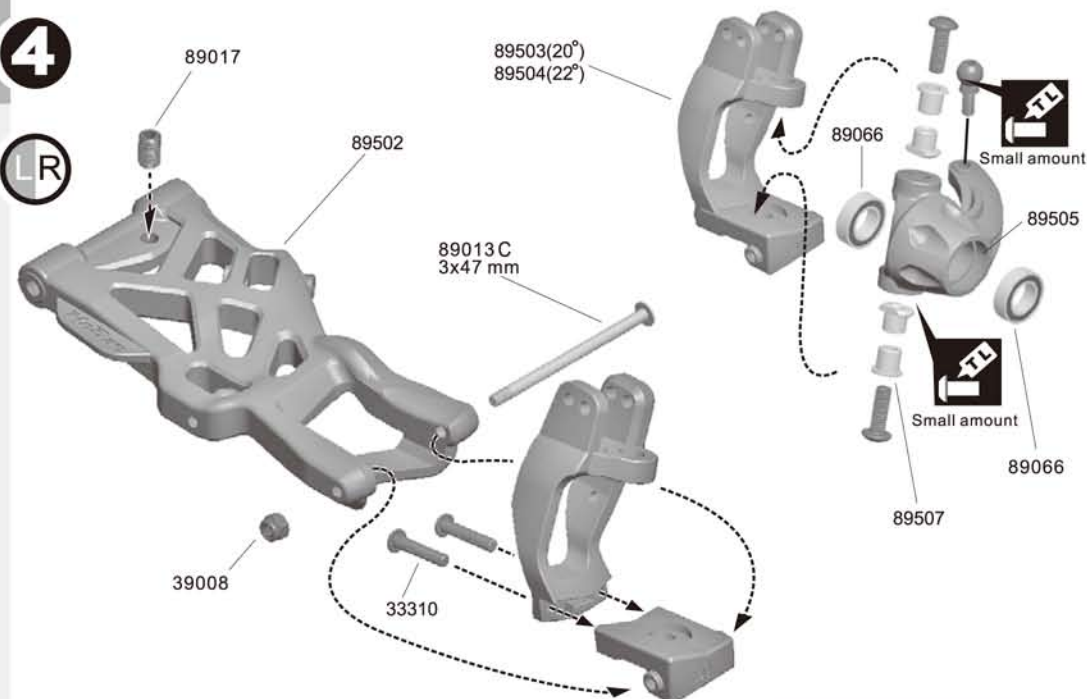


Assembly of Front Universal Joint Shaft

 
-  38505
5x5mm
Set screw x2
-  87027H
Wheel hub set x2
-  87027H
2.5x16.8mm x2
Pin

5

LR

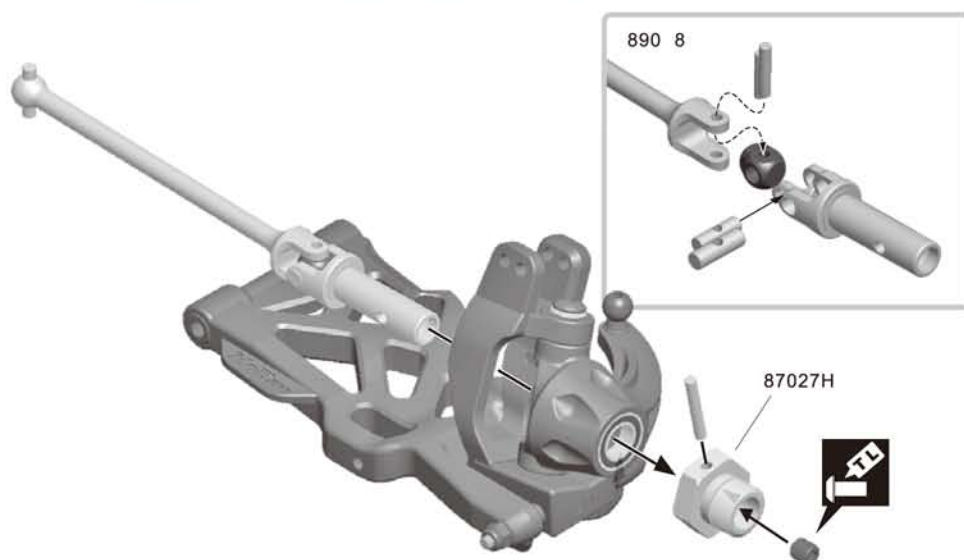

 Assembly of Front Lower Arm Holder for FR





35410
4x10mm x2
Screws

6

89007 (Plastic)
Front lower arm holder



 89030 (Alum)
Front lower arm holder

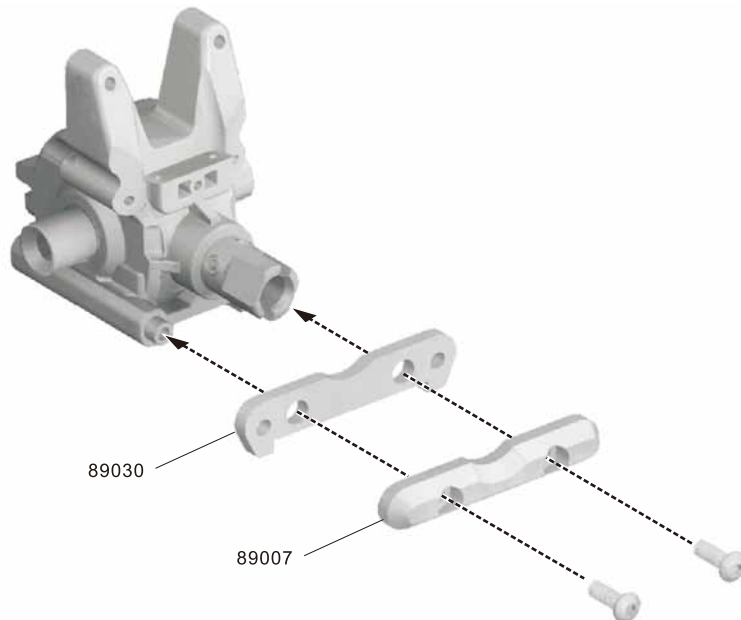


Assembly of Front Lower Arm Holder for FF


7

LR

 88002
4x47mm x2
Screws



89014
4x66mm x2
Shaft

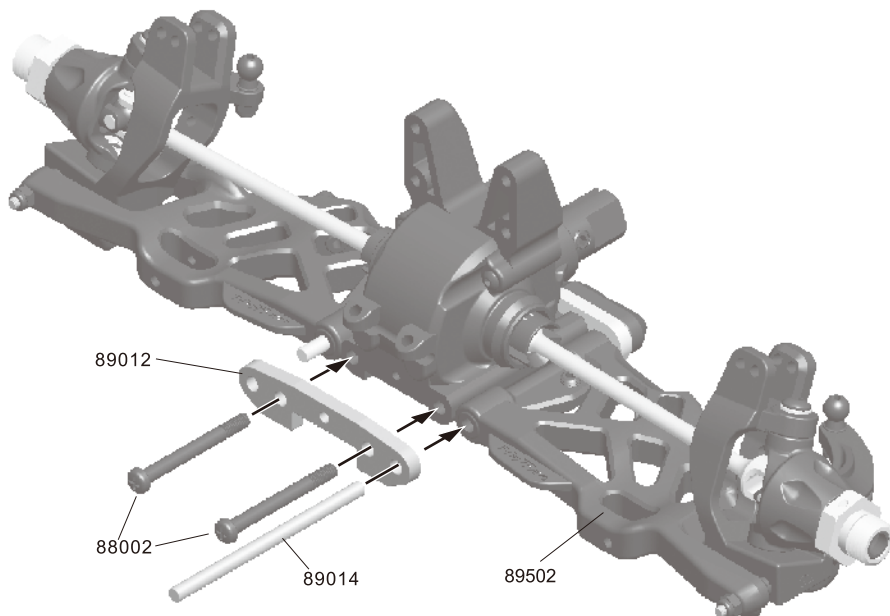

Assembly of Front Stabilizer



89022
3x3mm x2
Set screw



38406
4x6mm x2
Set screw



89022
5.8mm x2
Steel balls

 


89022
Pivot ball collar x2




31320
3x20mm x2
F/H Screws


8



89022
Ball end x2

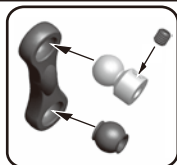

x2

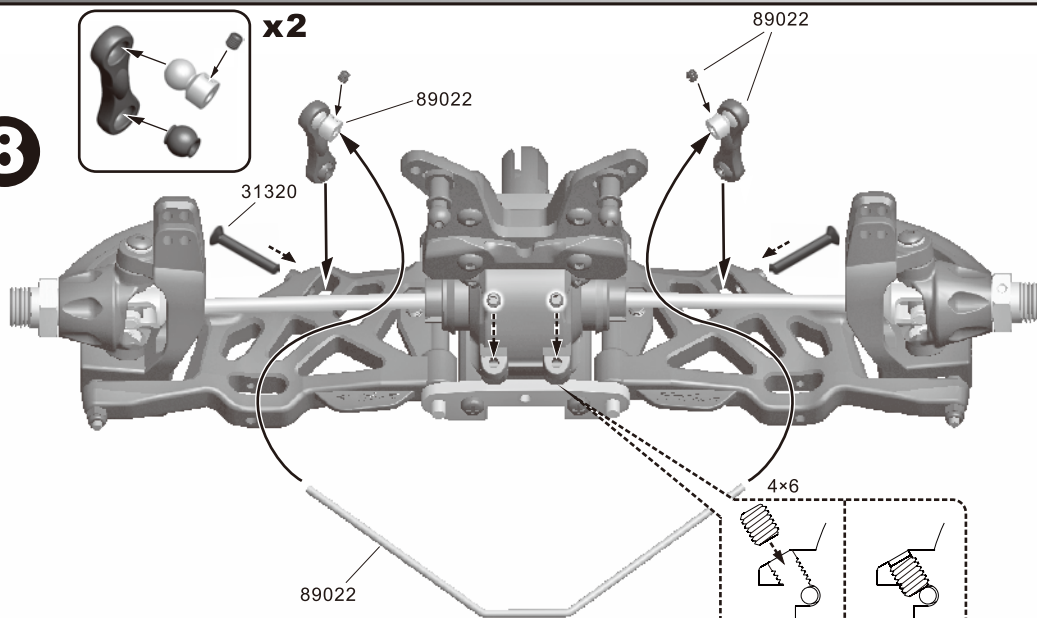


(Note: Screw in at slanted angle)

Assembly of Front Bumper



33312
3x12mm x10
B/H Screw


9

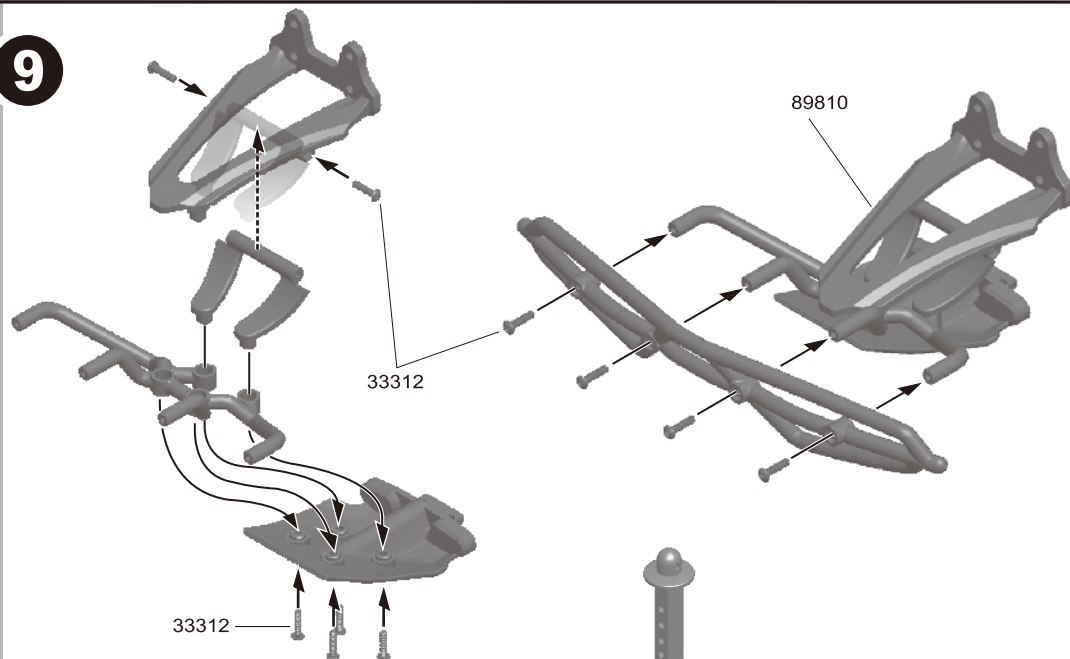

Assembly of Front Shock Tower



 
88115
3x10mm x2
ALU. collar



89107
Steel shock ball



 32316
3x16mm x2
Cap Screws



33415T
4x15mm x4
Tapping screw




33315
3x15mm x1
B/H Screw



33312
3x12mm x4
B/H Screw


10

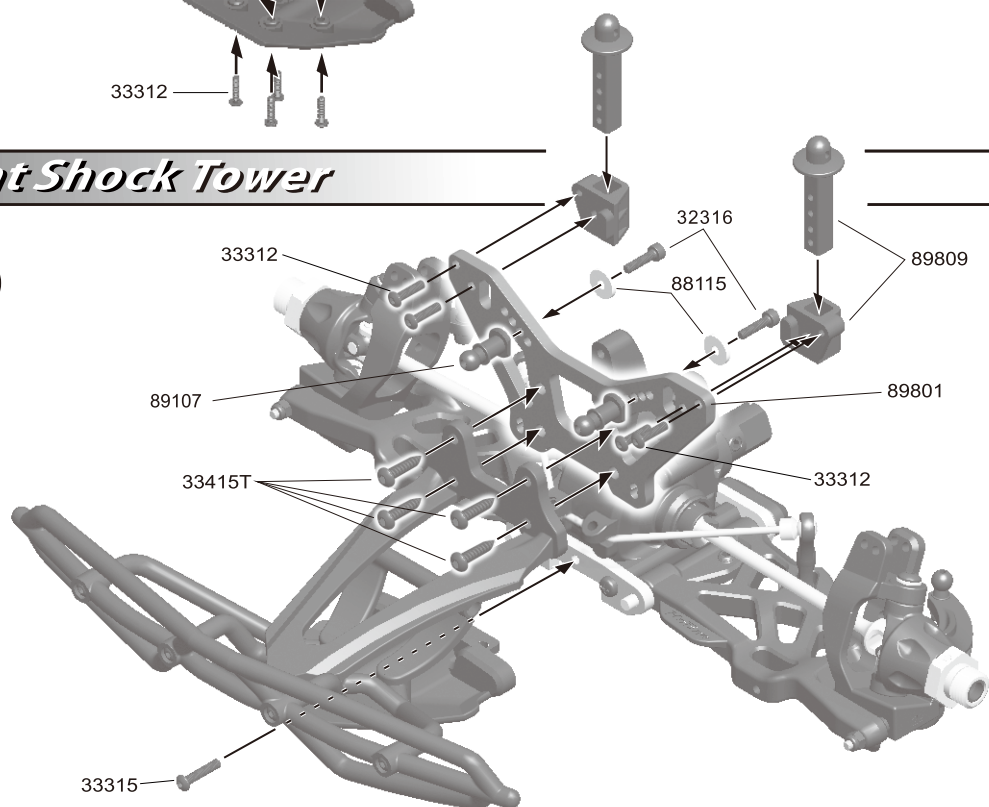

Assembly of Front Upper Suspension Arms



 89018
7.8mm x2
Steel balls




32322
3x22mm x2
Cap Screws



39008
M3 Nut x2

89019
3x42mm x2
Shaft



11

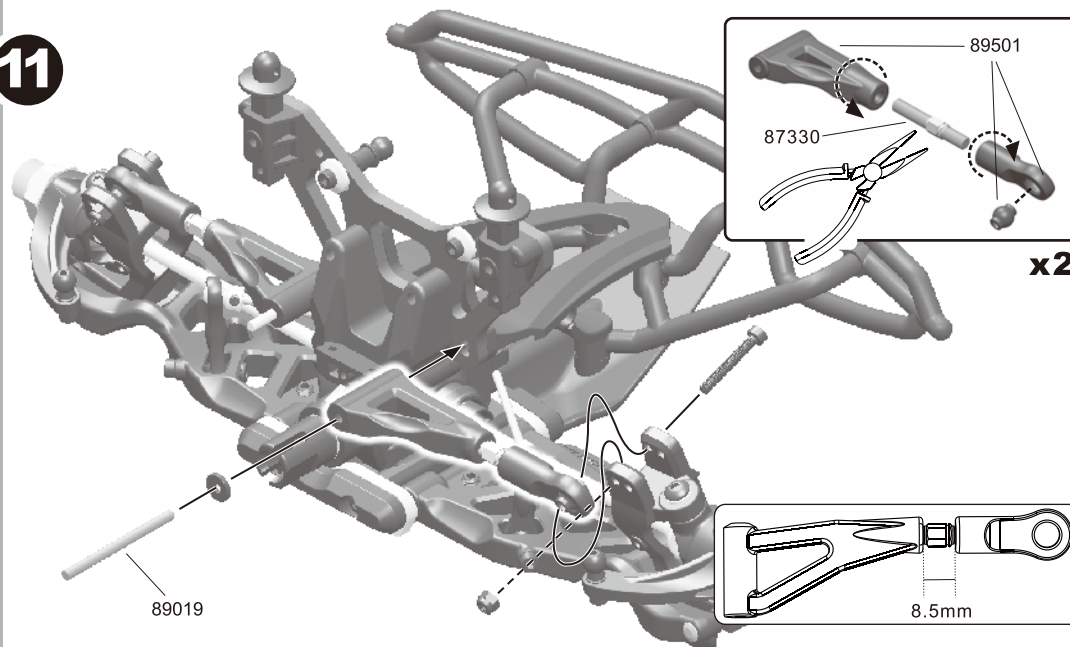

Assembly of Steering Servo Saver




12

LR

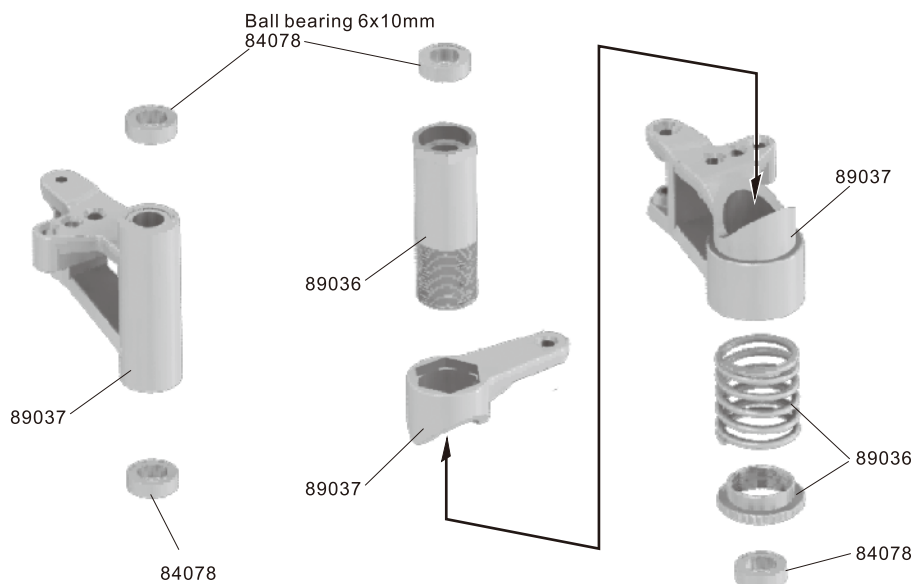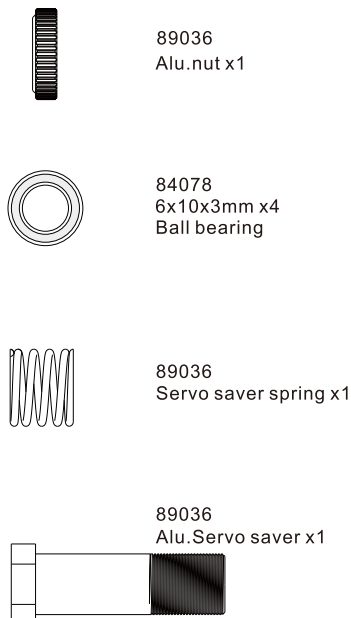



Assembly of Steering Connecting Rod & Steel Post

13

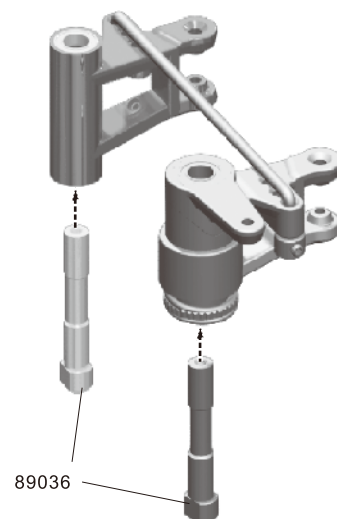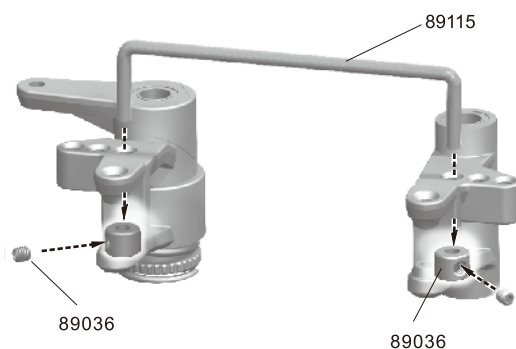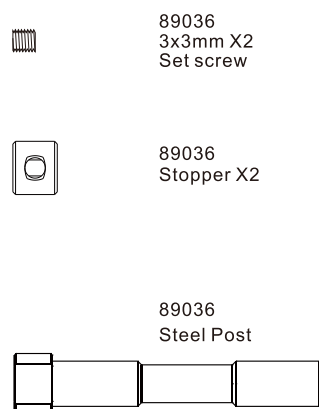

Assembly of Steering Rod

14

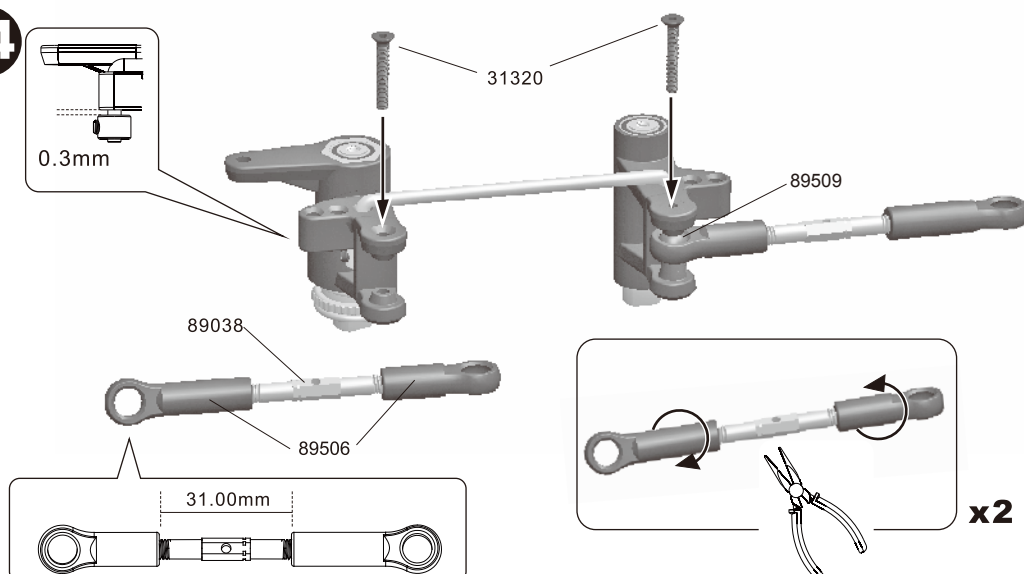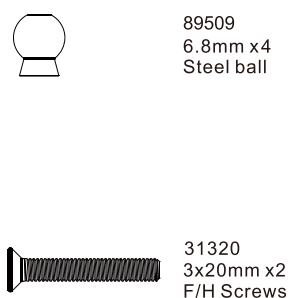

Assembly of Bulkhead Tie Brace & Steering Unit




15



89079
6.8mm x2
Kick up bushing



33312
3x12mm x4
Screws

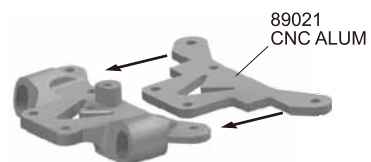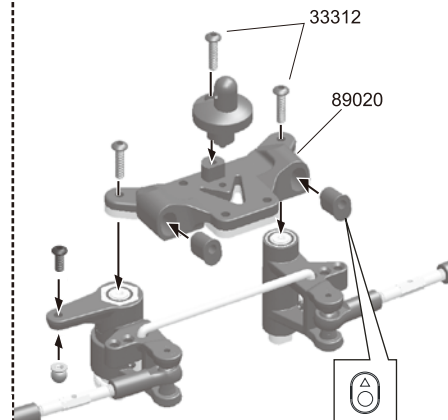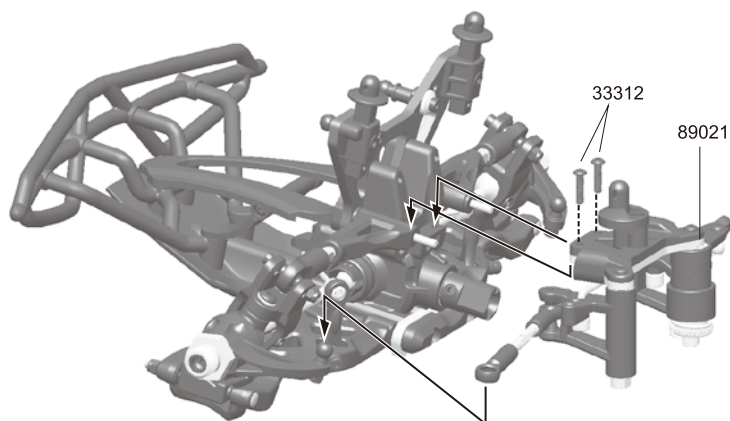

Assembly of Rear Brake System

16



89041
3x3mm x2
Set screw




224064
5x8x2.5mm x1
Ball bearing



31208
2.6x8mm x2
F/H Screw



89508
3x14.5mm x2

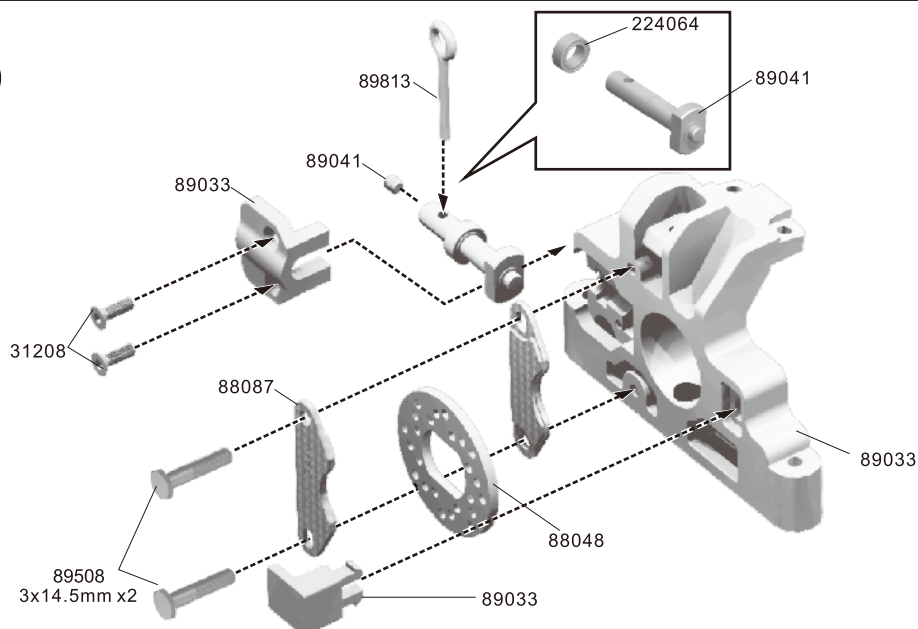


Assembly of Rear Brake Disc Mount


17



 
33312
3x12mm x2
Screws




89033

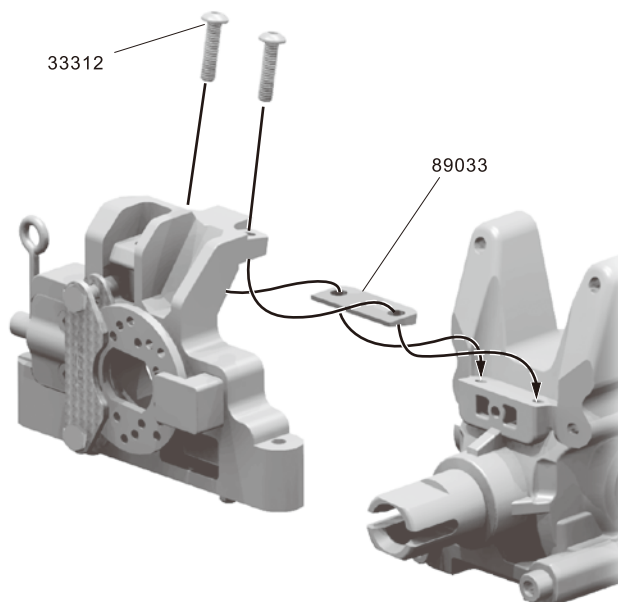


Assembly of Rear Upper Suspension Arm

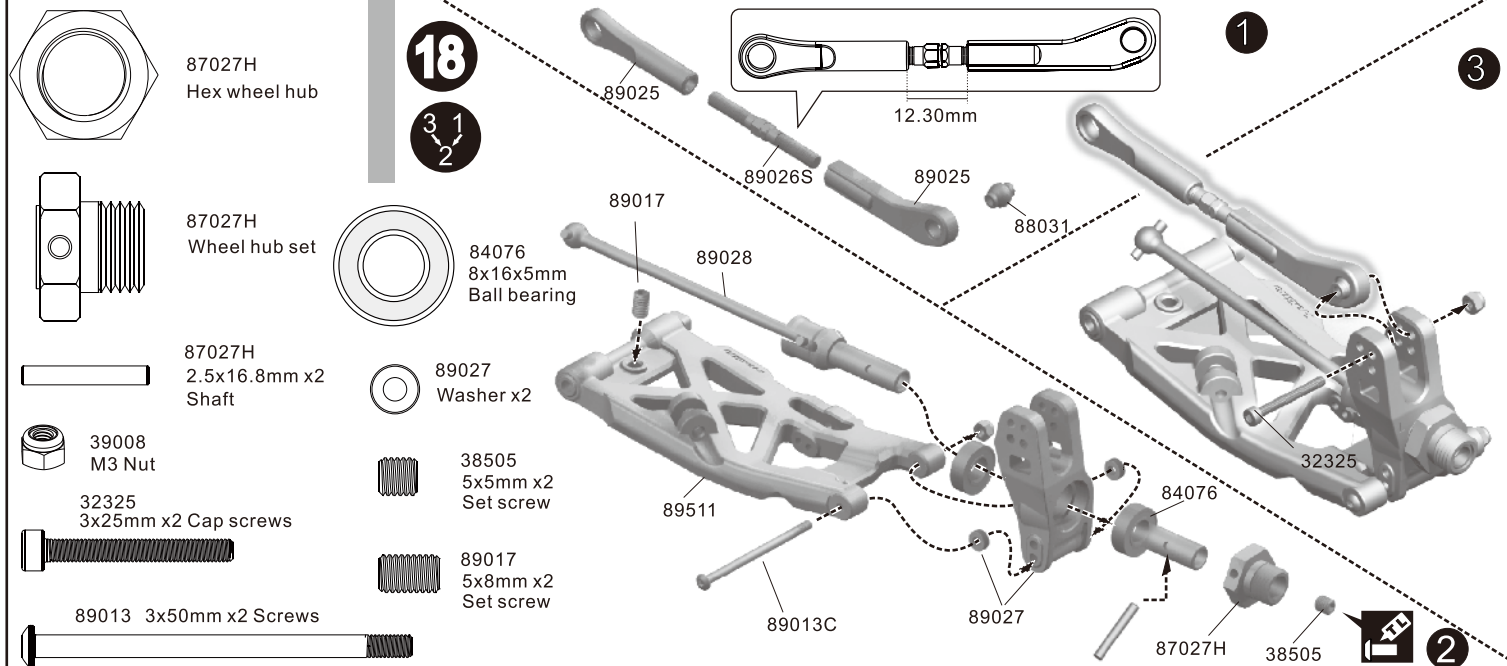


Assembly of Rear Suspension Arms

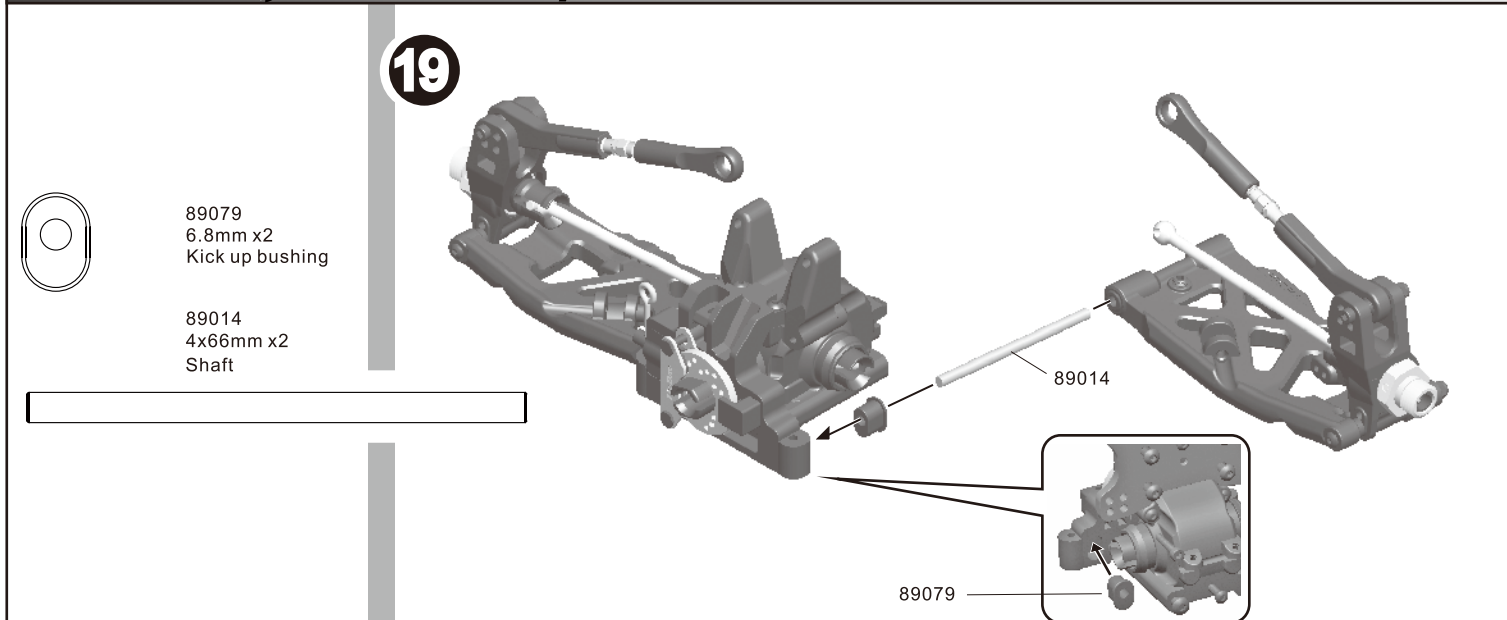

Assembly of Rear Lower Arm Holder

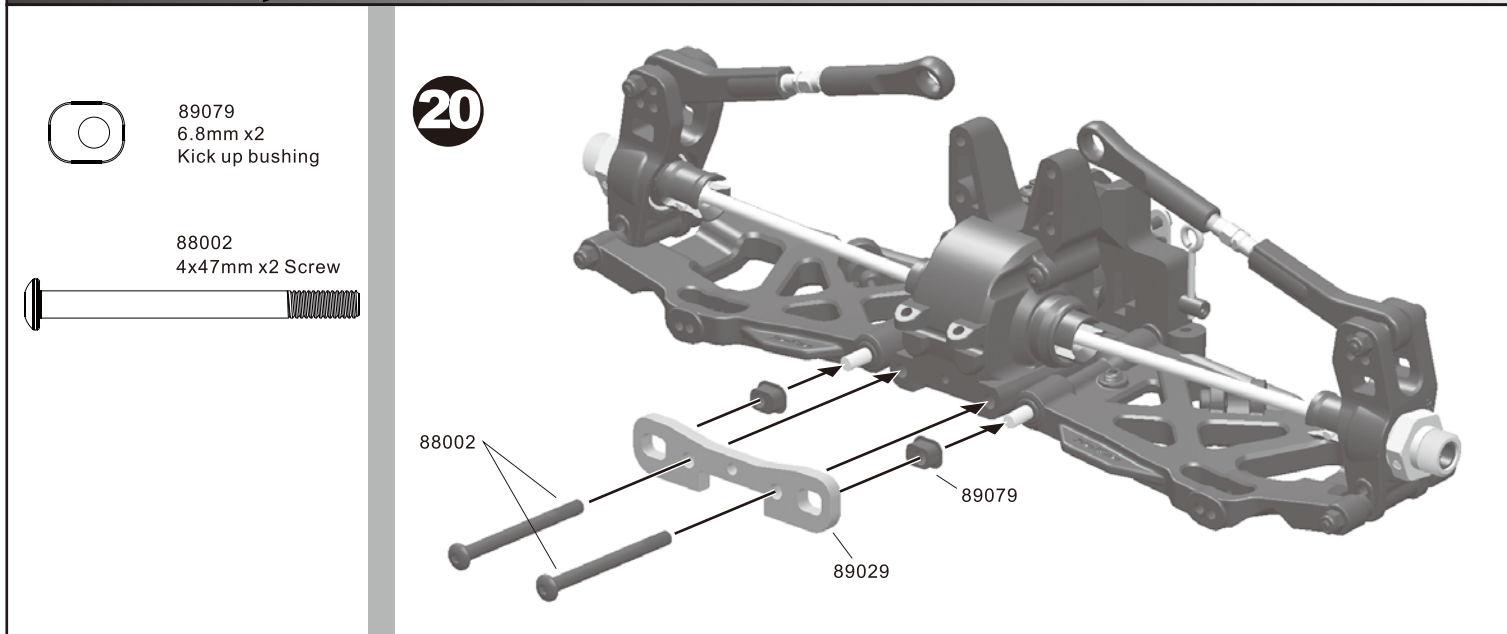


Assembly of Rear Stabilizer

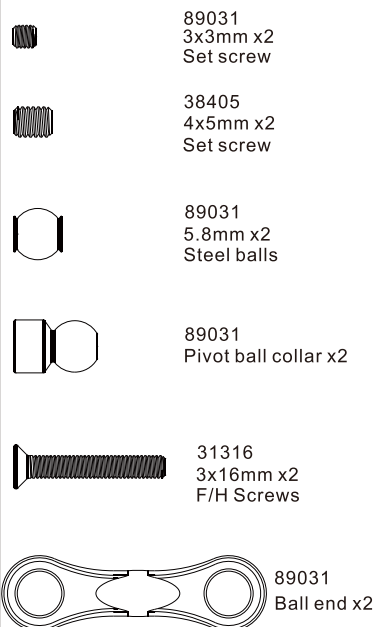


21


LR

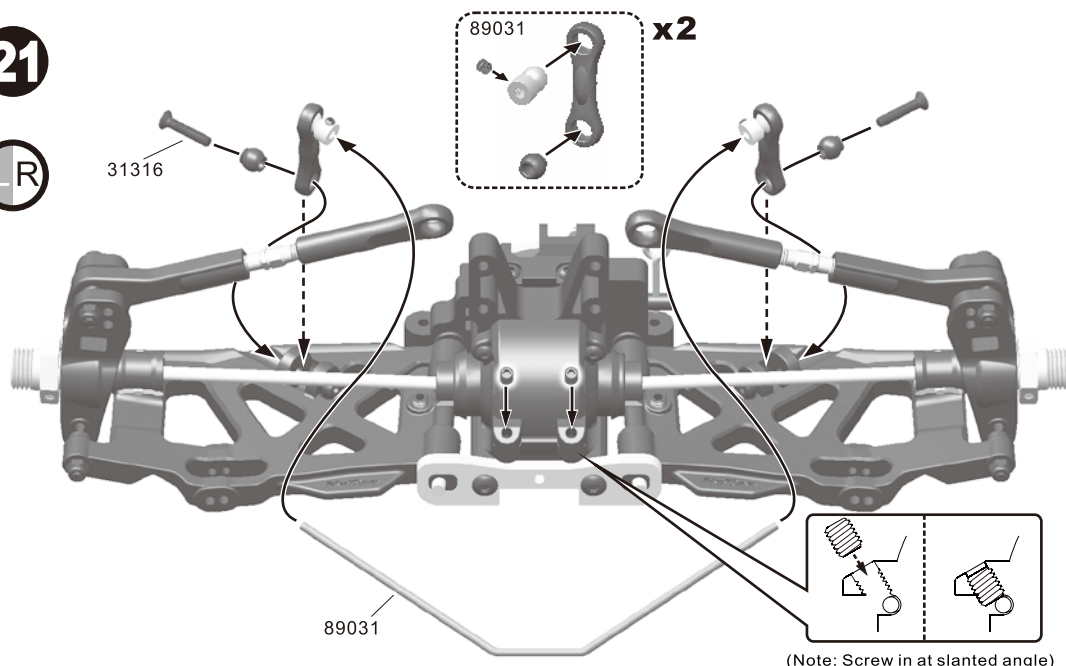


Assembly of Rear Bumper

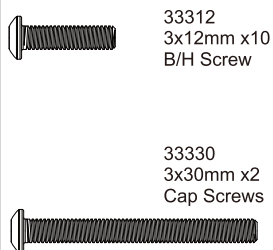


22

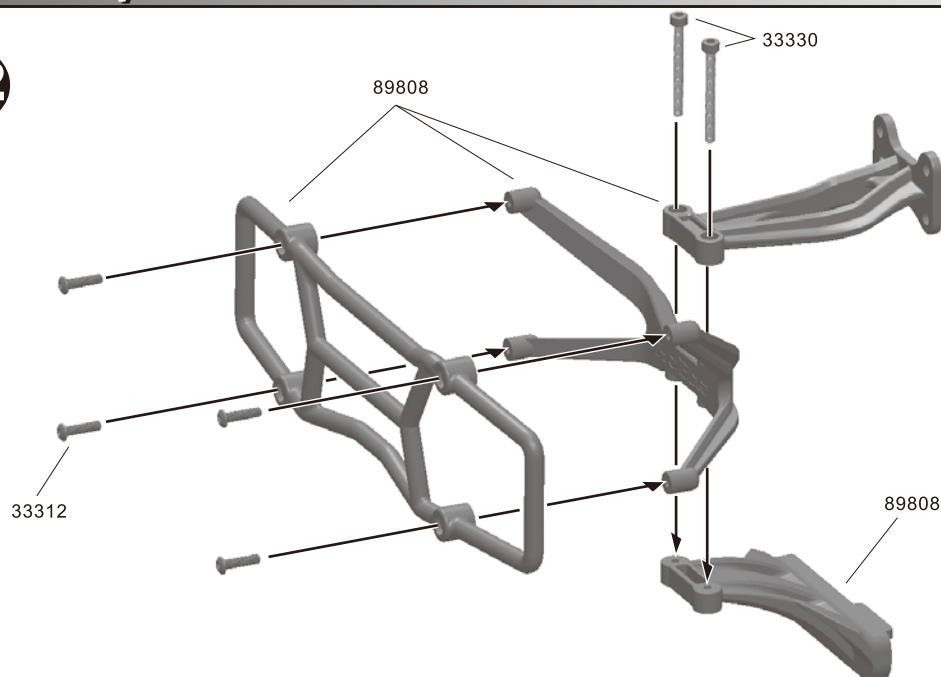

Assembly of Rear Shock Tower & Rear Bumper

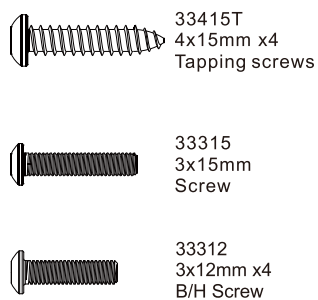


23

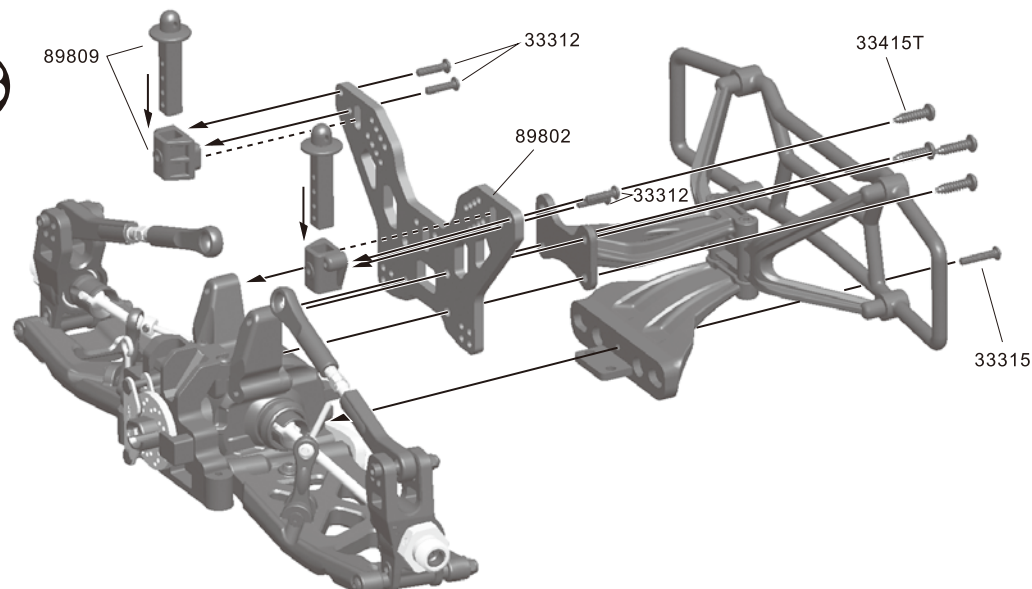

Assembly of Rear Upper Suspension Arm & Ignitor Extension



 88115
3x10mm x2
ALU. Collar



89107
Steel shock ball x2




32316
3x16mm x2
Cap screws



33315
3x15mm
Screw

24

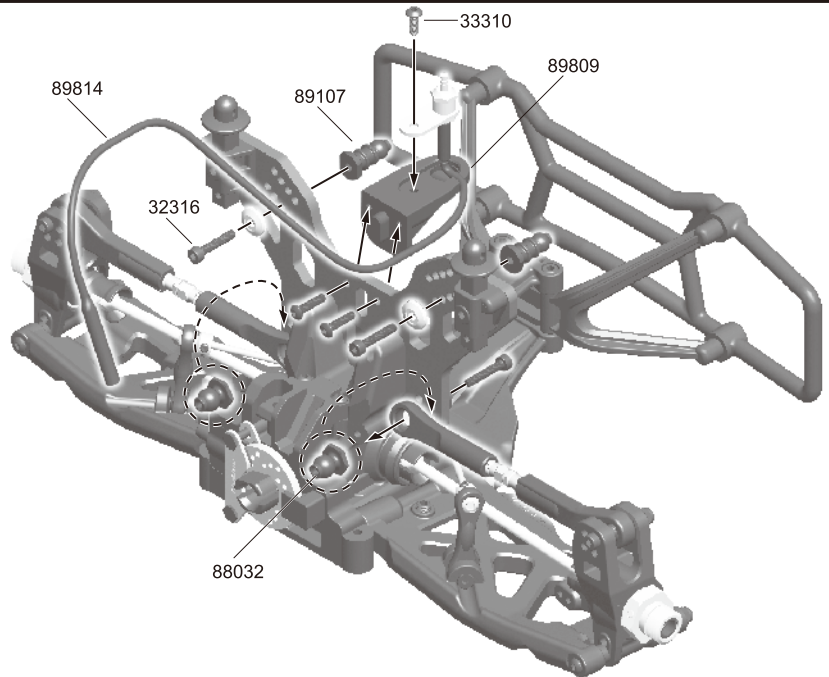


Assembly of Center Differential Mount



38303
3x3mm
Set screws



 87051B
5x8x2.5mm x2
Flange bearing



87052
3x16.5mm x2
Hex head Screws



31316
3x16mm x1
F/H Screws




31320
3x20mm x3
F/H Screws



88087
Brake pad x2


25

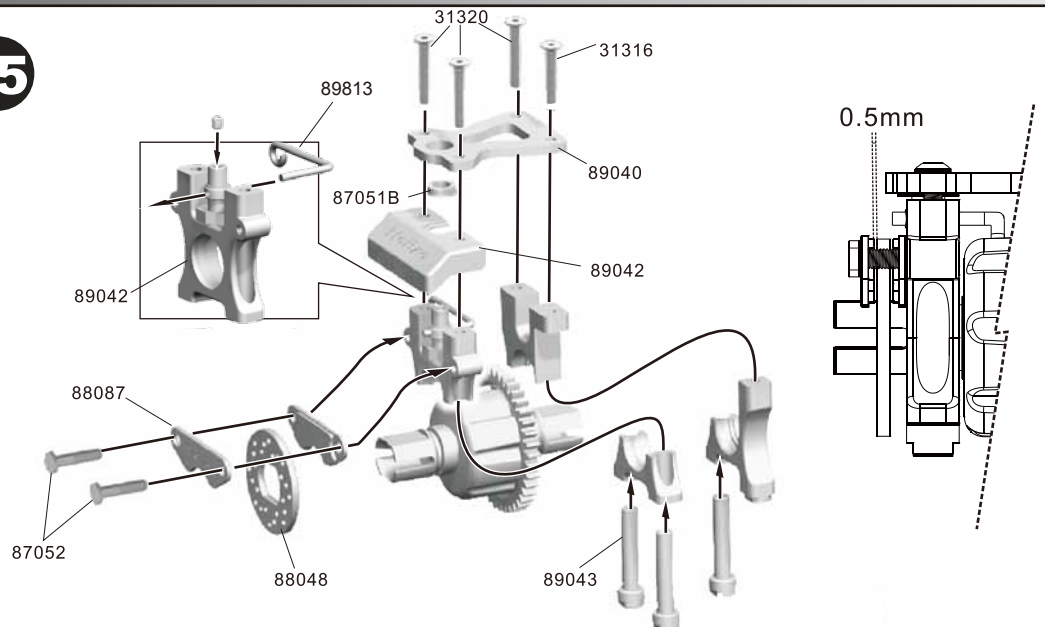


Assembly of Center Drive Shaft



 31410
4x10mm x4
F/H Screws



31416
4x16mm x1
F/H Screw

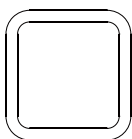


89071
Gasket x2



31406
4x6mm x1
F/H Screws

26

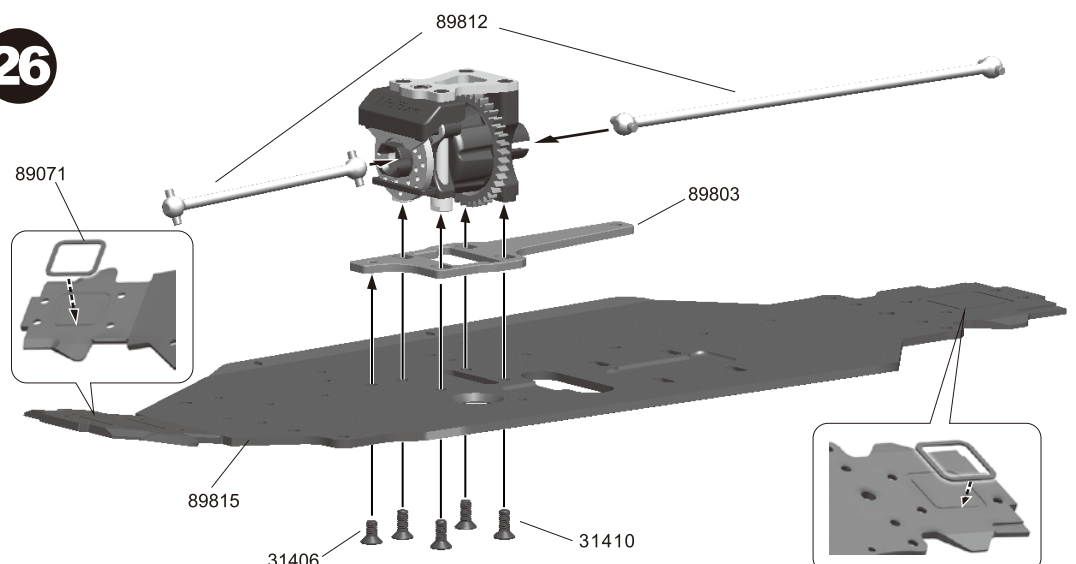

Assembly of Front Gearbox and Suspension onto Chassis


27



31410
4x10mm x2
F/H Screws



31414
4x14mm x10
F/H Screws

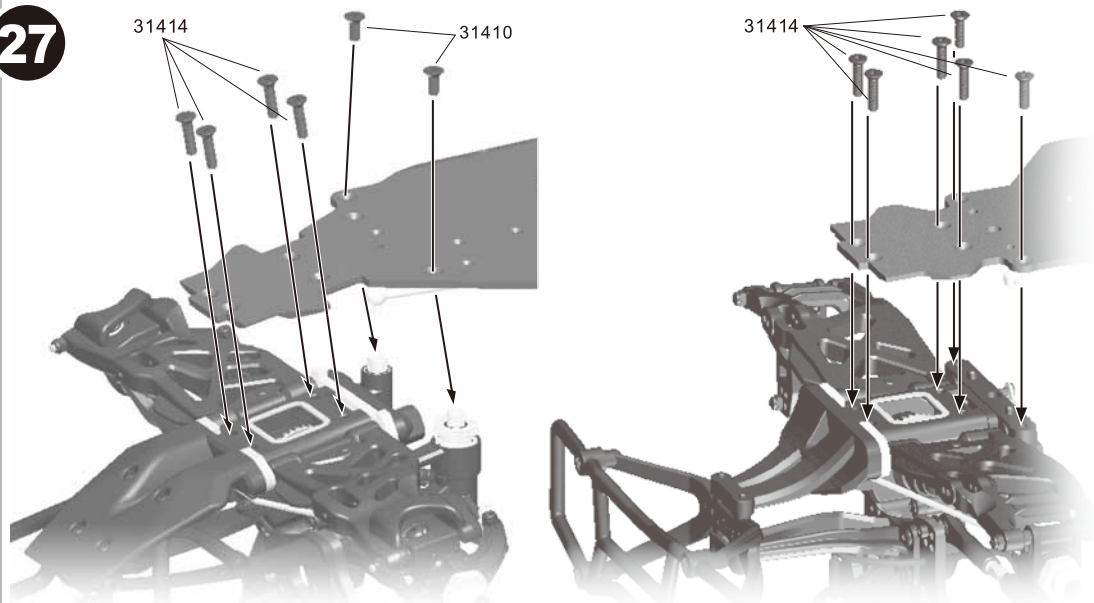

Assembly of Fuel Tank

 
28



33308
3x8mm x1
Screw




33312
3x12mm x10
B/H Screw



33312T
3x12mm x2
Screw




87398
3x12mm x2
Oring

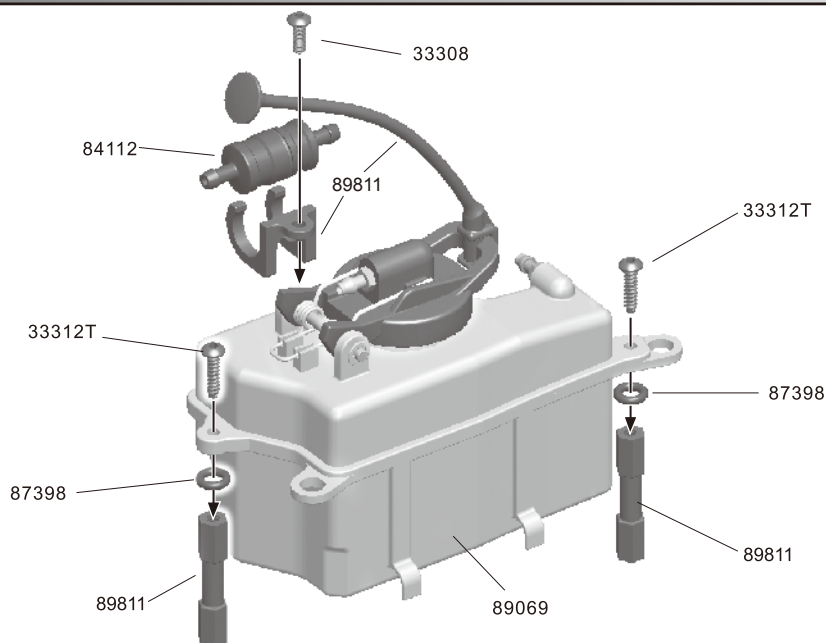

Assembly of Fuel Tank Post

 
29



89811 x3



33315
3x15mm x1
Screw

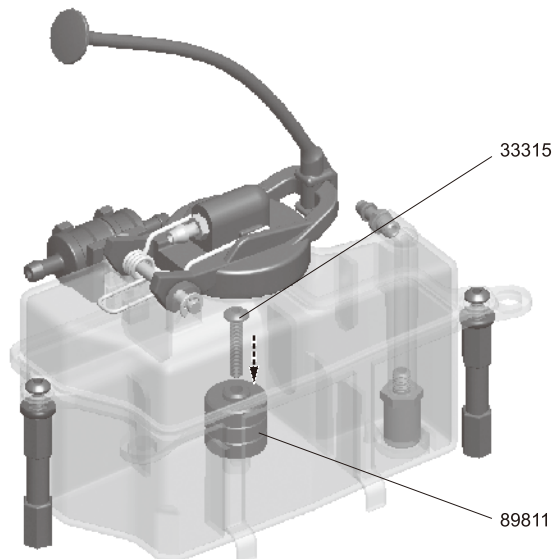


Assembly of Fuel Tank onto Chassis

30



31312T
3x12mm x2
F/H Screws

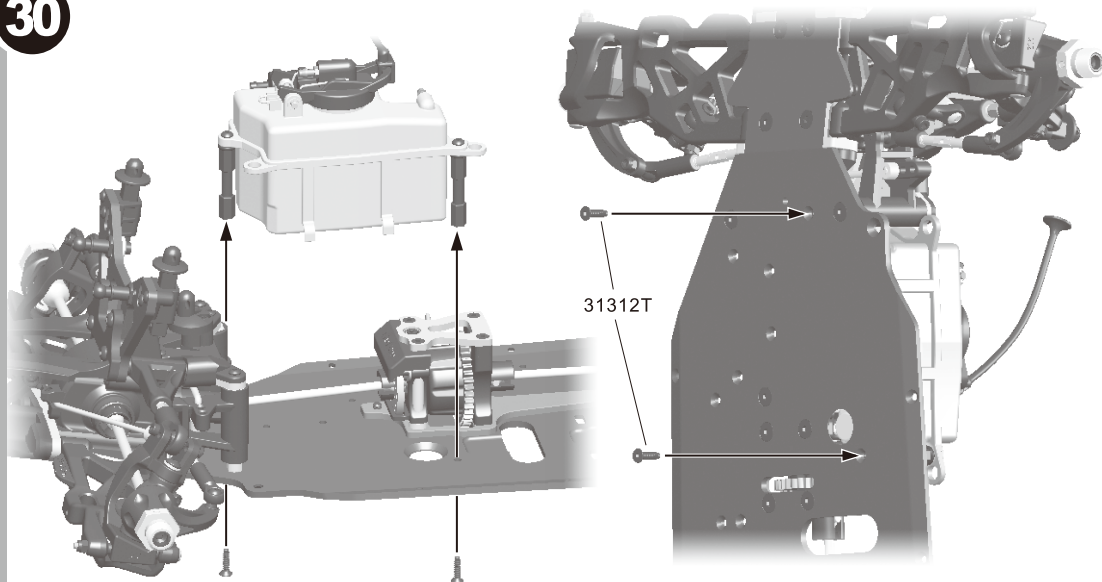

Assembly of Throttle & Brake Servo Linkage

31



38303
3x3mm
Set Screw



33308
3x8mm x6
Screws




89813
5x8mm x4
Ball



89054
3x10mm
Set Screw



89054
Servo Rod

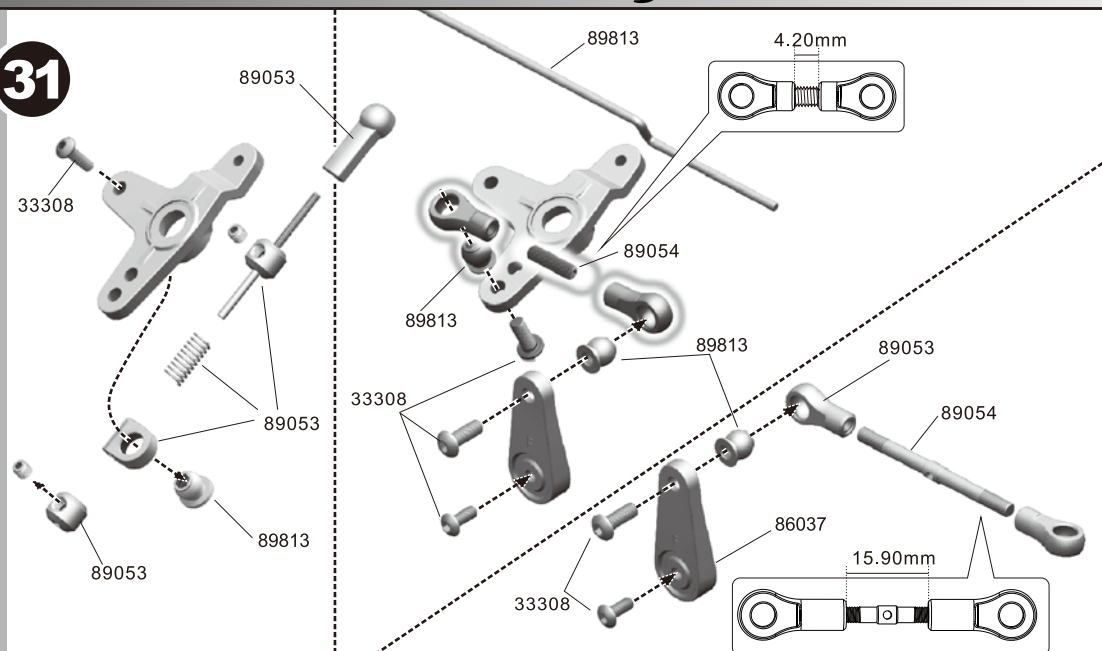

Assembly of Steering Servo & Radio Tray

 
32



31306
3x6mm x1
F/H Screw



33310
3x10mm x8
Screws




33312-T
3x12mm x2
Screws



224210
3x12mm x1
ALU. washer



84078
6x10x3mm
Ball bearing

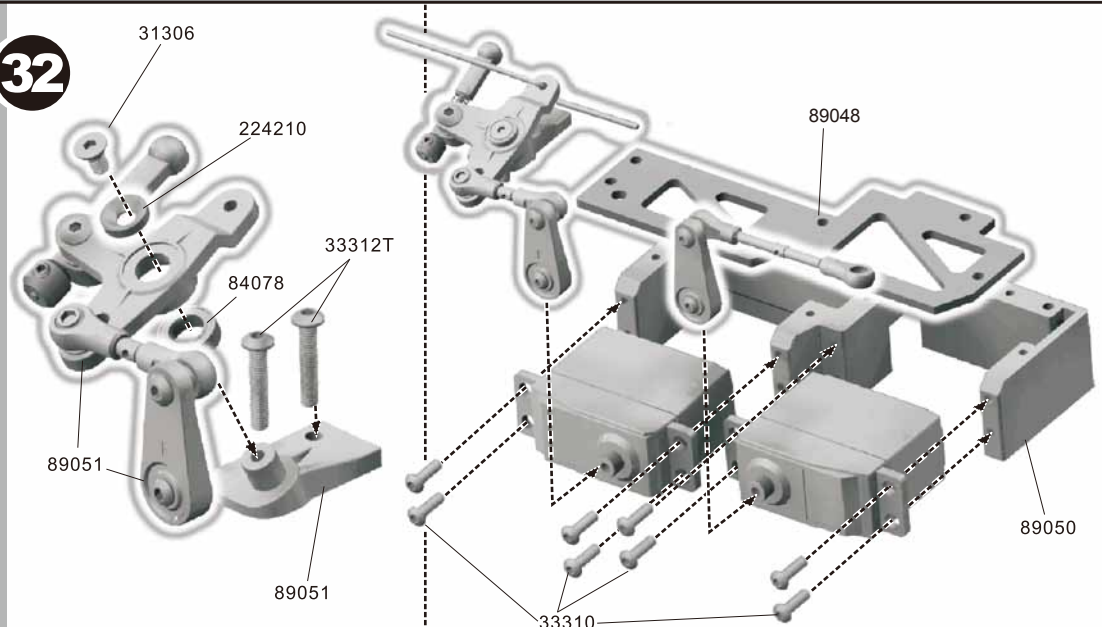


Assembly of Transponder Holder & Front Brace



33



 89052
89053
5x8mm x5
Ball



33312T
3x12mm x4
Screws

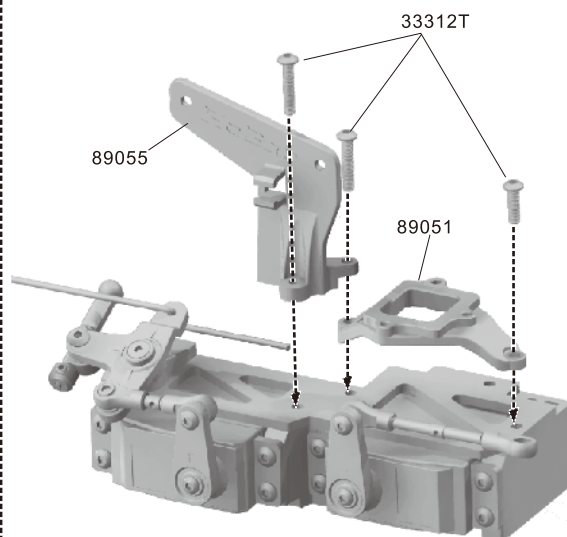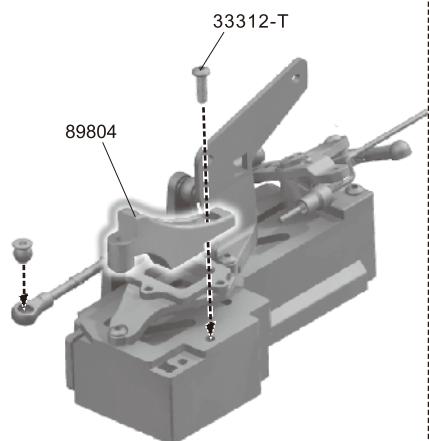

Assembly of Radio Tray onto Chassis

34



2.7x6.5x0.6mm
Washer



31312
3x12mm x8
F/H Screws



31416
4x16mm x1
F/H Screw





31420
4x20mm x1
F/H Screw



33315
3x15mm x1
Screw

31312

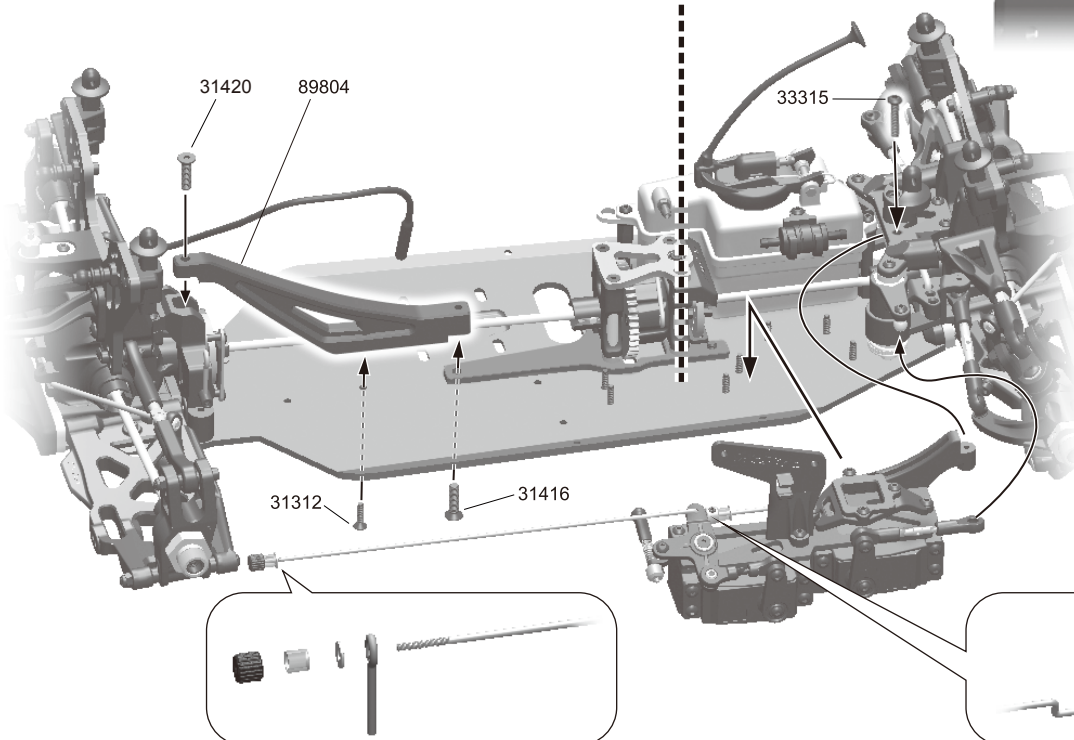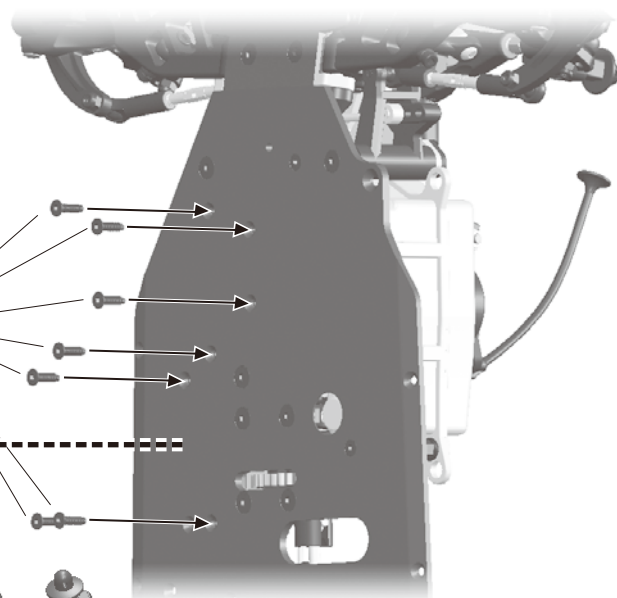

Assembly of Muffler Mount




31410
4x10mm
F/H Screws



38404
4x4mm
Set screw

35

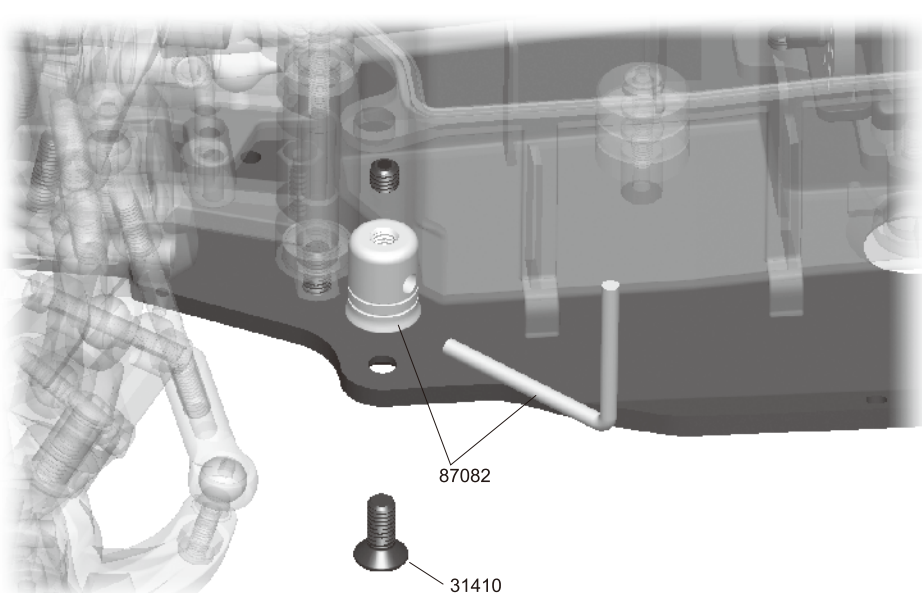

Assembly of Engine Mount & Flywheel



32312
3x12mm x3
Cap Screws




33312
3x12mm x1
Screw



SW 3 NI
Spring Washer x4




224044
Clutch nut

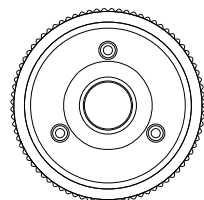

84057
Flywheel

36

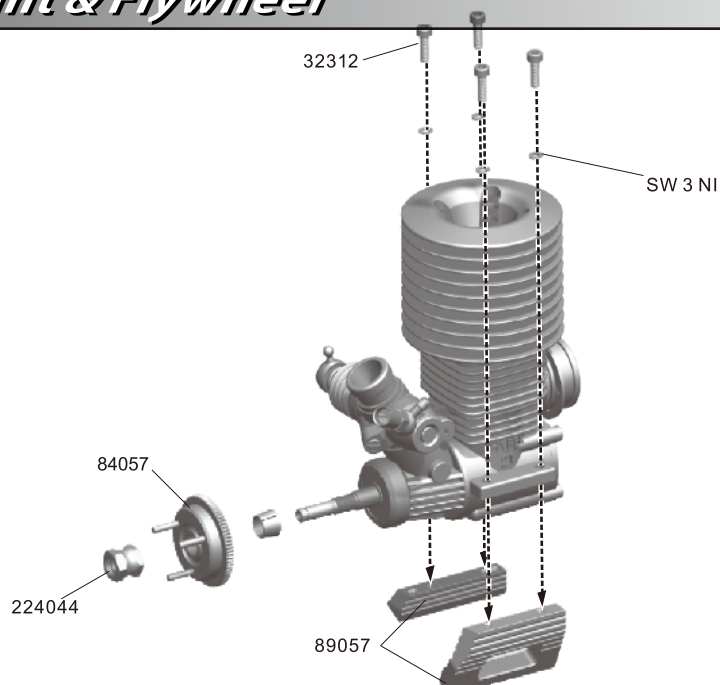

Assembly of Clutch Shoes




84052
Clutch shoe x3



84053
Clutch spring x3

37

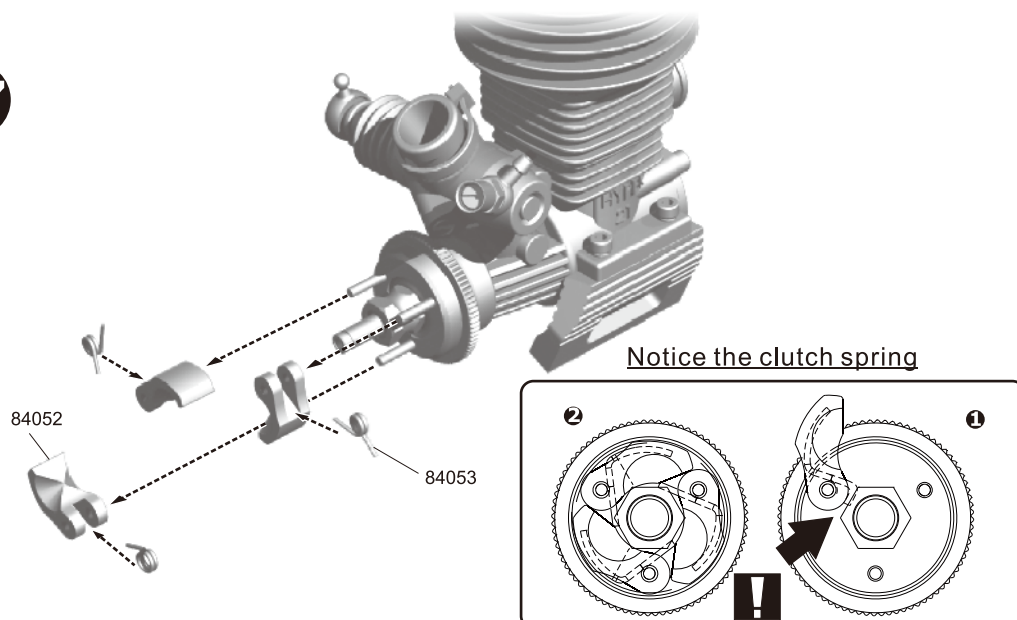

Assembly of Clutch Bell Gear



32308
3x8mm x1
Cap screw




84187W
3.1x6mm x1
Washer



84187W
5x8mm x5
Washer




84077
5x10mm x2
Bearing

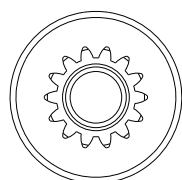


84055
Clutch bell-14T x1

38

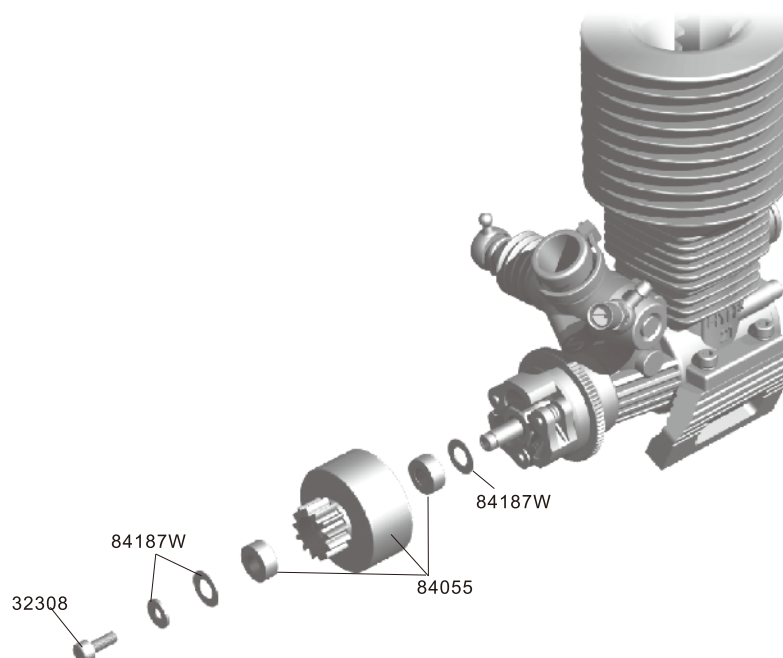


Assembly of Air Filter

39

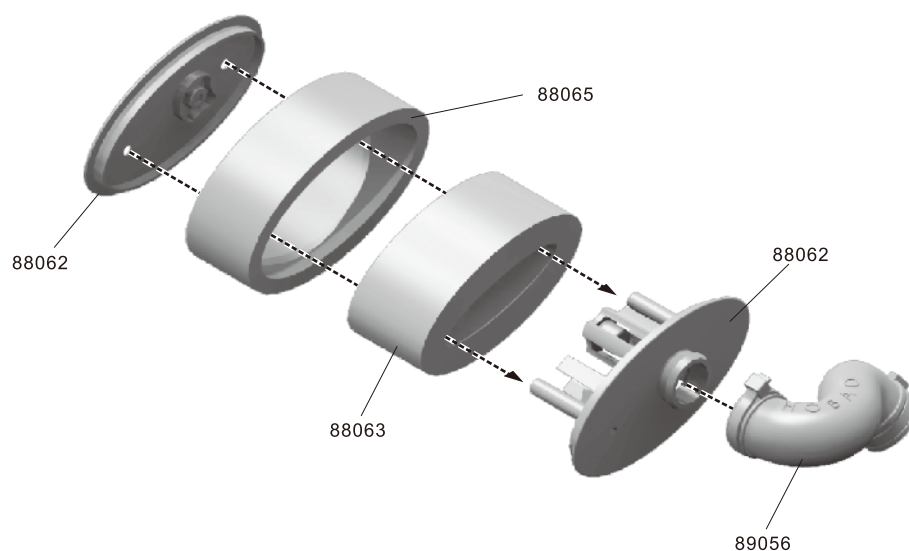


Assembly of Manifold & Muffler

40

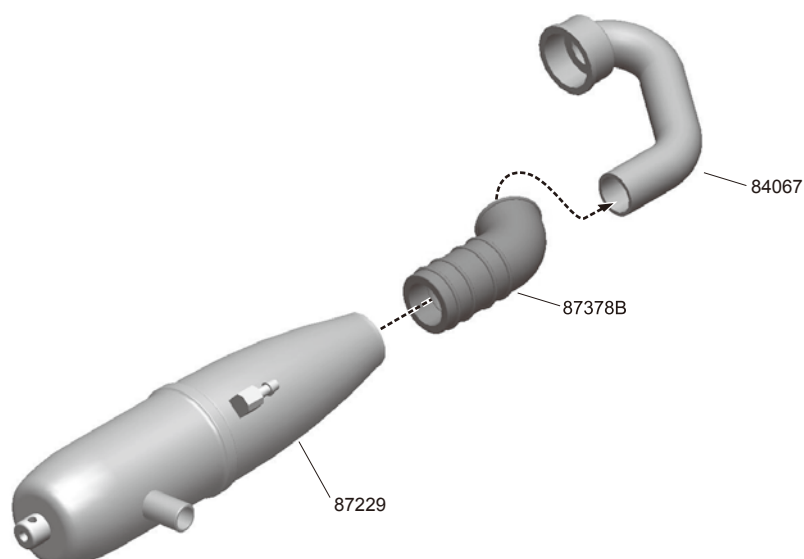

Assembly of Air Filter & Muffler onto Engine

41

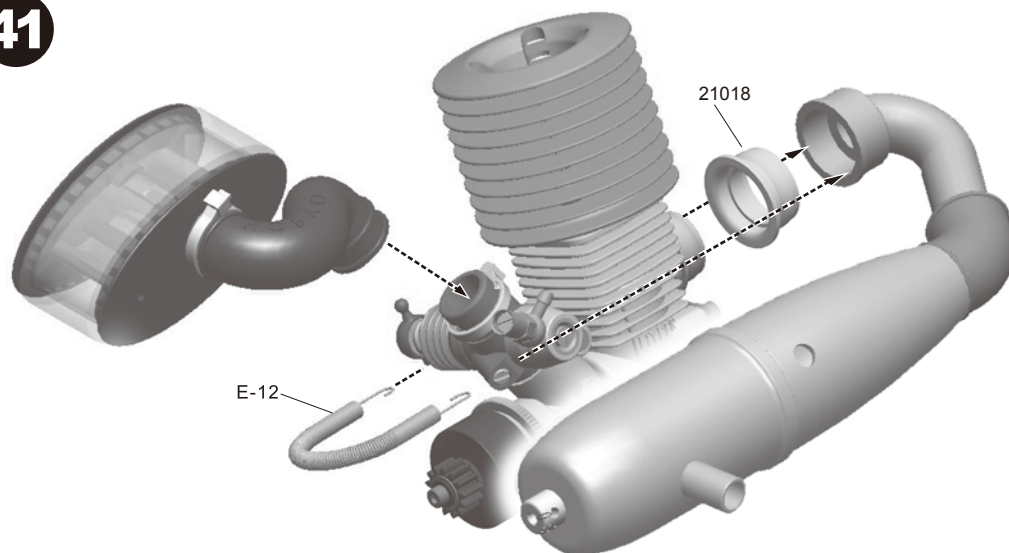

Assembly of Engine onto Chassis





42



33312T
3x12mm x2
Screws



39408
4x8mm x4
I- Screws x4

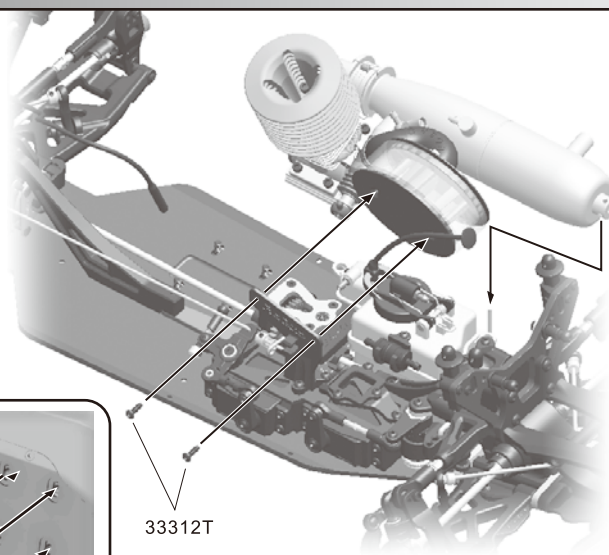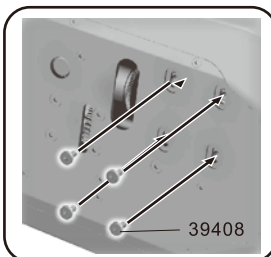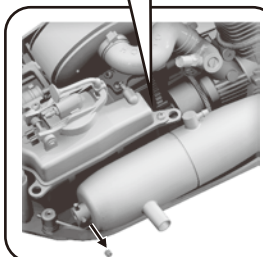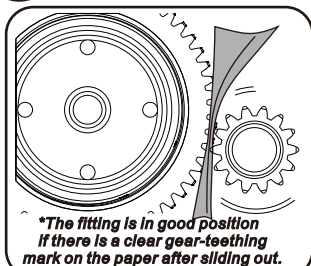


Assembly of Receiver Box




43



 31312T
3x12mm x3
F/H Screws




33310T
3x10mm x5
TP screws

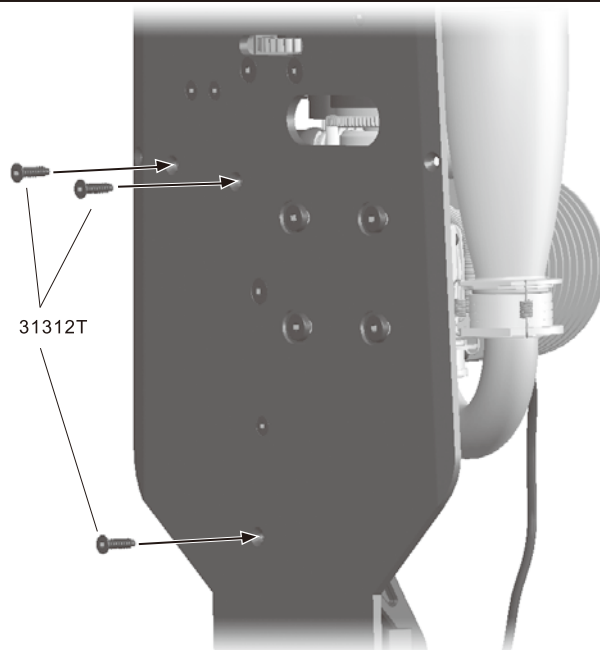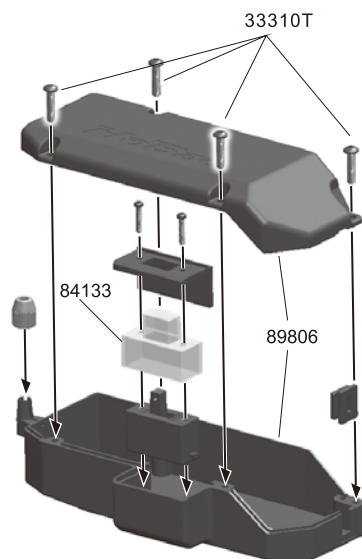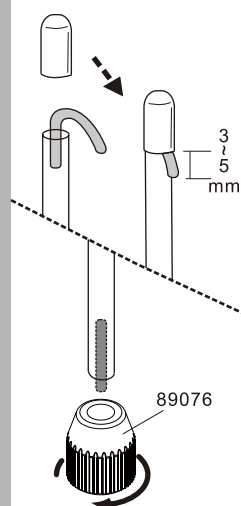

Assembly of Fuel Tube


44

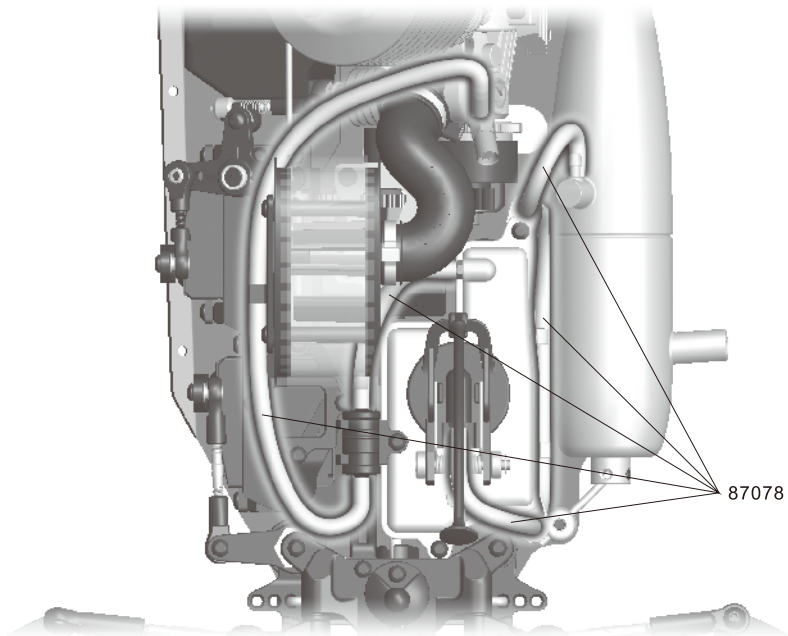

Assembly of Front Shocks

45


-  2.7x6.5x0.5mm
Washer x2
-  O-ring x8
-  89110
Washer x8
-  89110
M-clip x6
-  87016
6.8mm
Steel ball x2

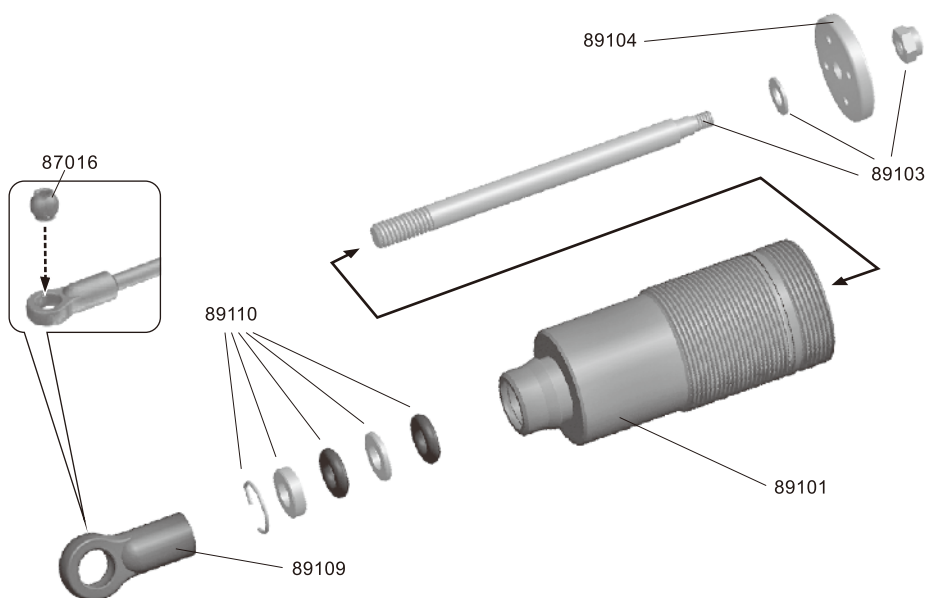

Assembly of Rear Shocks

46


-  89103
2.7x6.5x0.5mm
Washer x2
-  89110
O-ring x8
-  89110
Washer x8
-  89110
M-clip x6
-  87016
6.8mm
Steel ball x2

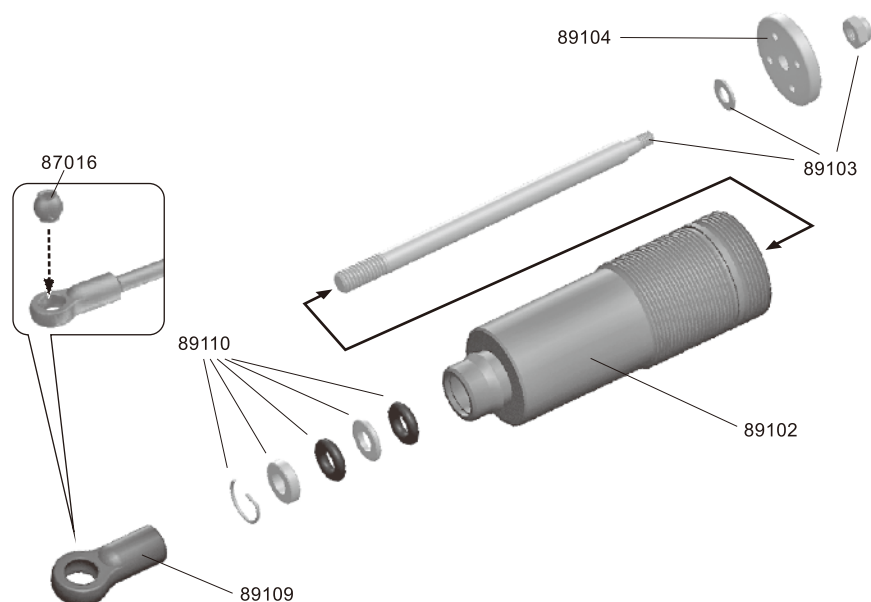


Assembly of Front and Rear Shock



 
89105
Shock Bladder x4



89109
Shock ball head x4

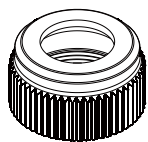

89101
Shock pro cap x4

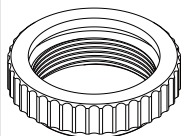

89108
Alu shock adjustable ring x4

47



89108



NO Bubbles

 

Shock Oil!

1

Pull down the piston.

2

Move the shaft up and down slowly to remove bubbles.

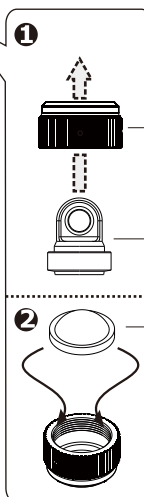

x2 SHORT FOR FRONT

x2 LONG FOR REAR



Check if piston moves smoothly

Assembly of Shock Shaft Dust Covers

48



87018

1

2

x2 SHORT FOR FRONT

 
x2 LONG FOR REAR

Assembly of Front and Rear Shock Springs

49




89109
Shock spring supporter x4



89820
Front Shock spring x2



89820
Rear Shock spring x2

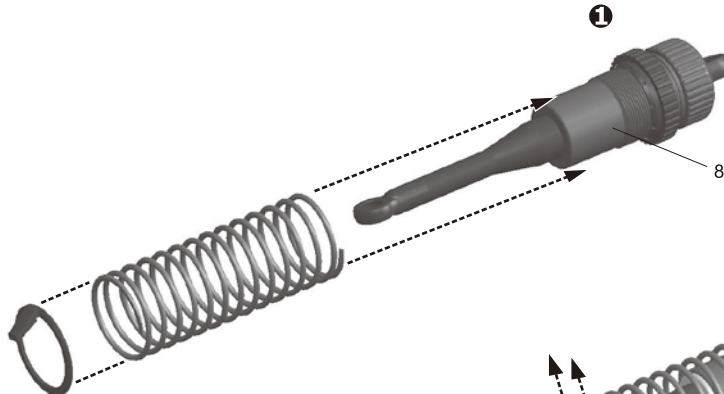


1

89821

2

x2 SHORT FOR FRONT

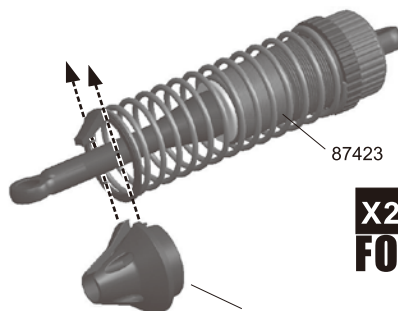

87423

x2 LONG FOR REAR

89109


Assembly of the Front Shock Absorber

50

LR



32320
3x20mm x2
Cap Screws

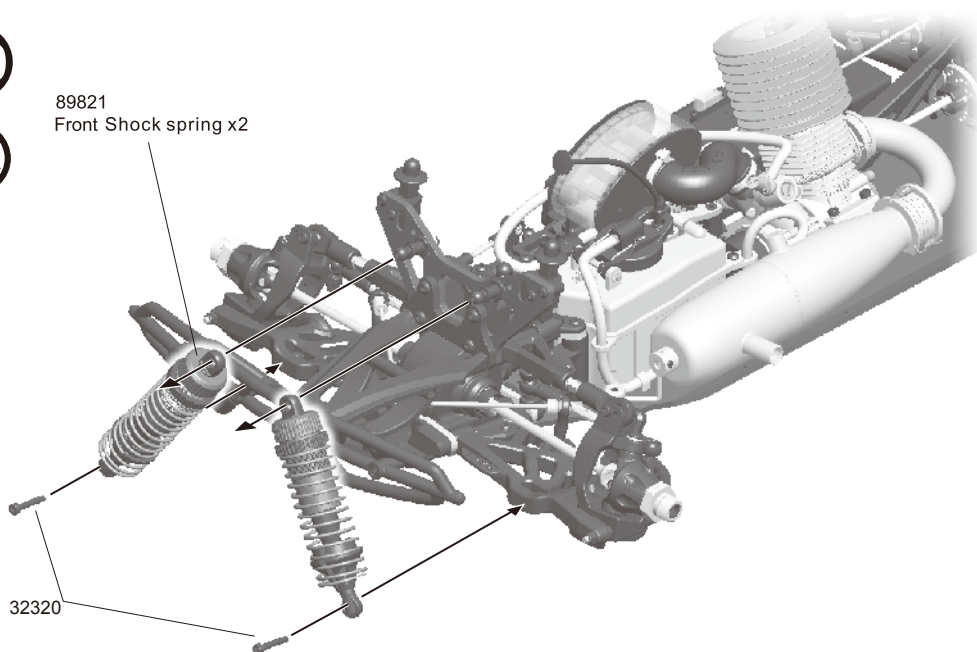


Assembly of Rear Shock Absorber

51

LR




32320
3x20mm x2
Cap Screws

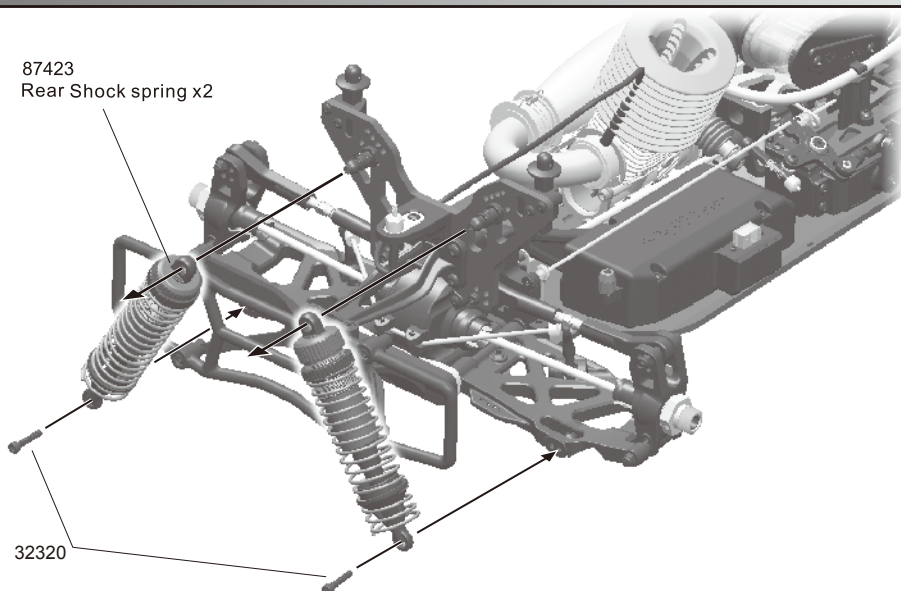


Assembly of Tires & Wheels

52

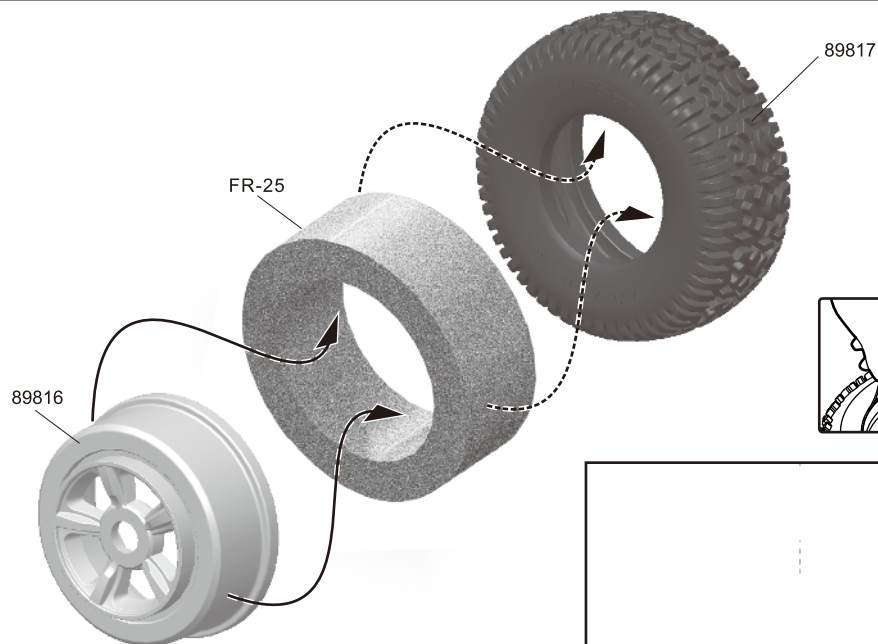


Assembly of the Tires onto Knuckles

 53




87027H

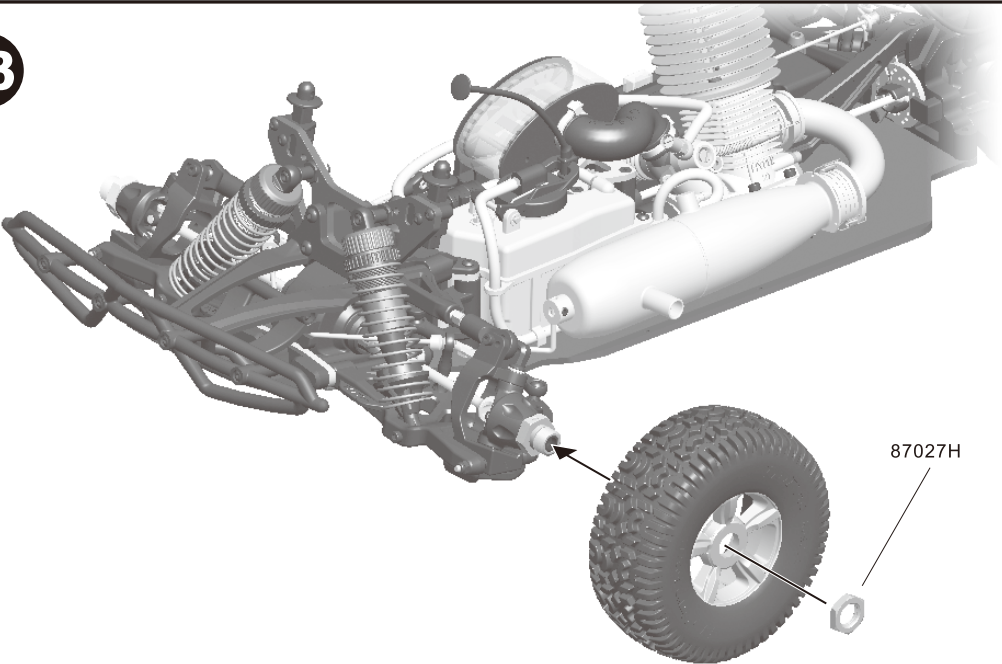


87027H

Assembly of the Tires onto Rear Hubs

 54



87027H

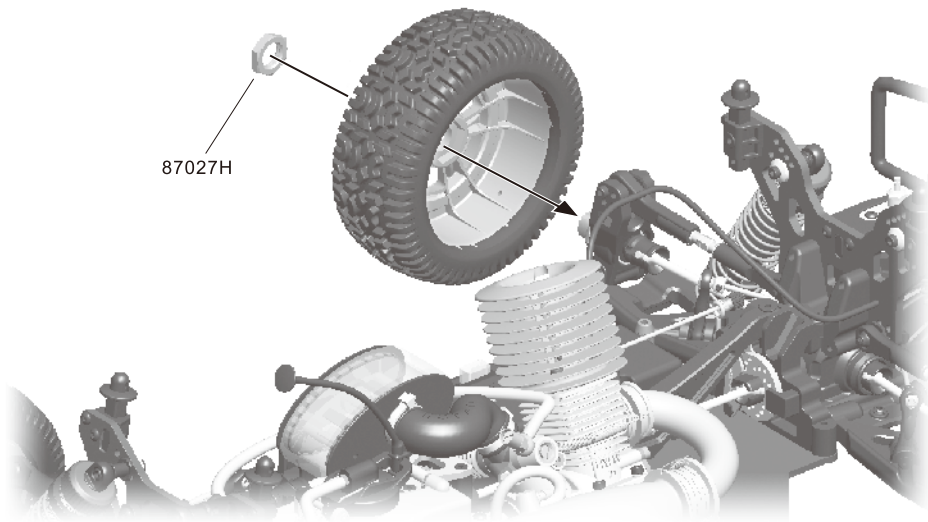

87027H

Assembly of Side Guard Unit

55




31310
3x10mm x4
F/H screws



33312
3x12mm x6
Screws



33320
3x20mm x2
F/H Screws


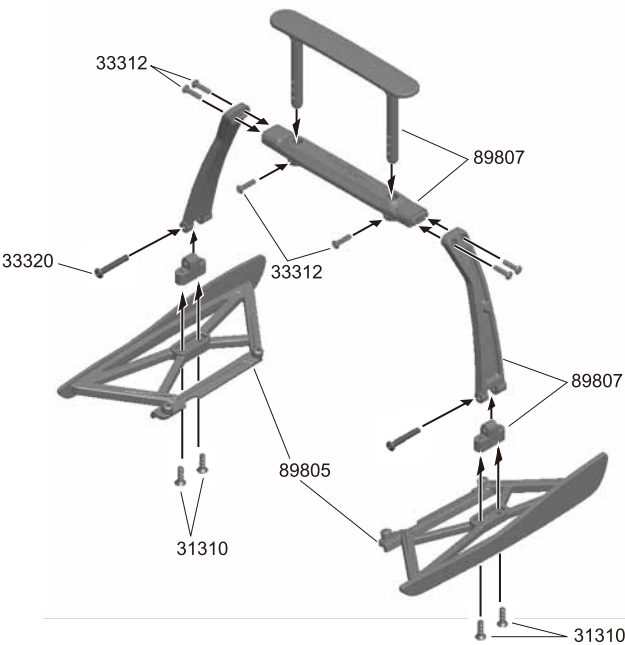


Assembly of Side Guard Unit onto Chassis




31312
3x12mm x6
F/H Screws

 56

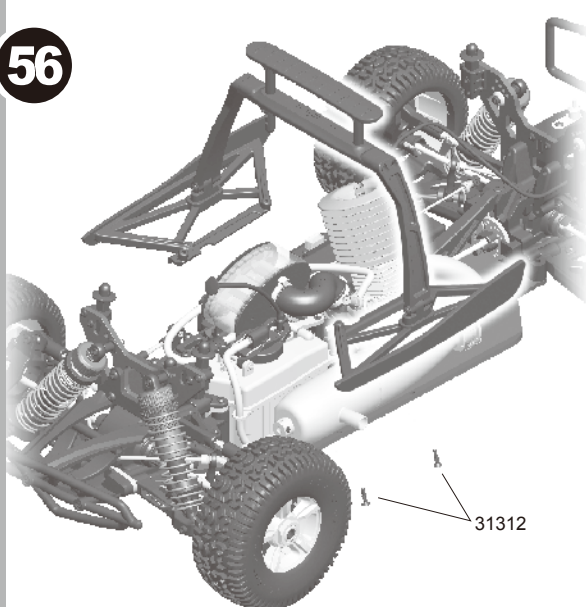


Assembly of the Body Shell Mounting


57

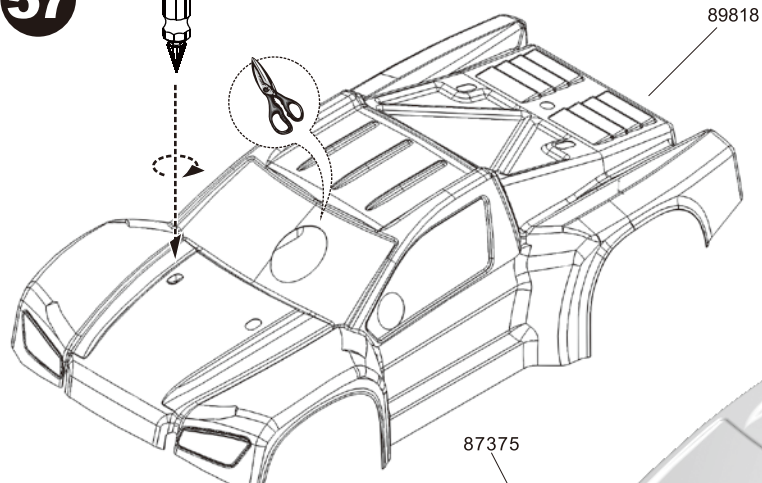


89818 : CLEAR BODY
89819 : PRINTED BODY

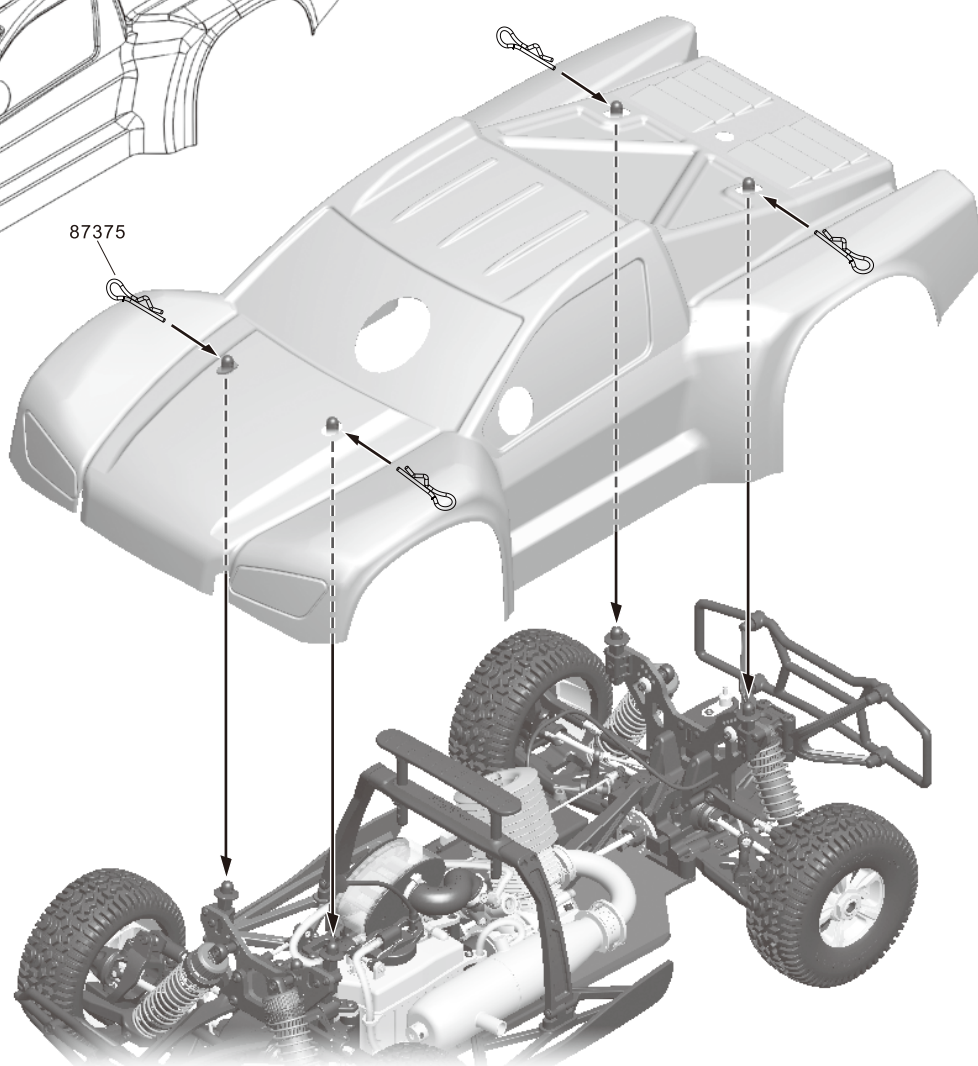

HYPER 8SC 4W

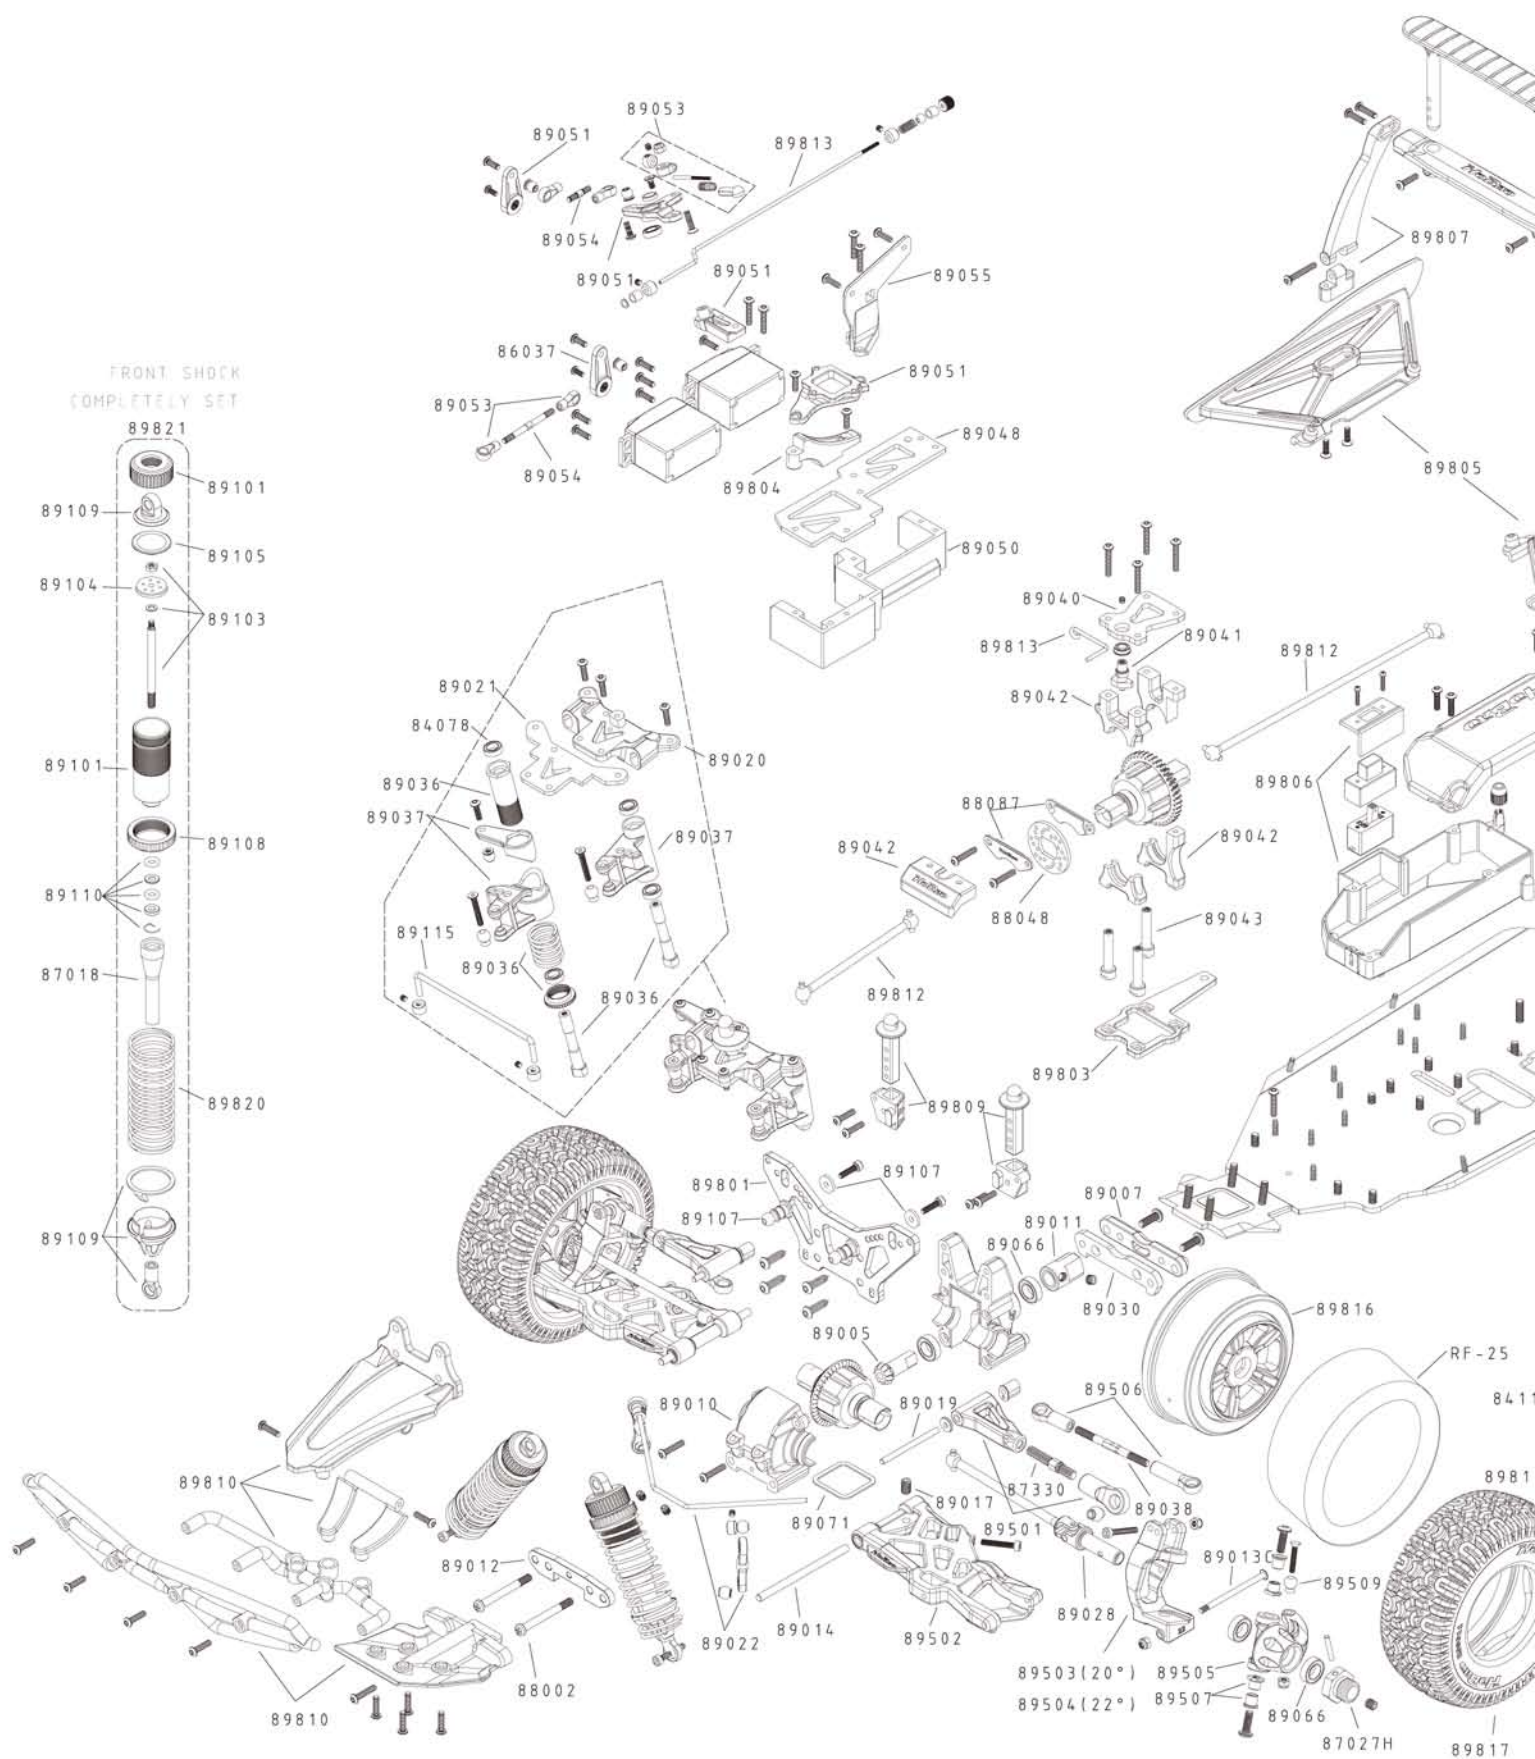

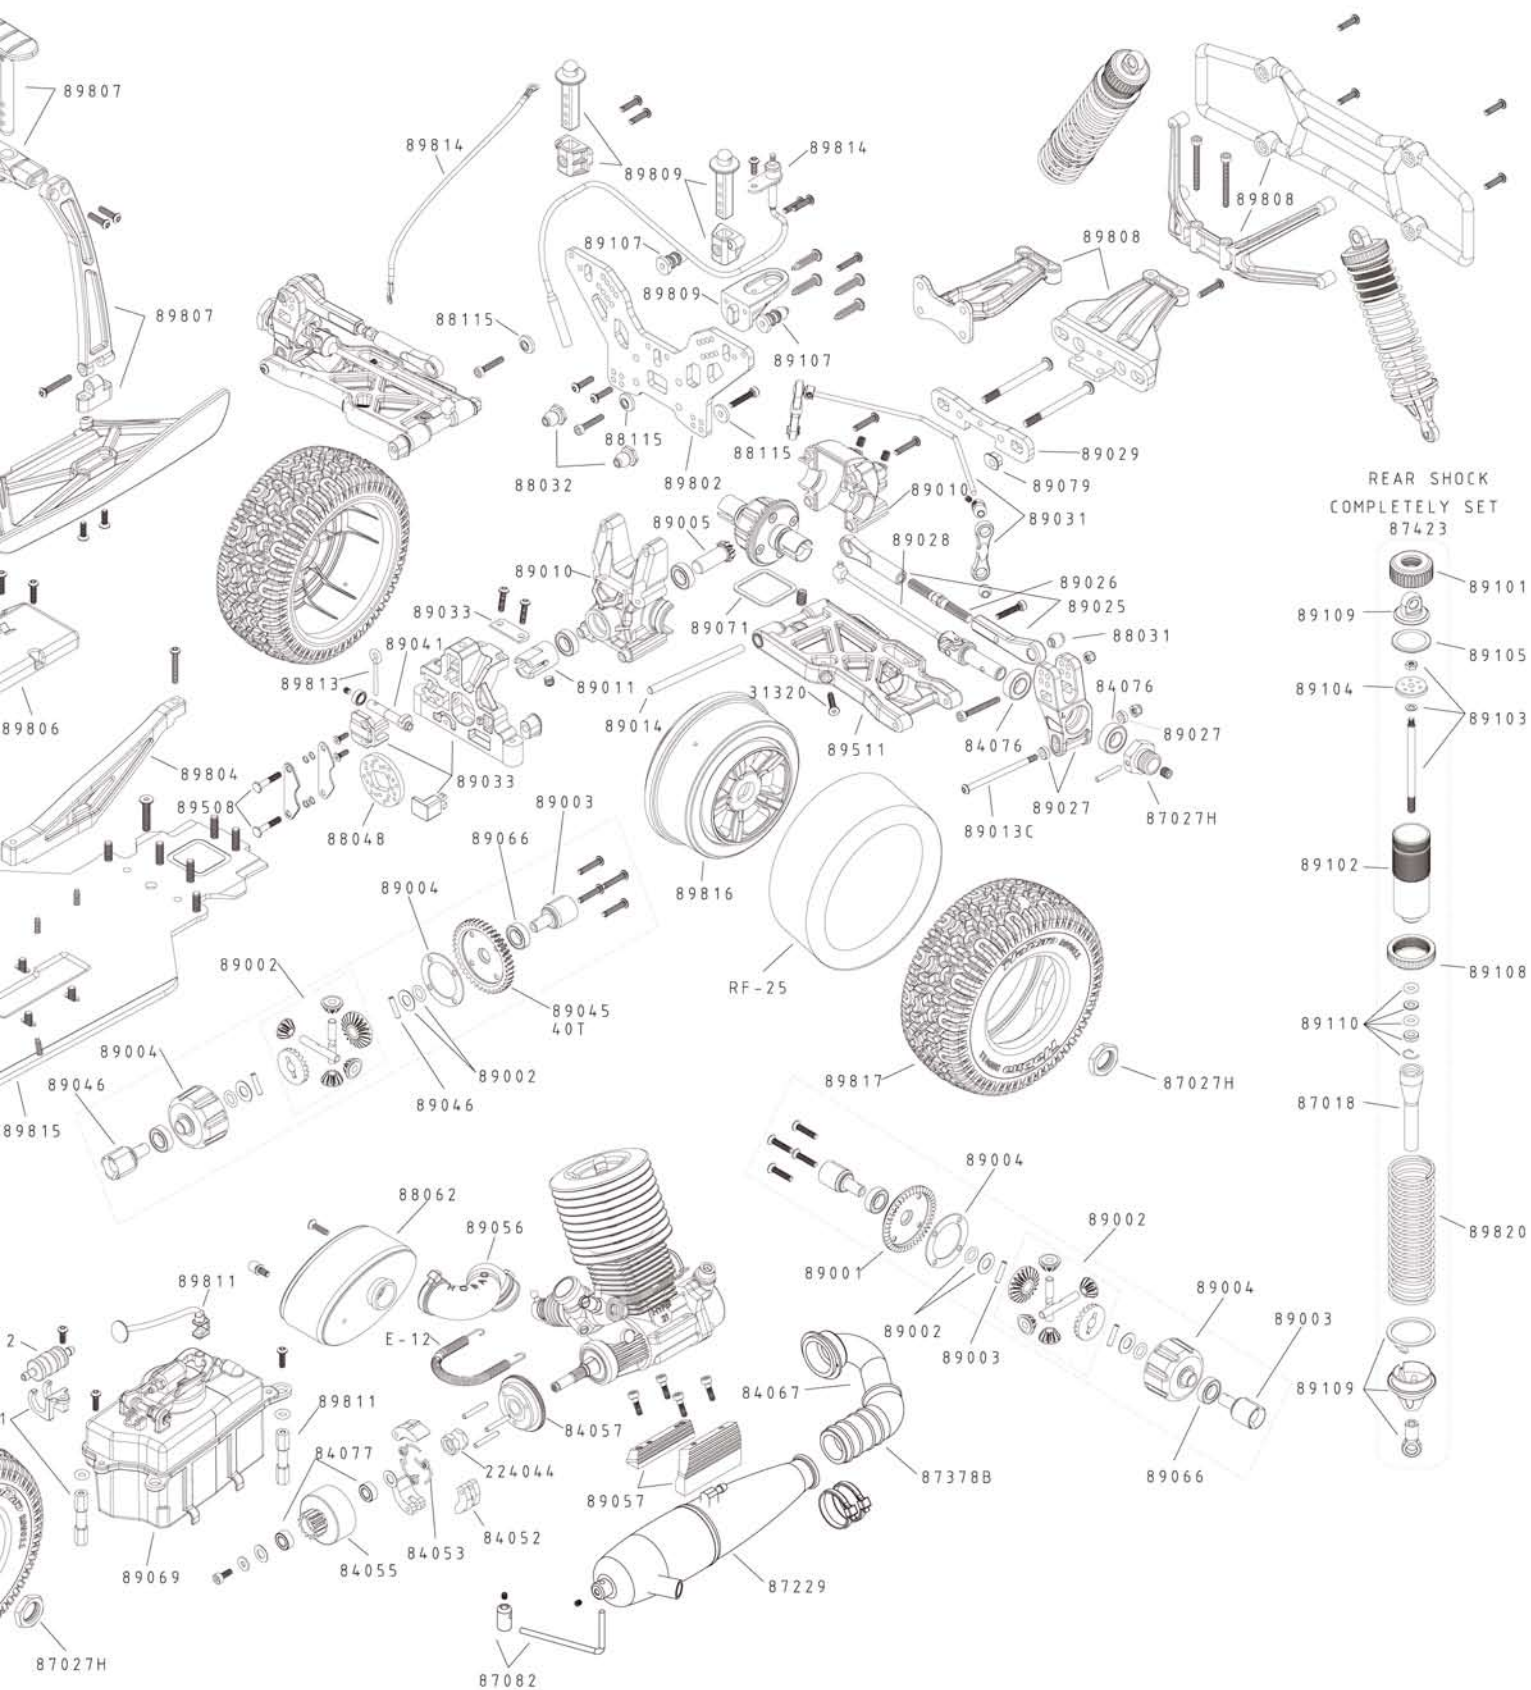

Length: Front width: Rear width: Wheelbase: Height: Weight:

Engine

Type:

Gasket:

Plug:

Fuel:

Diff.Oil

Front:Grease

Center:Grease

Rear:Grease


Clutch bell

13T ☐ 14T ☐ other:


Spur gear

40T ☐ other:

Front Arms:

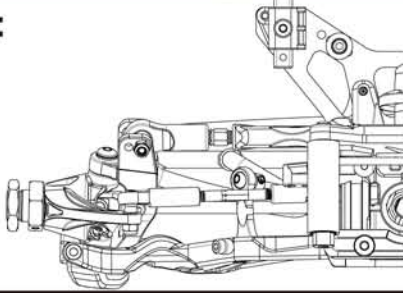


Steering Rod:

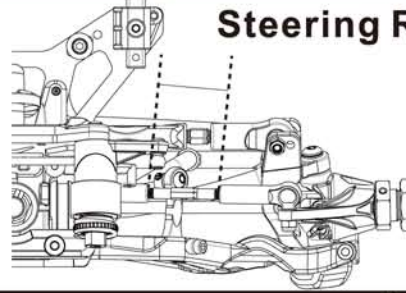


Front Suspension:

Deg.

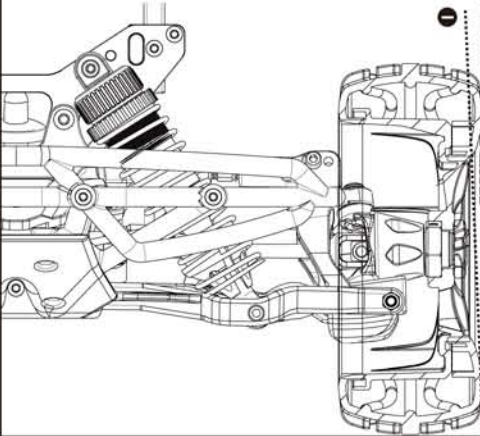


Front Toe angle:


Deg.

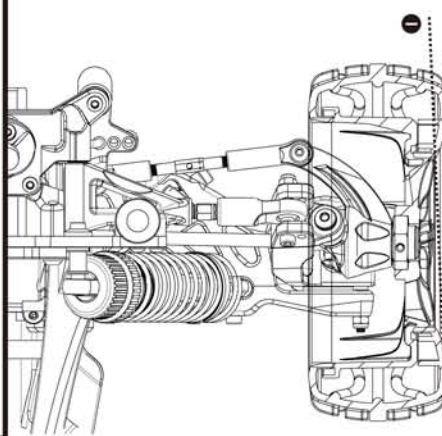


Front Shock:

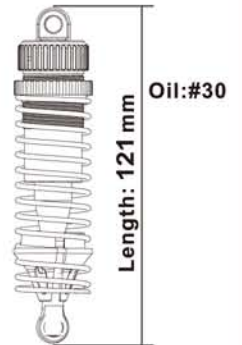


Rear Front Upper Arms:

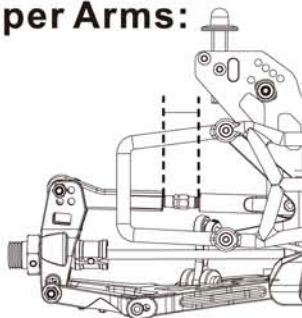


Steering Servo Rod:

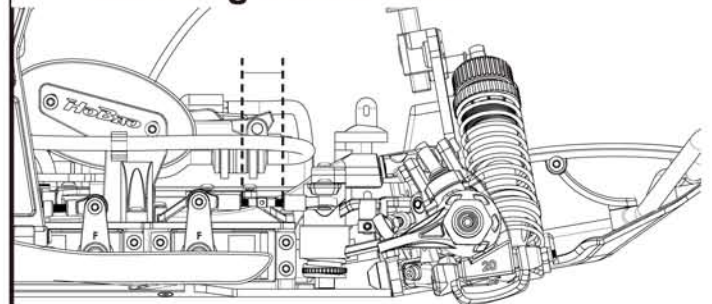


Camber
Deg.

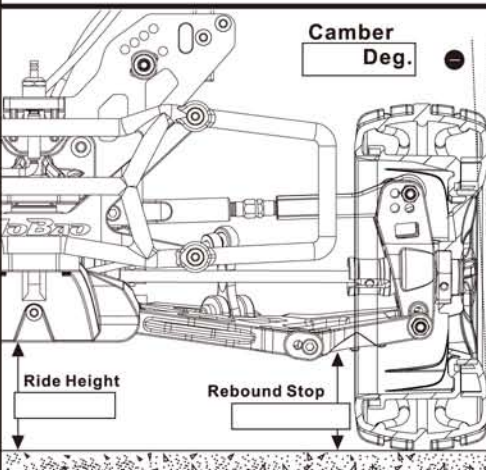

Rear Toe angle:

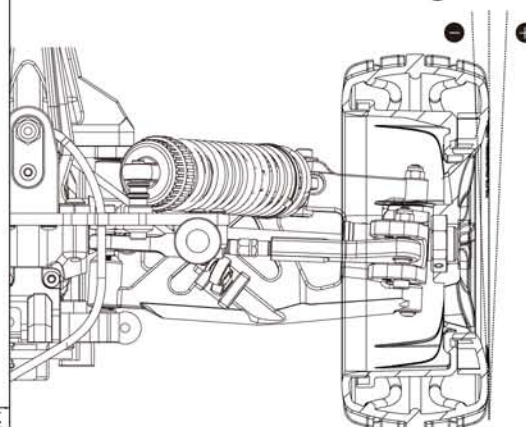

Rear Shock:

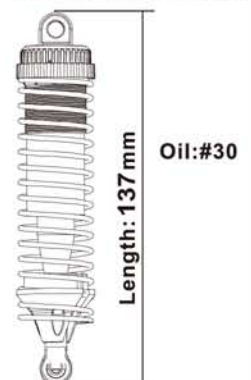

Length: Front width: Rear width: Wheelbase: Height: Weight:

Engine

Type:

Gasket:

Plug:

Fuel:

Diff.Oil

Front:Grease

Center:Grease

Rear:Grease


Clutch bell

13T ☐ 14T ☒ other:


Spur gear

40T ☒ other:

Front Arms:

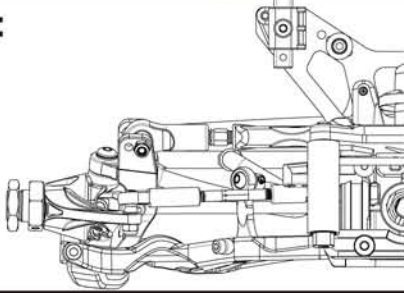


Steering Rod:

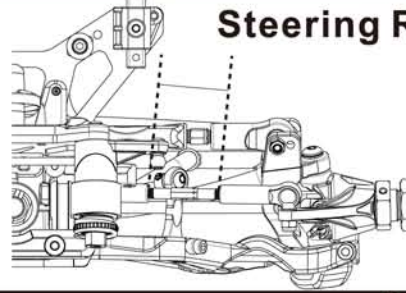


Front Suspension:

Deg.

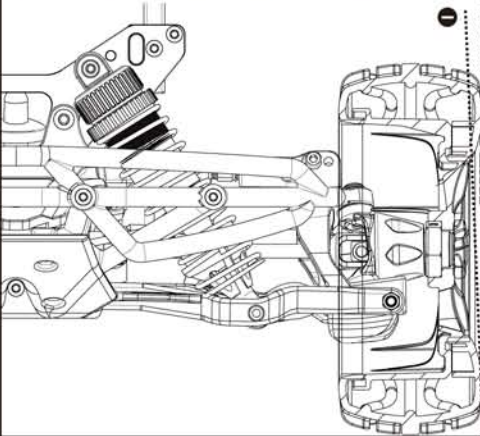


Front Toe angle:


Deg.

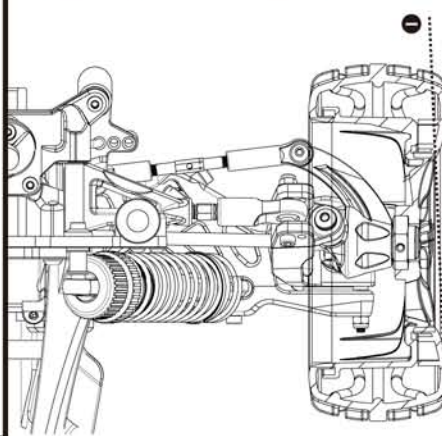


Front Shock:

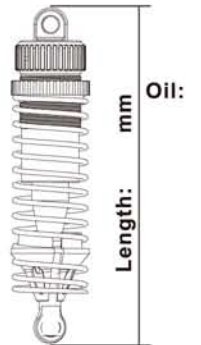


Rear Front Upper Arms:

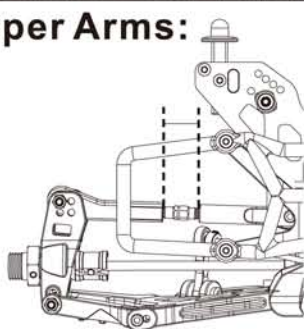


Steering Servo Rod:

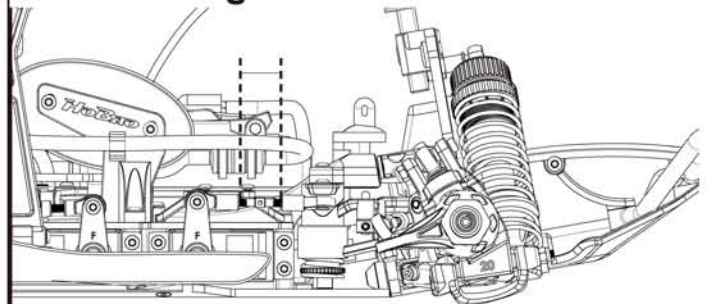


Camber
Deg.


































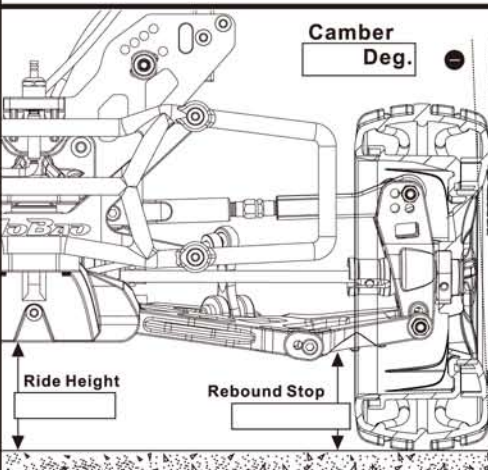


Rear Toe angle:

































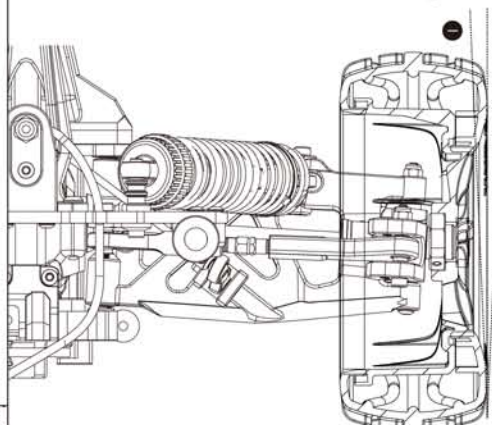


Rear Shock:

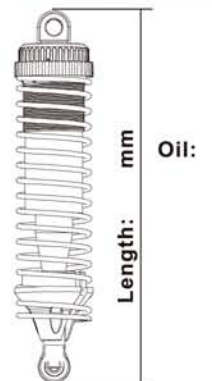

                  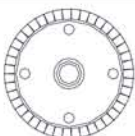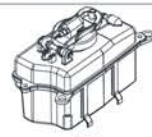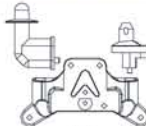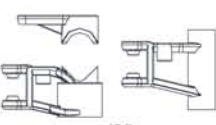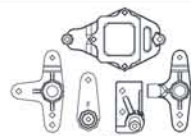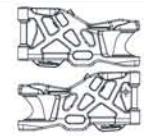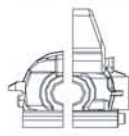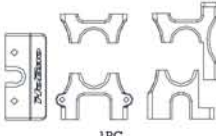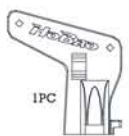       89001  1PC	89014  4x66mm x4PCS Shaft	89029  1PC	89030  1PC	89045  1PC	89057  1PC	89107  4PCS	89108  4PCS
89002  2PCS  2PCS  4PCS  4PCS	89017  5x8mm x4 Set screw	89031  1PC  2PCS  5.8mm x2  3x3mm x2 Set screw	89046  2PCS  2.5x11.8mm x2 Shaft	89066  8x14mm Ball bearing x4	89109  4PCS  4PCS  4PCS  1.5mm 8PCS  4PCS  4PCS		
89003  2.5x11.8mm 2PCS  2PCS	89019  3x42mm x2PCS Shaft	89033  1PC  1PC	89048 (CNC)  1PC	89069  1PC	89110  8PCS  8PCS  4PCS		
89004  3x10mm x4PCS F/H screw  1PC  1PC	89020  1PC	89036  1PC  2PCS  1PC  1PC  2PCS  1PC	89049 (OPTION)  1PC	89071  2PCS	89115  1PC  1PC		
89005  1PC 11T	89021  1PC	89037  1PC	89050  1PC	89076  2PCS	89501  7.8mm 2PCS		
89007  1PC  1PC	89022  1PC  2PCS  5.8mm x2  3x3mm x2 Set screw	89038 (steel)  2PCS	89051  1PC	89079  2PCS	89502  1PC		
89010  1PC	89025  2PCS	89040  1PC	89053  1PC  2PCS  4PCS  1PC  1PC  2PCS  1PC  2PCS	89101  2PCS  2PCS	89503  20°  4PC  4x10mm x4 Screws		
89011  2PCS  5x4mm 2 Set screw	89026S  2PCS	89041  1PC  1PC  3x3mm x2 Set screw	89054  1PC  3x10mm Set screw	89102  2PCS  2PCS	89504  22°  4PC  4x10mm x4 Screws		
89012  1PC	89027  1PC  1PC  4PCS	89042  1PC	89055  1PC  3x12mm x2 Screws	89103  4PCS  4PCS  2PCS  2PCS	89505  1PC  4PC  4x10mm x4 Screws		
89013C (CNC)  3x47mm x2 screw  3x50mm x2 screw	89028  2PCS	89043  3PCS	89056  1PC	89104  4PCS	89105  4PCS	89506  1PC	

            LE SHORT COURSE PARTS LIST

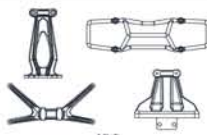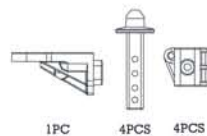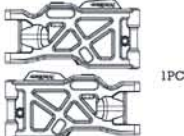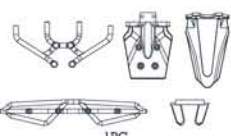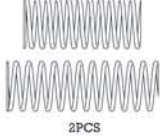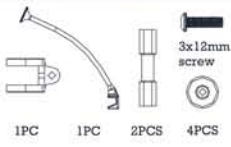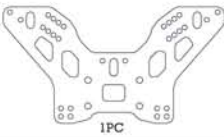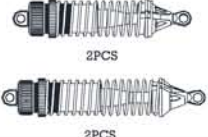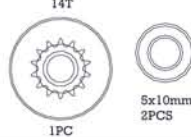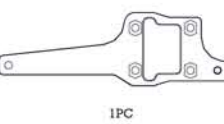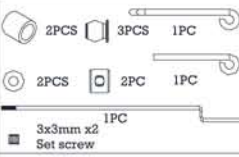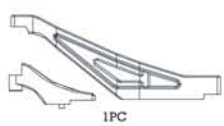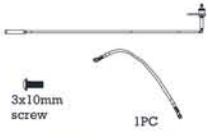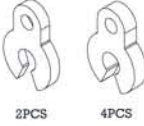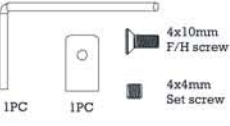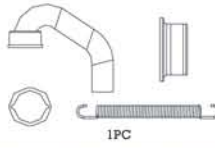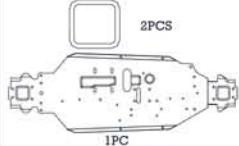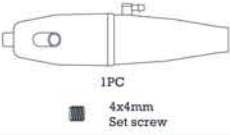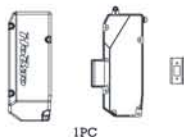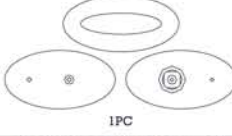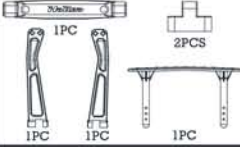89507		89808		89818		88087		87378B		84133	
											
89508	89509	89809		89819	88115	87016		87423		84187W	
											
89511		89810		89820		87018		86037		21018	
											
89801		89811		89821		87027H		84052	84053	224044	
											
89802		89812		89822		87051B		84055		224064	
											
89803		89813		88002		87078		84057		224210	
											
89804		89814		88044		87082		84067		E-12	
											
89805		89815		88048		87229		84076	84077	FR-25	
											
89806		89816		88062		87330		84078		88031	
											
89807		89817		88063	88065	87375		84112		88032	
											

STANDARD PARTS		89041	BRAKE CAM SET	84077	BALL BEARING M 5 X 10
89801	8 SC CNC ALUM. FRONT SHOCK TOWER	89042	CENTER DIFFERENTIAL MOUNT	84078	BALL BEARING M 6 X 10
89802	8 SC CNC ALUM.REAR SHOCK TOWER	89043	ALUM CENTER DIFFERENTIAL POST	84112	FUEL FILTER
89803	8 SC CNC ALUM.CENTER BRACE PLATE	89045	STEEL SPUR GEAR - 40 T	84133	SWITCH CAP, 3 PCS
89804	8 SC FRONT/REAR BRACE SET	89046	CENTER DIFFERENTIAL DRIVE SHAFT	84187W	WASHER M 3.1 X 6: 6 PCS, M 6.5 X 8: 6 PCS
89805	8 SC SIDE GUARD	89048	RADIO TRAY - CNC ALUM.	86037	CNC ALUM. SERVO HORN
89806	8 SC BATTERY BOX	89050	RADIO TRAY MOUNT	87016	STEEL BALL END M 6.8
89807	8 SC ROLL BAR	89051	COORDINATOR MOUNT FOR 25* STANTED ENGINE	87018	SHOCK BOOTS & SPACERS
89808	8 SC REAR BUMPER SET	89053	SERVO LINKAGE ROD SET	87027H	WHEEL HUB SET - HARD COATING
89809	8 SC BODY POST	89054	TURNBUCKLE FOR STEERING SERVO	87051B	BALL BEARING M 5 X 8 FLANGE
89810	8 SC FRONT BUMPER SET	89055	AIR FILTER SUPPORTER	87078	FUEL TUBE
89811	8 SC FUEL TANK POST AND LID PULL	89056	S-SHAPE SILICONE TUBE	87082	MUFFLER STAY SET
89812	8 SC STEEL CENTER DRIVE SHAFT	89057	ENGINE MOUNT, PAIR	87229	MUFFLER
89813	8 SC THROTTLE LINKAGE ROD SET	89066N	NEW NMB BALL BEARING M 8 X 14	87330	TURNBUCKLE M 5 X 30 FOR FRONT UPPER ARM
89814	8 SC REMOTE GLOW LEAD SET	89069	FUEL TANK	87375	BODY CLIP
89815	8 SC CNC ALUM. CHASSIS	89071	SEAL FOR GEAR BOX ONTO CHASSIS	87378B	SILICONE PIPE TUBE
89816	8 SC WHEEL	89076	ALUM ANTENNA MOUNT	87423	REAR SHOCK ABSORBER SET
89817	8 SC TIRES	89079	ADJUSTABLE INSERT SET	88002	HEX SCREW M 4 X 47
89818	8 SC CLEAR BODY	89081	SCREWS SET - A - FOR FRONT/REAR VERSION	88031	7.8MM BALL
89819	8 SC PRINTED BODY - ORANGE/BLACK	89082	SCREWS SET - B - FOR CENTER VERSION	88032	7.8MM HEX BALL
89820	8 SC SHOCK SPRING	89083	SCREWS SET - C - FOR CHASSIS VERSION	88044	ADJUSTABLE GASKET
89821	8 SC FRONT SHOCK ABSORBER SET	89101	FRONT SHOCK BODY 20MM, 2 PCS	88048	STEEL BRAKE DISC
89822	8 SC FRONT/REAR SHOCK ABSORBER SET	89102	REAR SHOCK BODY 20MM, 2 PCS	88062	AIR FILTER SET
89001	CROWN GEAR	89103	SHOCK SHAFT 20MM, 4 PCS	88063	AIR FILTER FOAM
89002	BEVEL GEAR	89104	SHOCK PISTON 20MM, 4 PCS	88065	AIR FILTER FOAM COVER
89003	F/R DIFFERENTIAL DRIVE SHAFT	89105	SHOCK BLADDER 20MM, 4 PCS	88087	SP BRAKE PAD
89004	DIFFERENTIAL CASE	89107	STEEL SHOCK BALL END	88115	ALUM COLLAR FOR SHOCK TOWER
89005	DRIVE PINION GEAR, 2 PCS	89108	ADJUSTABLE SHOCK RING, 4 PCS	E-12	MANIFOLD SPRING
89007	FRONT LOWER ARM HOLDER - PLASTIC	89109	SHOCK NYLON SET	FR-25	INNER FOAM FOR TIRE
89010	GEAR BOX, PAIR	89110	SHOCK ABSORBER REPAIR SET	SCREW	
89011	STEEL JOINT CUP, 2 PCS	89115	ACKERMAN ROD & ALUM COLLAR	31208	M2.6 X 8 HEX SOCKET COUNTERSUNK HEAD SCREWS
89012	CNC FRONT LOWER ARM HOLDER (FF)	89501	FRONT UPPER ARM FOR B- VERSION	31305	M3 X 5 HEX SOCKET COUNTERSUNK HEAD SCREWS
89013C	CNC SCREWS M3 X 50 & M 3 X 47	89502	FRONT BOTTOM ARM FOR B-VERSION	31306	M3 X 6 HEX SOCKET COUNTERSUNK HEAD SCREWS
89014	ARM SHAFT M 4 X 66, 4 PCS	89503	FRONT C-HUB 20 DEGREE FOR B-VERSION	31308	M3 X 8 HEX SOCKET COUNTERSUNK HEAD SCREWS
89017	SET SCREWS M 5 X 8, 4 PCS	89504	FRONT C-HUB 22 DEGREE FOR B-VERSION	31316	M3 X 16 HEX SOCKET COUNTERSUNK HEAD SCREWS
89019	ARM SHAFT M 3 X 42, 2 PCS	89505	FRONT NYLON STEERING KNUCKLE FOR B-VERSION	31320	M3 X 20 HEX SOCKET COUNTERSUNK HEAD SCREWS
89020	FRONT UPPER ARM HOLDER - PLASTIC	89506	FRONT NYLON STEERING BALL END FOR B-VERSION	31410	M4 X 10 HEX SOCKET COUNTERSUNK HEAD SCREWS
89021	CNC FRONT UPPER PLATE - ALUM 7075	89507	STEEL COLLAR AND SCREWS	31414	M4 X 14 HEX SOCKET COUNTERSUNK HEAD SCREWS
89022	FRONT STABILIZER SET	89508	SCREWS 3 X 14.5MM AND 3 X 16.5 MM EA 4 PCS	31416	M4 X 16 HEX SOCKET COUNTERSUNK HEAD SCREWS
89025	REAR UPPER ARM	89509	STEEL BALL END	32308	M3 X 8 HEX SOCKET HEAD CAP SCREWS
89026S	STEEL TURNBUCKLE FOR REAR UPPER ARM	89511	REAR BOTTOM ARM FOR B-VERSION	32310	M3 X 10 HEX SOCKET HEAD CAP SCREWS
89027	REAR WHEEL HUB, PAIR	21018	SILICONE MANIFOLD SEALS	32316	M3 X 16 HEX SOCKET HEAD CAP SCREWS
89028	REAR UNIVERSAL JOINT SHAFT	224044	CLUTCH NUT, 2 PCS	32322	M3 X 22 HEX SOCKET HEAD CAP SCREWS
89029	CNC REAR LOWER ARM HOLDER - ALUM 7075	224064	BALL BEARING 5 X 8 MM	32325	M3 X 25 HEX SOCKET HEAD CAP SCREWS
89030	CNC FRONT LOWER ARM HOLDER (FR)	224210	SINK ALUM WASHER 3MM	33308	M3 X 8 HEX SOCKET BUTTON HEAD SCREWS
89031	REAR STABILIZER SET	84052	CLUTCH SHOE	33310	M3 X 10 HEX SOCKET BUTTON HEAD SCREWS
89033	REAR BRAKE MOUNT	84053	CLUTCH SPRING	33312	M3 X 12 HEX SOCKET BUTTON HEAD SCREWS
89036	SERVO SAVER SET	84055	CLUTCH BELL 14T	33315	M3 X 15 HEX SOCKET BUTTON HEAD SCREWS
89037	SERVO SAVER ARMS	84057	FLYWHEEL	33410	M4 X 10 HEX SOCKET BUTTON HEAD SCREWS
89038	TURNBUCKLE FOR STEERING	84067	MANIFOLD	33412	M4 X 12 HEX SOCKET BUTTON HEAD SCREWS
89040	CNC ALUM CENTER DIFF HOUSING PLATE	84076	BALL BEARING M 8 X 16	35410	M4 X 10 PAN HEAD SCREWS

[illegible]

HYPER ESC 4WD

1/8TH SCALE 4WD SHORT COURSE RACING TRUCK

HO BAO ENTERPRISING CO.,LTD.
www.hobao-racing.com
E-Mail:hobao@hobao.com.tw
Made in Taiwan