

HYPER

1/8 SCALE PRO RACING BUGGY




INSTRUCTION MANUAL

HOBBA


HYPHER9

Required


Radio control equipment set

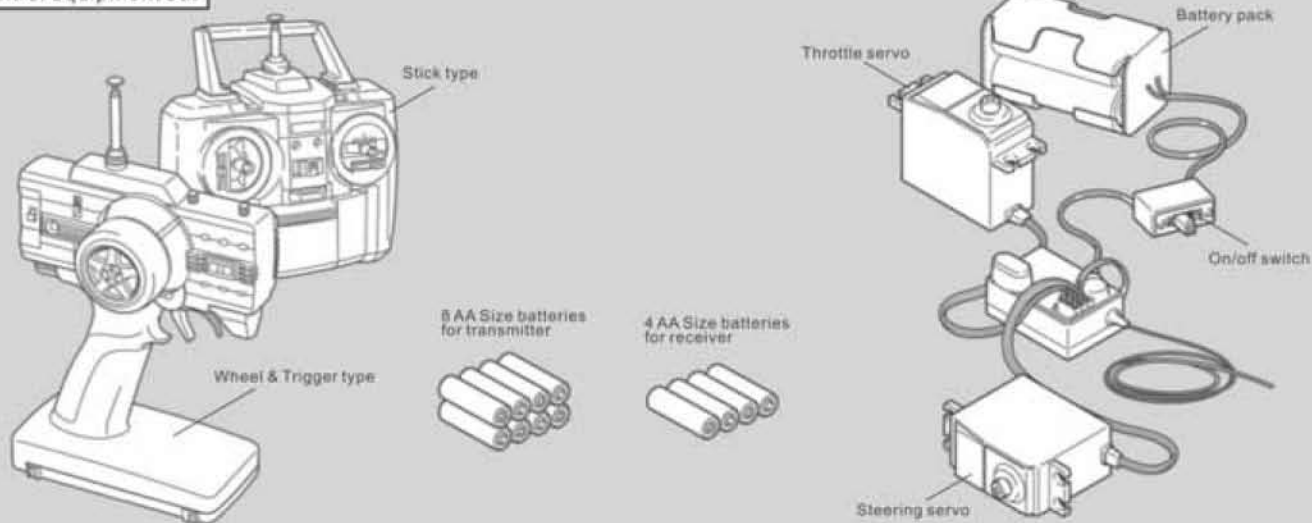

Hyper Engine SERIES

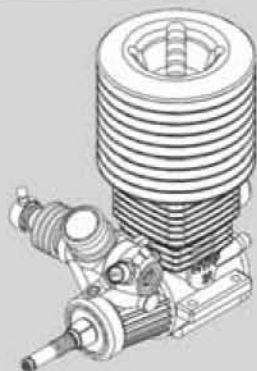

Required for engine starting

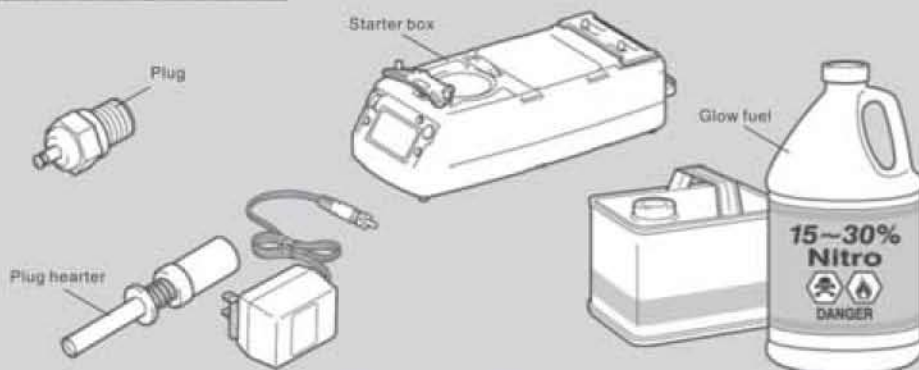

Tools recommended

Hex wrench with
2.5mm

2mm

1.5mm

⊕ Screwdriver (small)

⊖ Screwdriver

Long nose pliers

Modeling knife

Instant cement

Instant cement

Thread lock

Rubber cement

Side cutter

Curved scissor

Hex wrench with

1.5mm

2mm



2.5mm

3mm



Fuel bottle

Glow plug wrench



Assembly of Center Differential

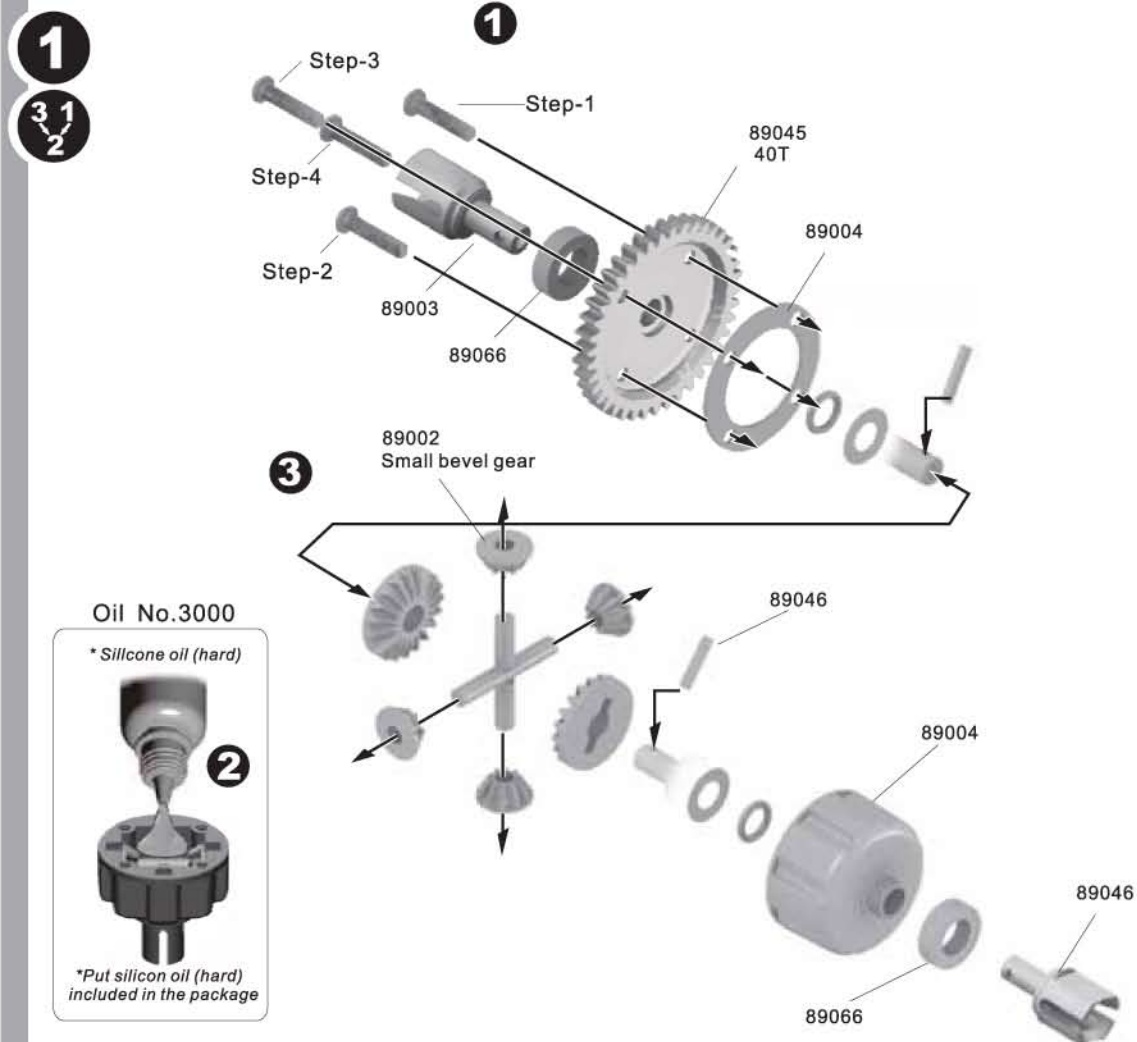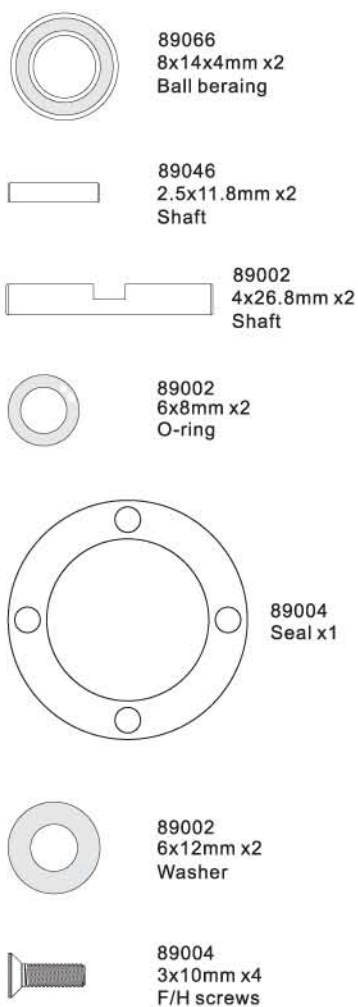


Assembly of Front / Rear Differential

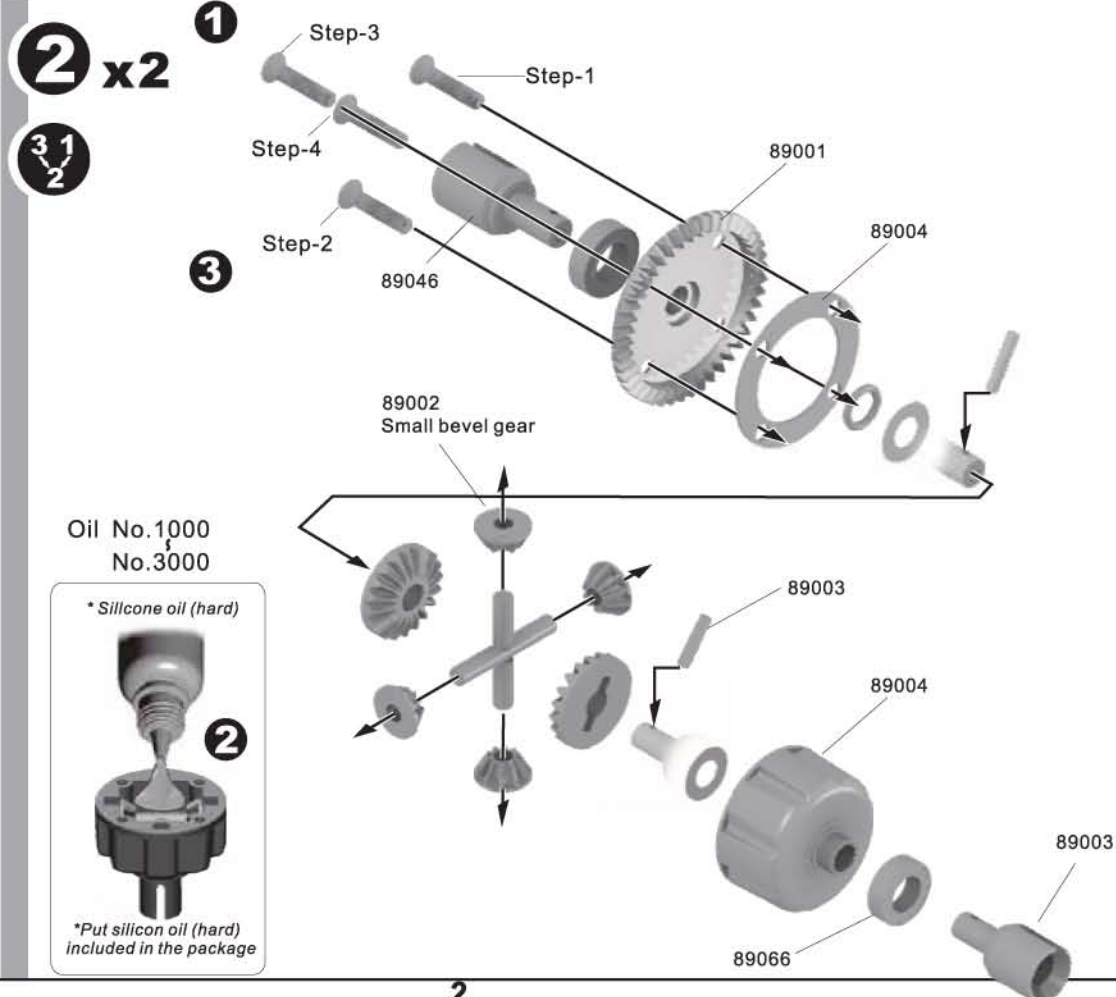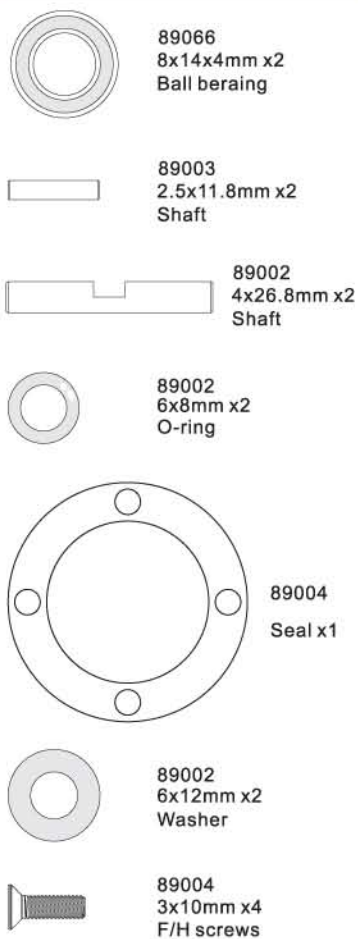


Assembly of Gear Box & Front / Rear Differential

-  89011
5x4mm x2
Set screw
-  89011
Steel joint cup x2
-  89005
Drive pinion gear x1
-  89066
8x14x4mm x2
Ball bearing
-  33315
3x15mm x2
Screws

3 x2

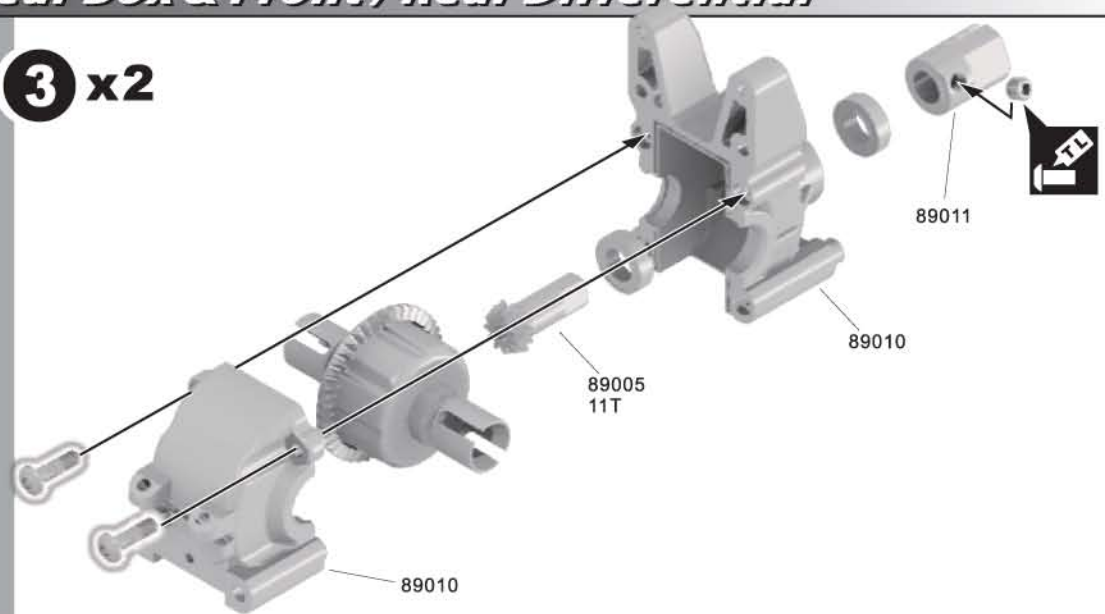


Assembly of Steering Knuckle & Steering Arm

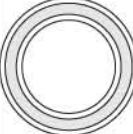
-  89017
5x8mm
Set screw
-  33410
4x10mm x4
Screws
-  89078
6.8 mm x2
Ball
-  89006x4
Steel collar
-  89066
8x14x4mm x2
Ball bearing
-  22115
12x18x4mm x2
Ball bearing

4

LR

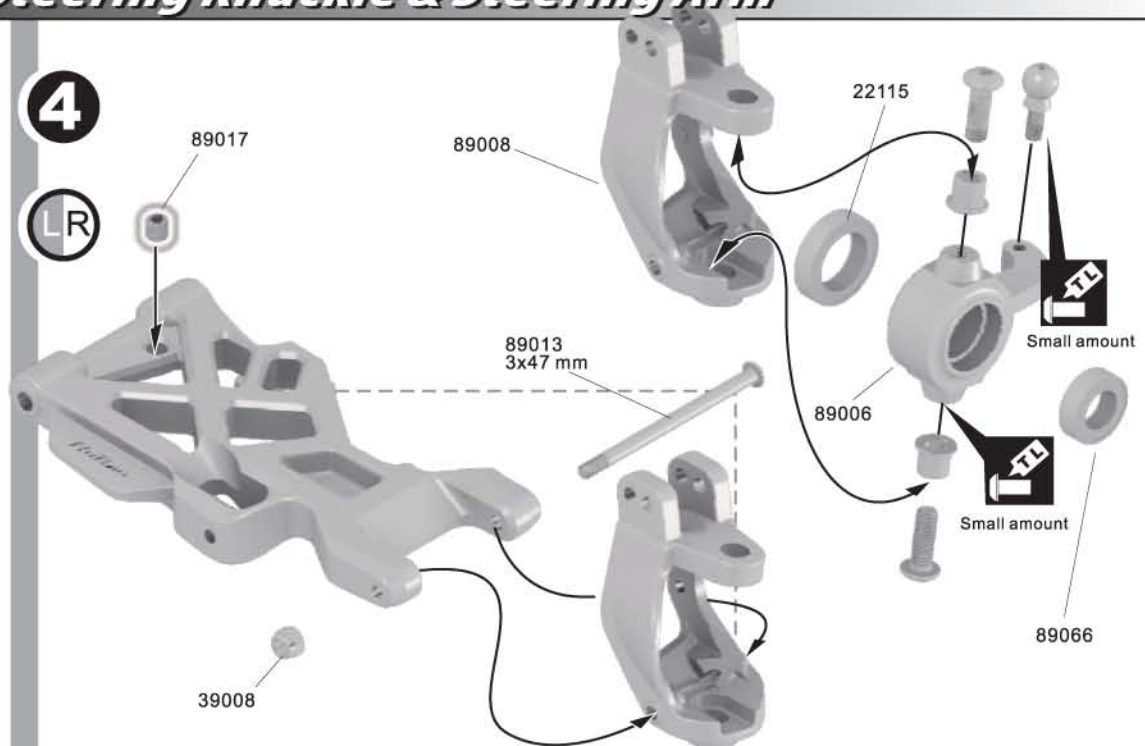


Assembly of Front Universal Joint Shaft



-  38505
5x5mm
Set screw
-  87027H
Hex wheel hub
-  87027H
Wheel hub set
-  87027H
2.5x16.8mm x2
Pin

5



LR

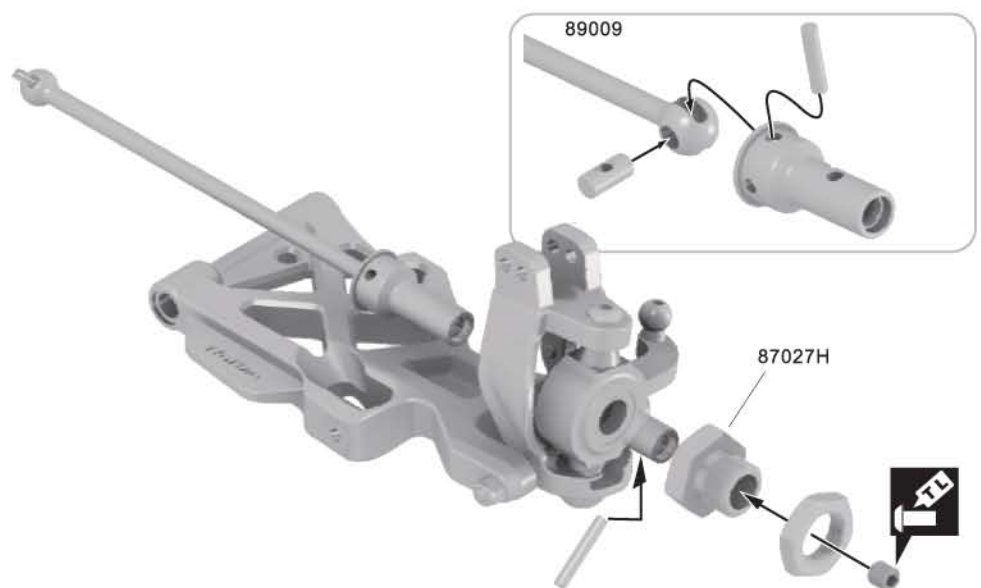



Assembly of Front lower arm holder For FR

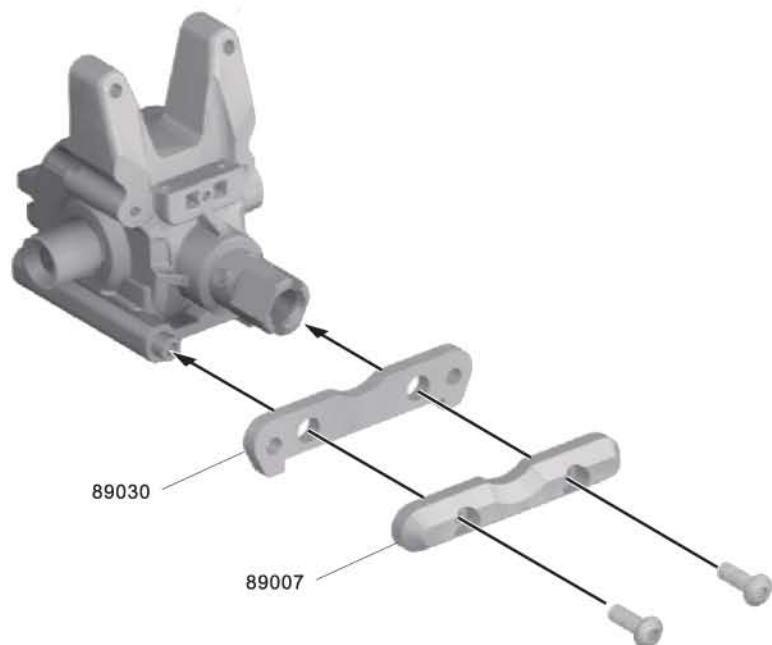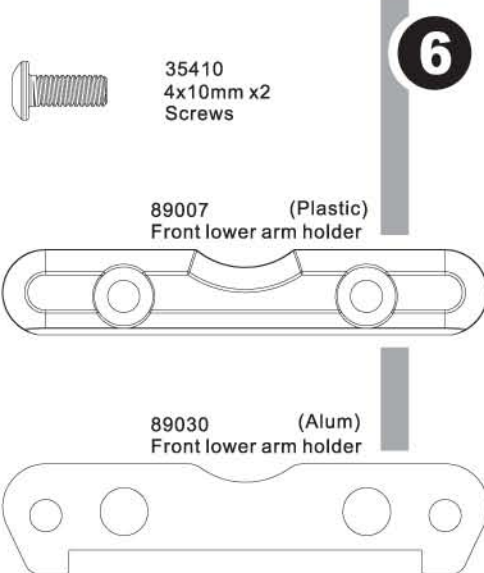



Assembly of Front lower arm holder For FF

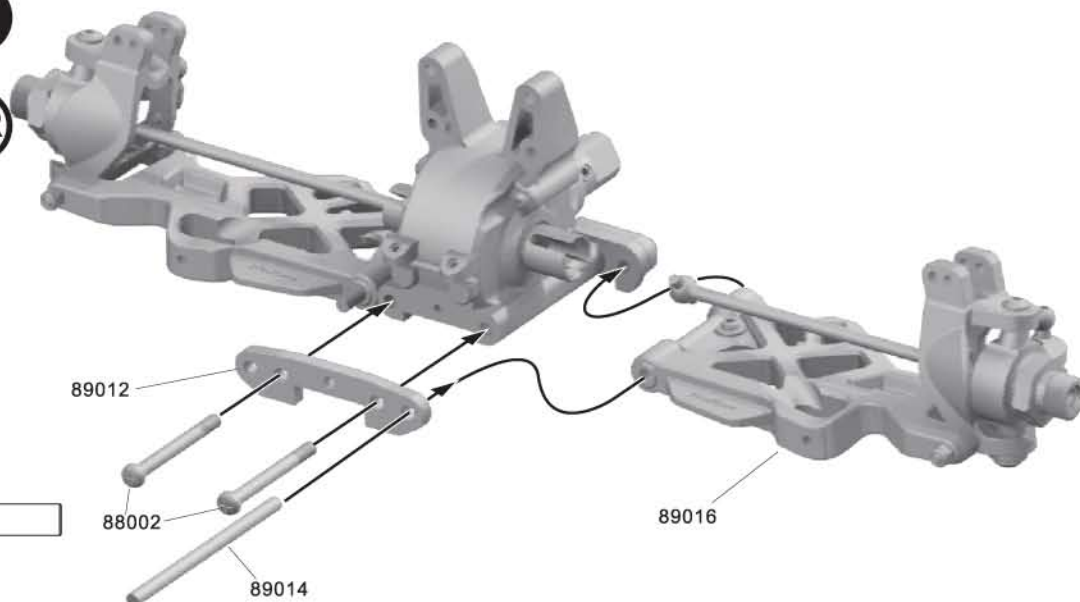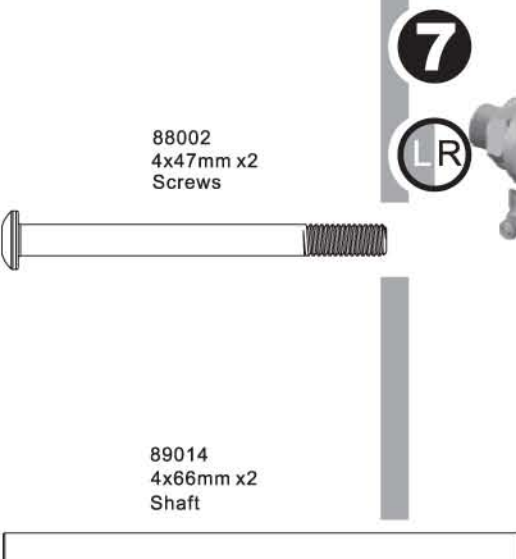



Assembly of Front Shock Stay

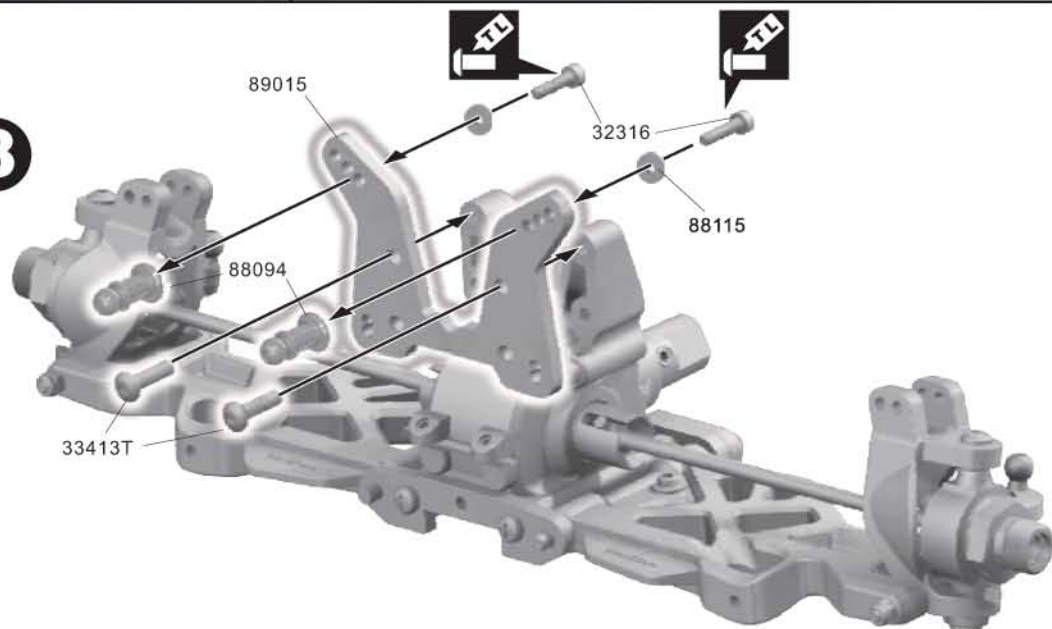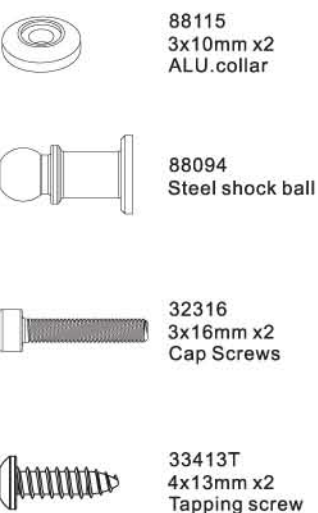



Assembly of Front Stabilizer

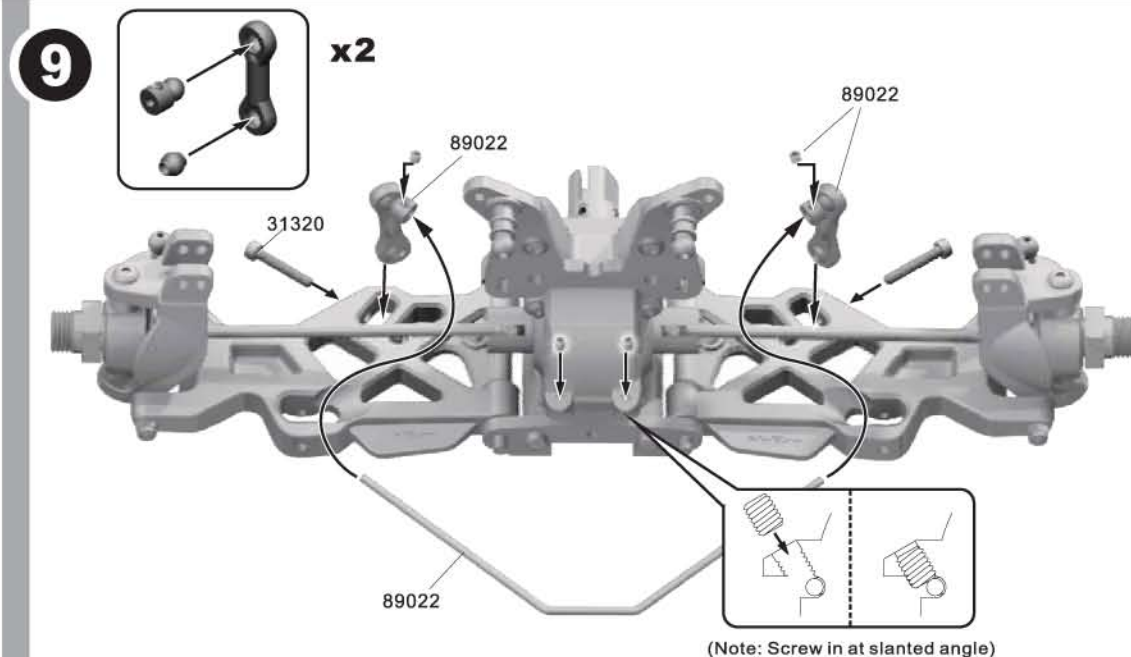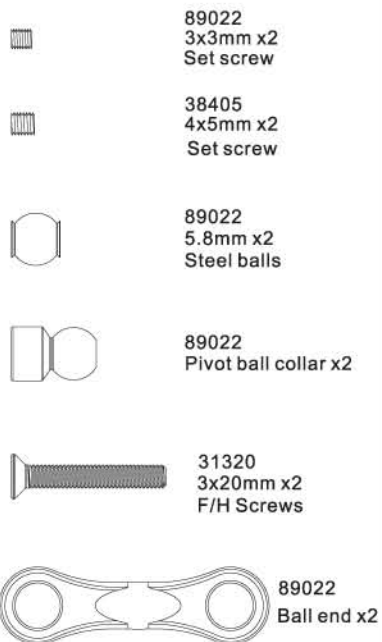

Assembly of Front Upper Suspension Arms

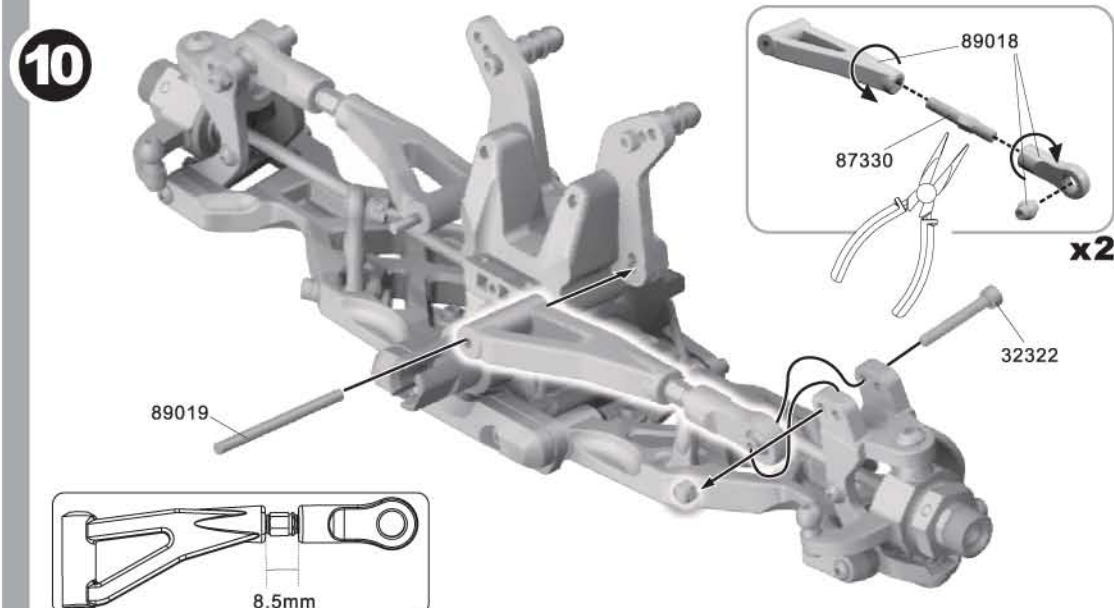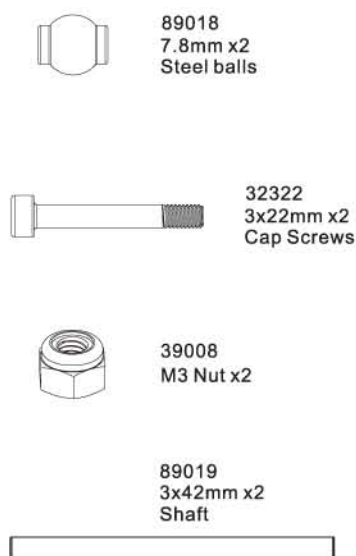

Assembly of Steering Servo Saver

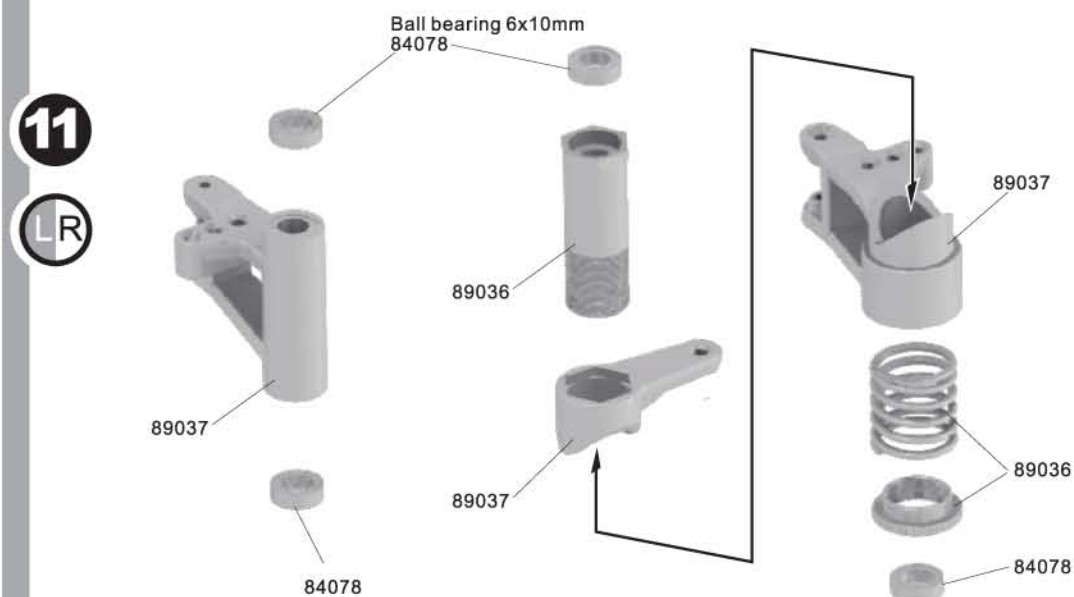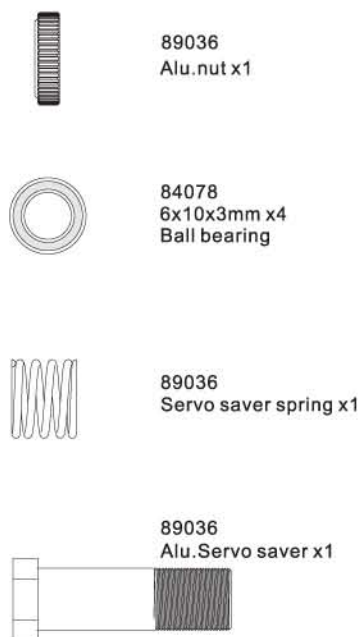


Assembly of Steering connecting Rod & Steel post

12

89036
3x3mm X2
Set screw

89036
Stopper X2

89036
Steel Post

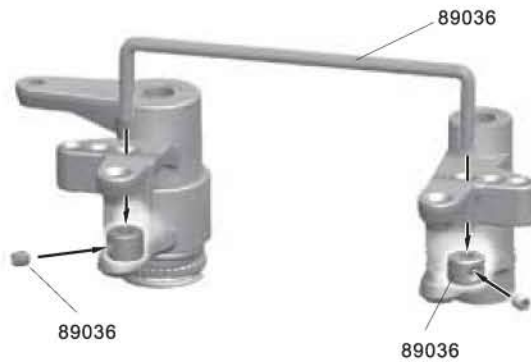


Assembly of Steering Rod



13

89078
6.8mm x2
Steel ball


31320
3x20mm x2
F/H Screws

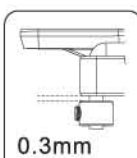

0.3mm

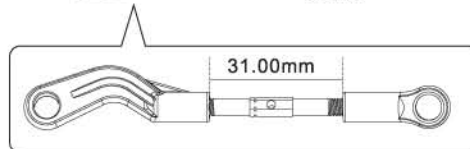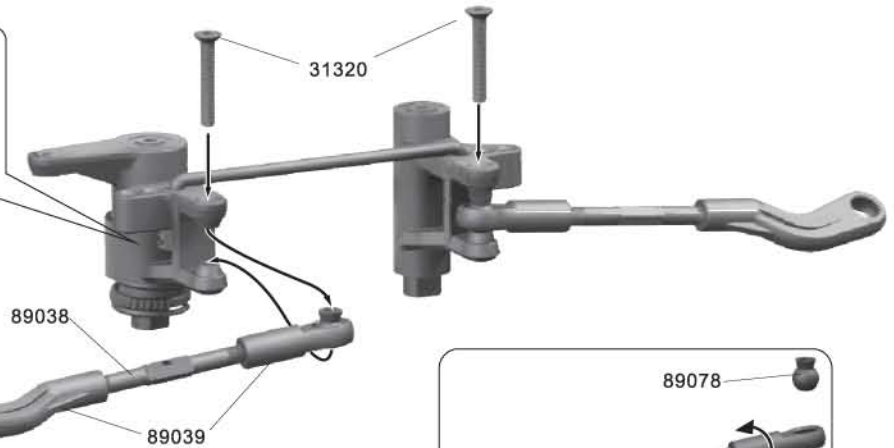

31.00mm

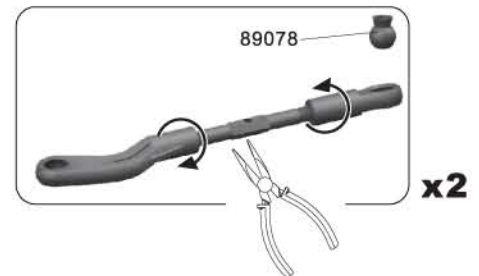


x2

Assembly of Bulkhead Tie Brace & Steering Unit

14

89079
6.8mm x2
Kick up bushing

33312
3x12mm x5
Screws

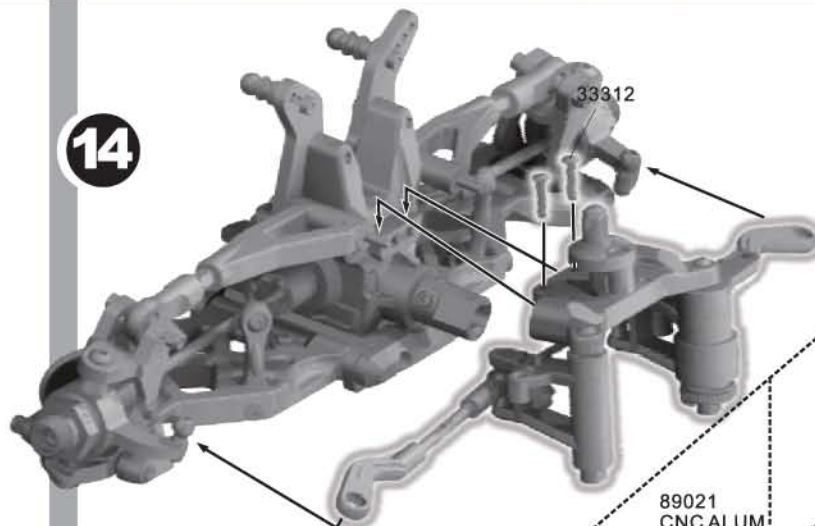

33312

89020

89020
(Plastic)

89021
CNC ALUM


89079

Assembly of Front bumper

15



33315
3x15mm
Screw

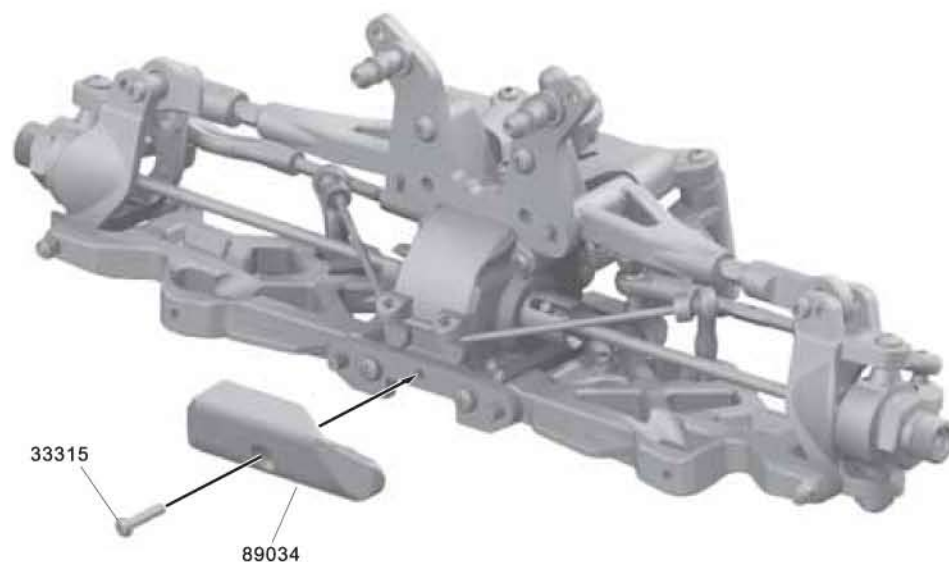

Assembly of Rear Brake System

16



89041
3x3mm x2
Set screw




224064
5x8x2.5mm
Ball bearing



31208
2.6x8mm
F/H Screw



87052
3x16.5mm x2
Hex head Screws

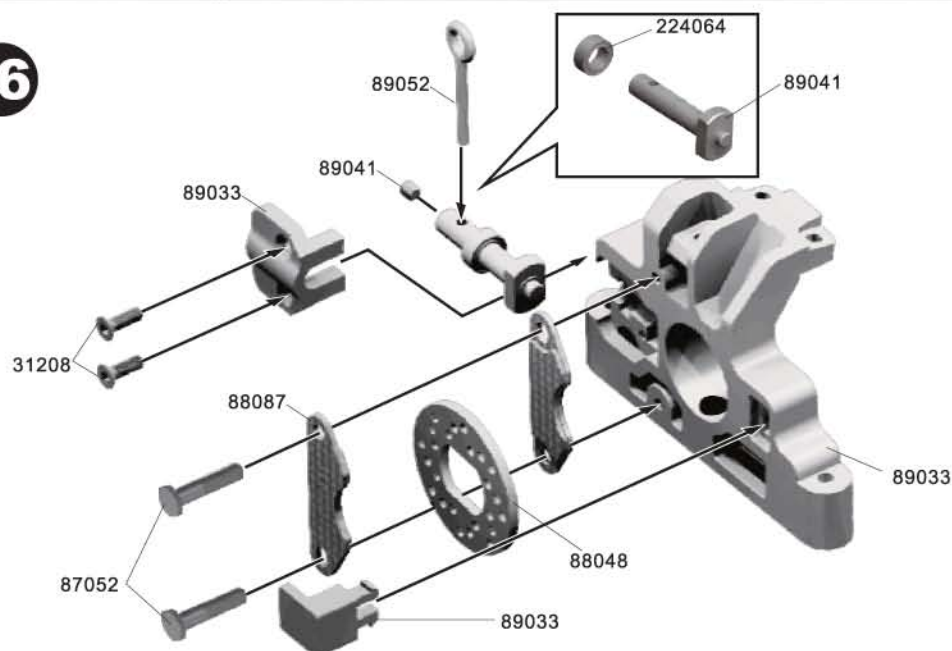

Assembly of Rear Brake Disc mount

17





33312
3x12mm x2
Screws




89033




Assembly of Rear Shock Stay & Wing Mount

-  88115
3x10mm x2
ALU.Collar
-  88094
Steel shock ball
-  32316
3x16mm x2
Cap screws
-  33418T
4x18mm x4
Tapping screws
-  33315
3x15mm
Screw

18

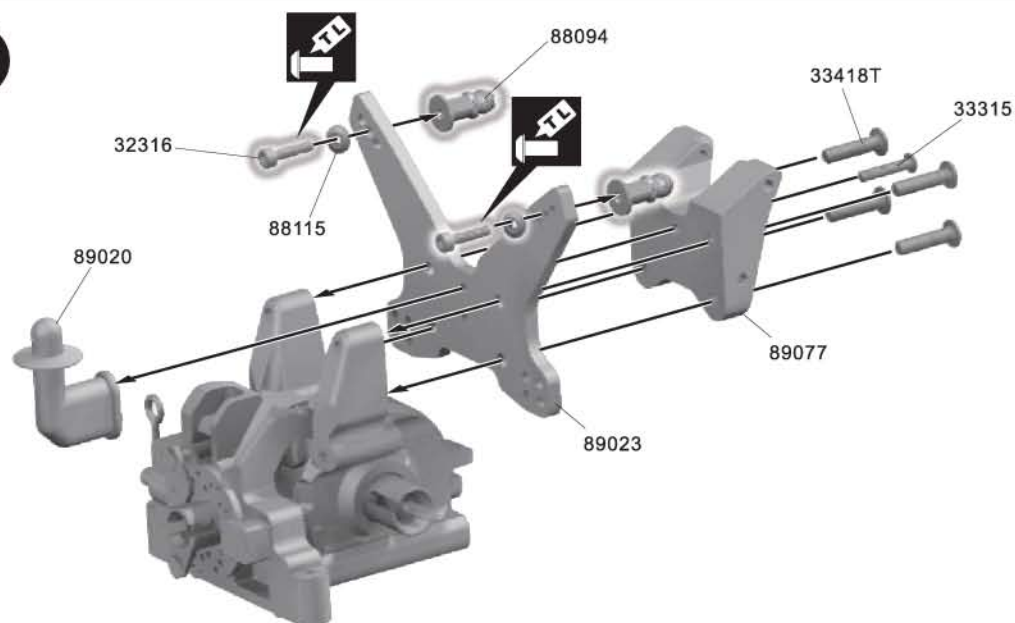


Assembly of Rear upper suspension arm

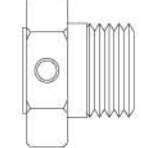-  87027H
Hex wheel hub
-  87027H
Wheel hub set
-  87027H
2.5x16.8mm x2
Shaft
-  39008
M3 Nut
-  32325
3x25mm x2 Cap screws
-  89013 3x50mm x2 Screws
-  84076
8x16x5mm
Ball bearing
-  89027
Washer x2
-  38505
5x5mm x2
Set screw
-  89017
5x8mm x2
Set screw

19


3 1 2

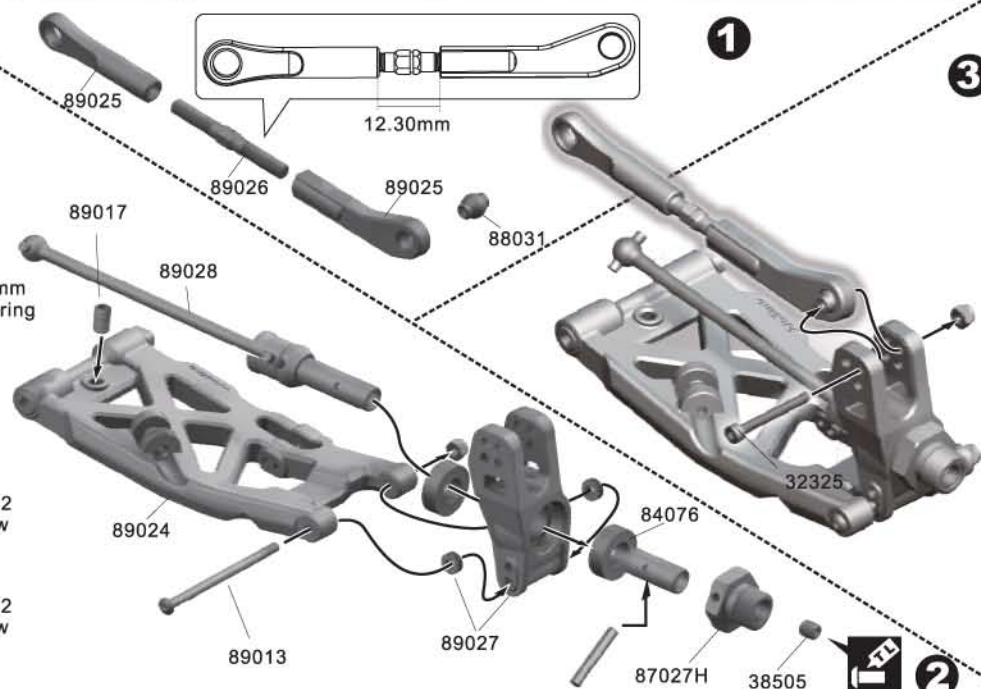

Assembly of Rear Suspension Arms

-  88115
3x10mm x2
ALU.Collar
-  32316
3x16mm x2
Screws
-  89079
6.8mm x2
Kick up bushing
-  89014
4x66mm x2
Shaft

20

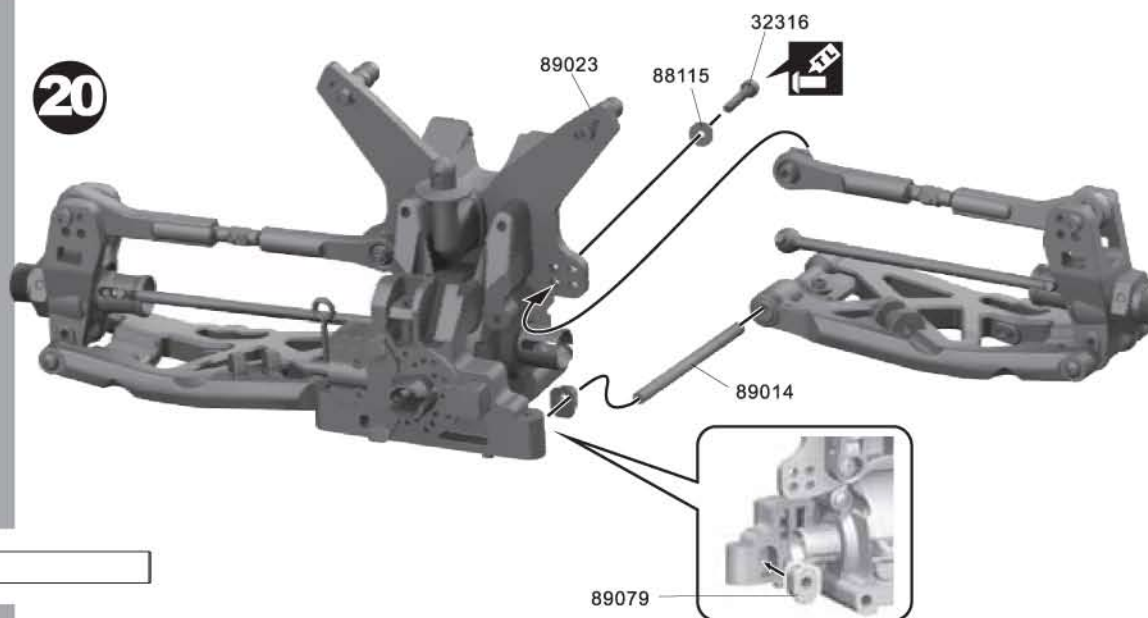

Assembly of Rear Stabilizer



89031
3x3mm x2
Set screw



38405
4x5mm x2
Set screw




89031
5.8mm x2
Steel balls



89031
Pivot ball collar x2



31316
3x16mm x2
F/H Screws




89031
Ball end x2

21

LR



x2

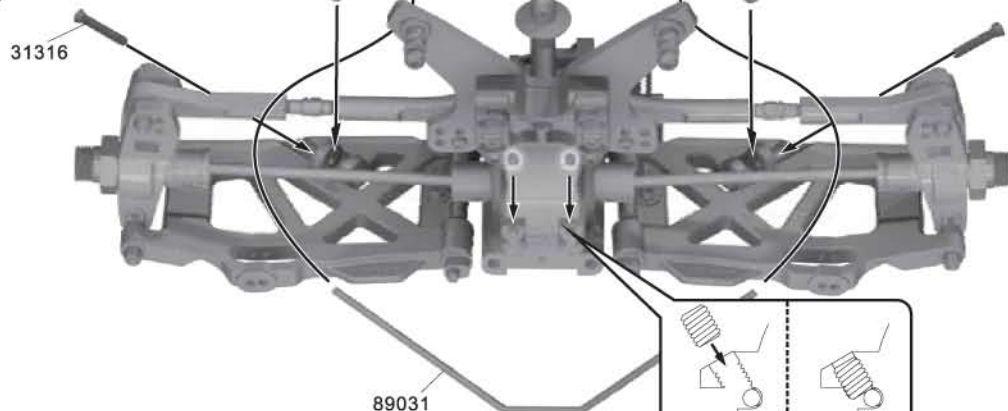


(Note: Screw in at slanted angle)

Assembly of Rear Lower Arm Holder


22



89079
6.8mm x2
Kick up bushing



88002
4x47mm x2 Screw

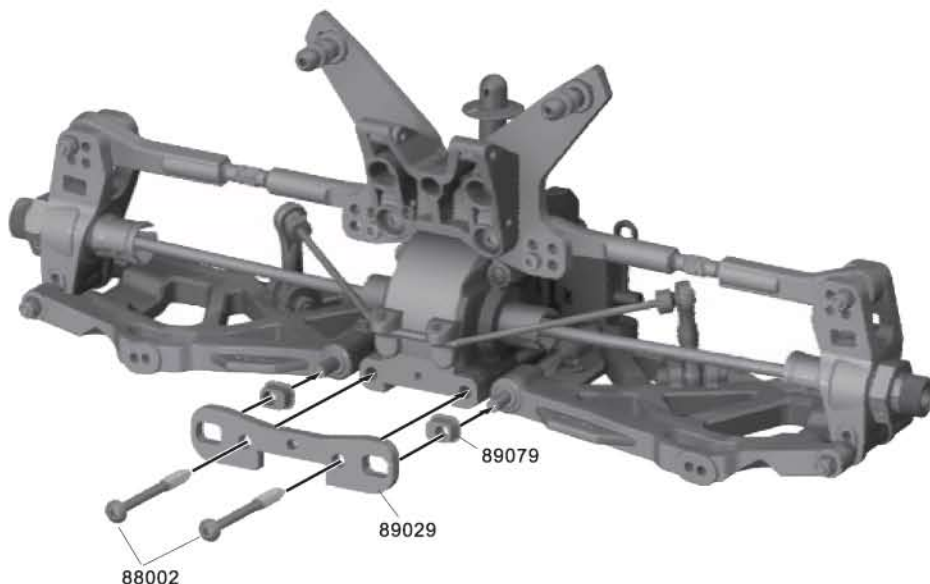


Assembly of Rear Bumper

23



33315
3x15mm x1
Screw

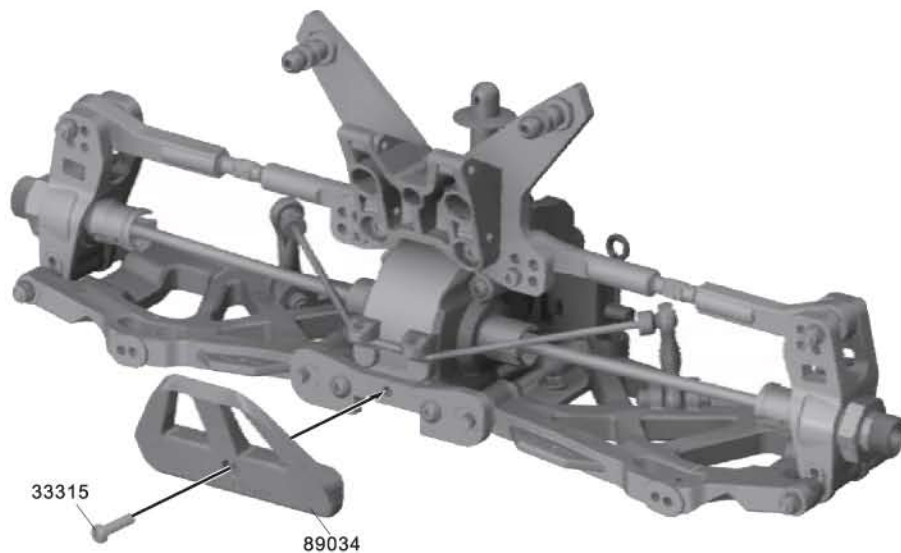

Assembly of Center Differential Mount

24

38303
3x3mm
Set screws


87051B
5x8x2.5mm x2
Flange bearing

87052
3x16.5mm x2
Hex head Screws

31316
3x16mm x1
F/H Screws

31320
3x20mm x3
F/H Screws

88087
Brake pad x2

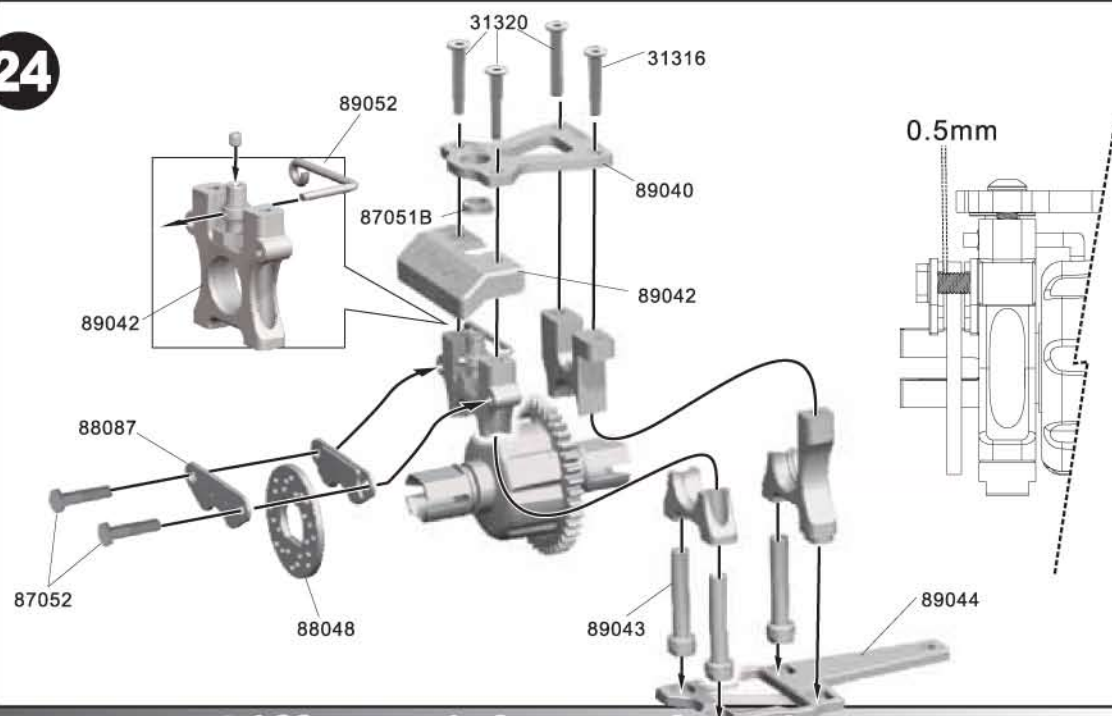


Assembly of the center Differential onto chassis

25

31410
4x10mm x4
F/H Screws

31416
4x16mm x1
F/H Screw

89072
Gasket x2

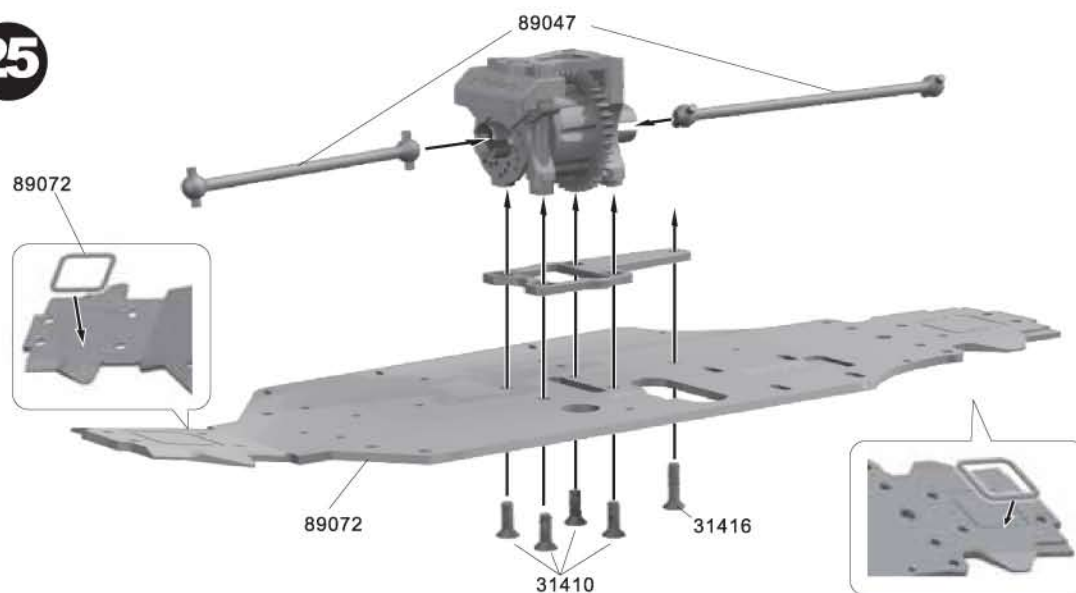


Assembly of the front gearbox and suspension onto chassis

26

31410
4x10mm x2
F/H Screws

31416
4x16mm x4
F/H Screws

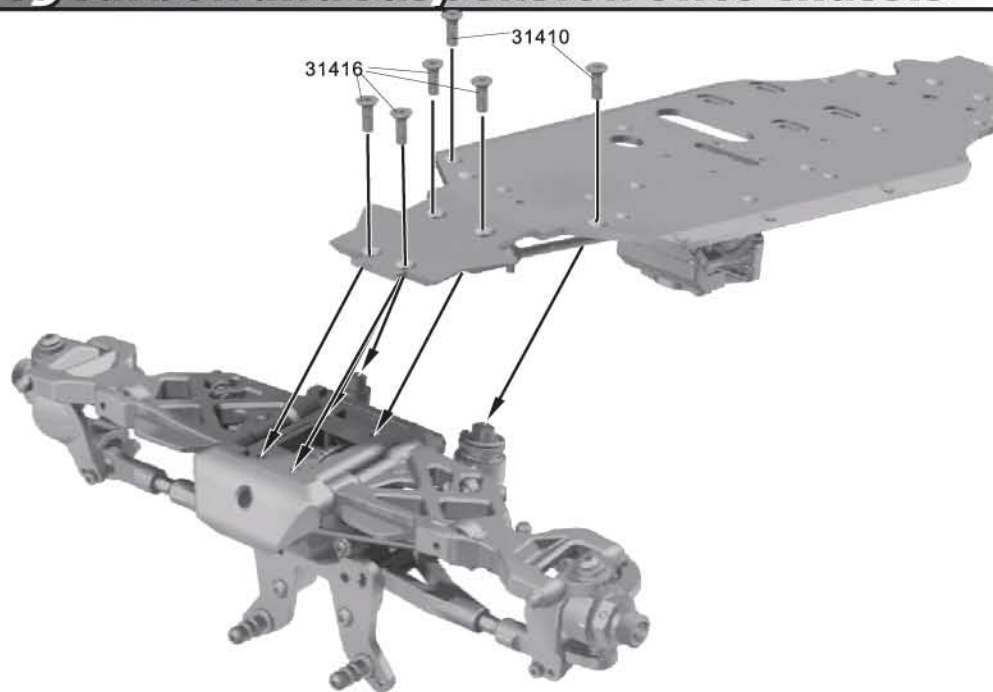


Assembly of Rear Gearbox and suspension onto chassis

27

31414
4x14mm x2
F/H Screws

31416
4x16mm x4
F/H Screws

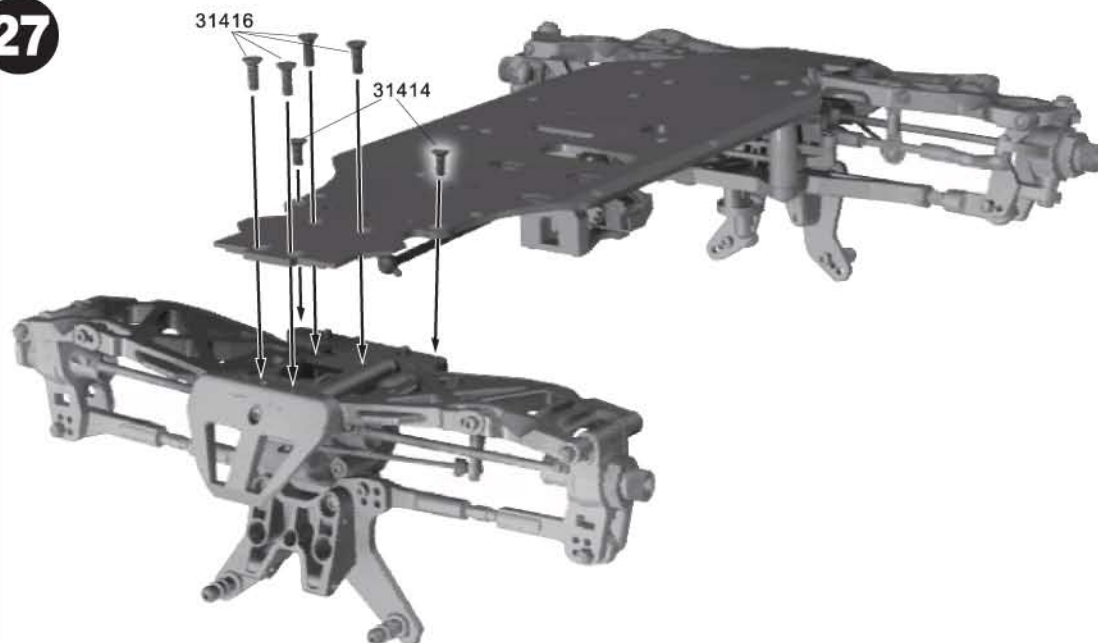


Assembly of Fuel Tank

28

33308
3x8mm x1
Screw

33312T
3x12mm x2
Screw

87398
3x12mm x2
Oring

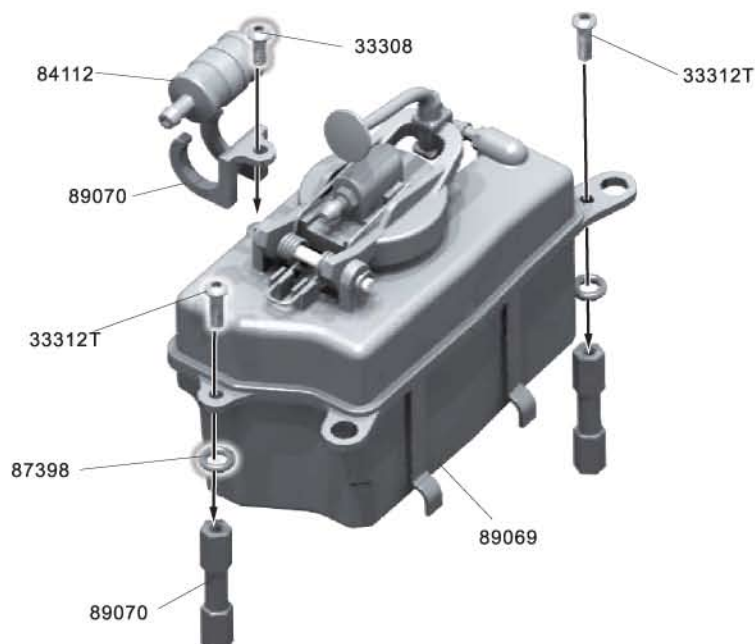


Assembly of Fuel Tank post

29

89070

33315
3x15mm x1
Screw

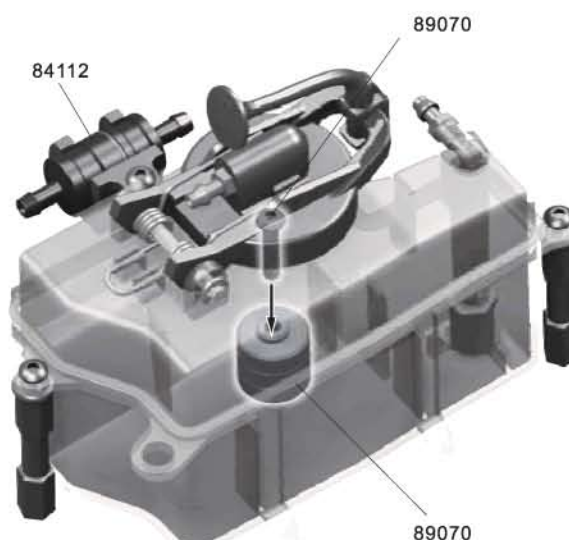


Assembly of Fuel Tank & Rear Brace onto Chassis

30

31312T
3x12mm x2
F/H Screws

33412
4x12mm x1
Screw

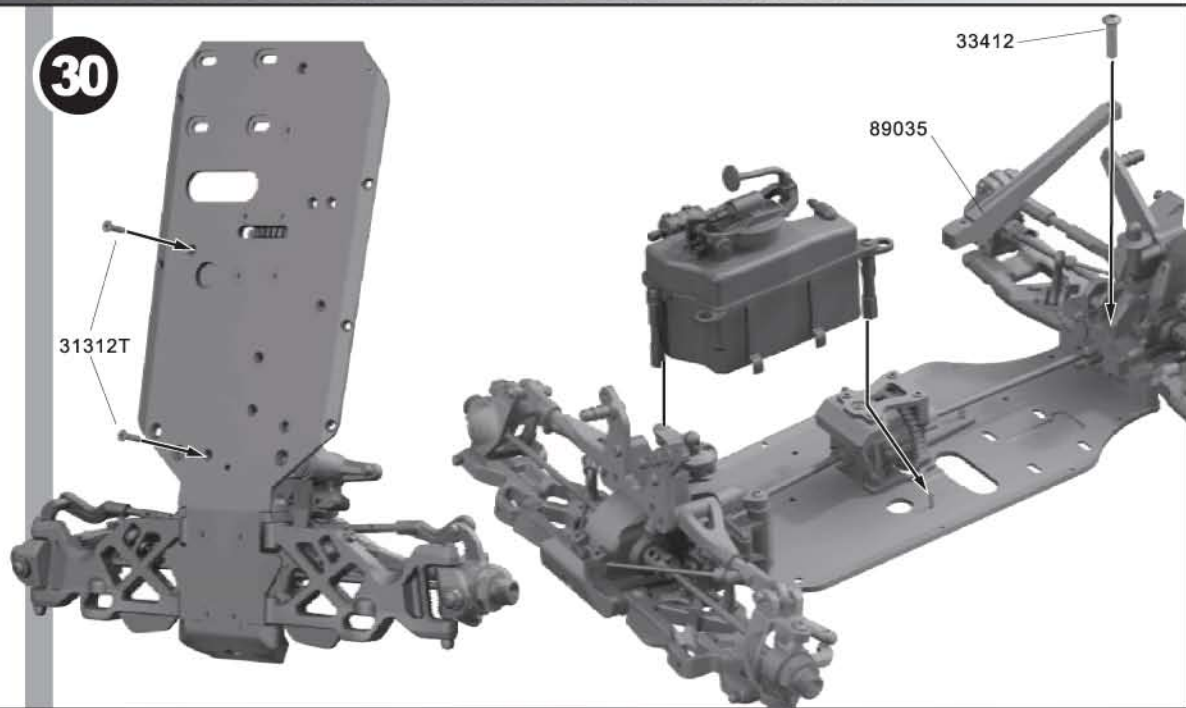


Assembly of Side Guard & Muffler Mount

31

38404
4x4mm x1
Screw set

31308
3x8mm x7
F/H Screws

31410
4x10mm x1
F/H Screw

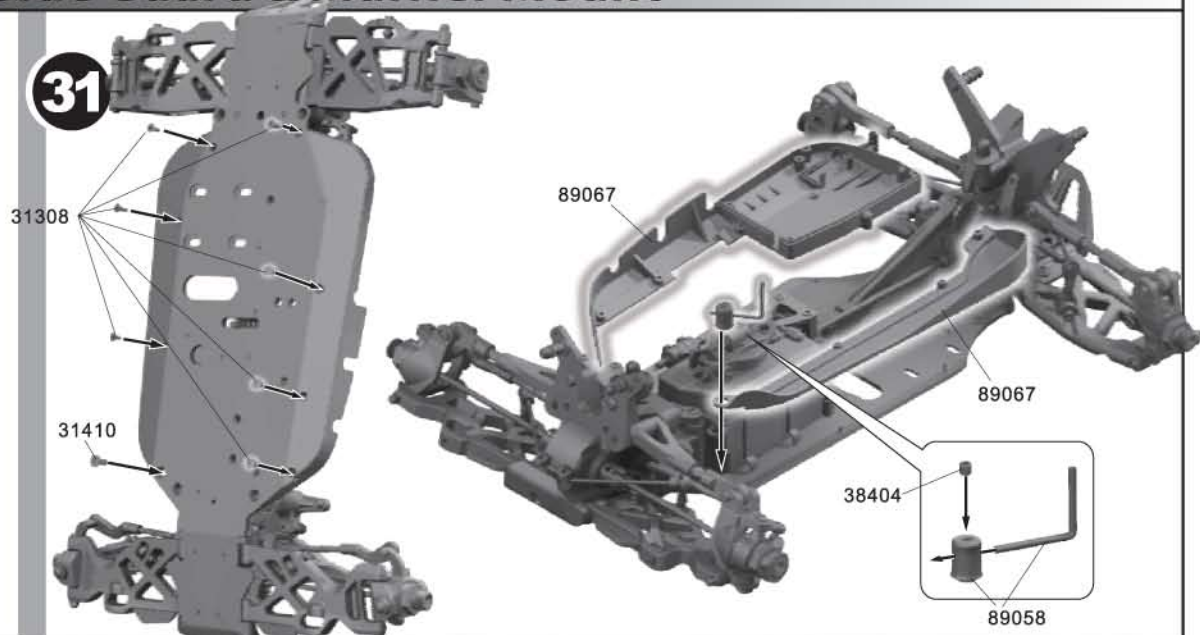

Assembly of Throttle & Brake Servo Linkage

32

38303
3x3mm
Set Screw


SC 8015
2.7x6.5x0.6mm
Washer

33308
3x8mm x6
Screws

89052
89053
5x8mm x5
Ball

89054
3x10mm
Set Screw

89054
Servo Rod

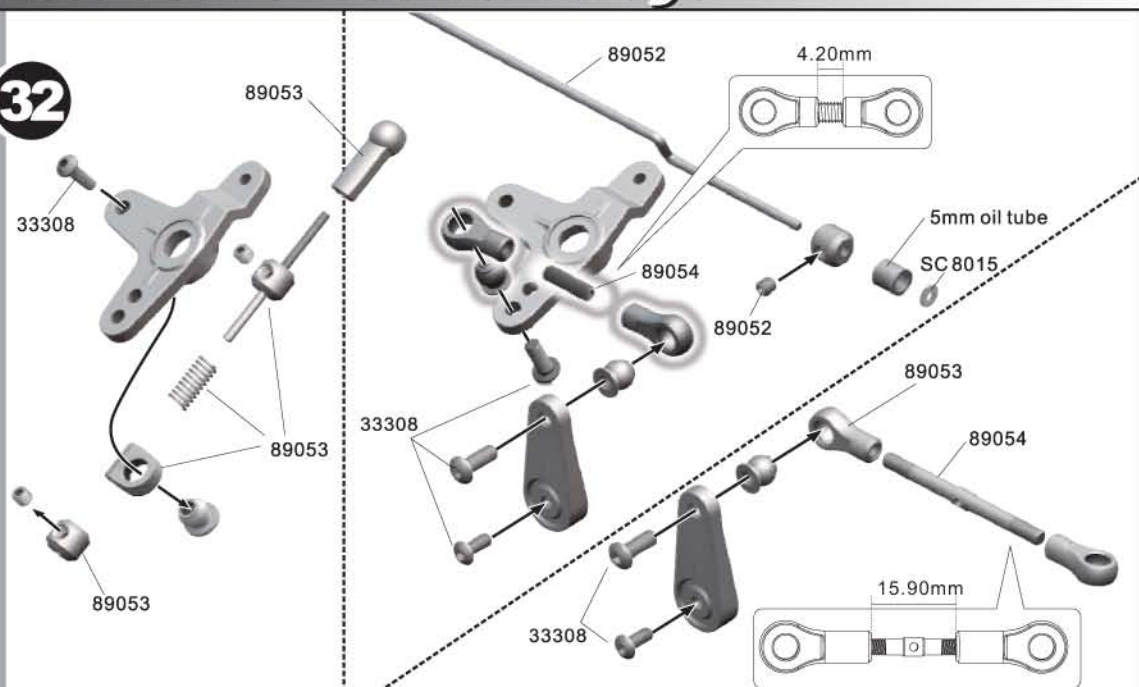

Assembly of Steering Servo & Radio Tray

33


31306
3x6mm x1
F/H Screw

33310
3x10mm x8
Screws

33312-T
3x12mm x2
Screws

224210
3x12mm x1
ALU.washer

84078
6x10x3mm
Ball bearing

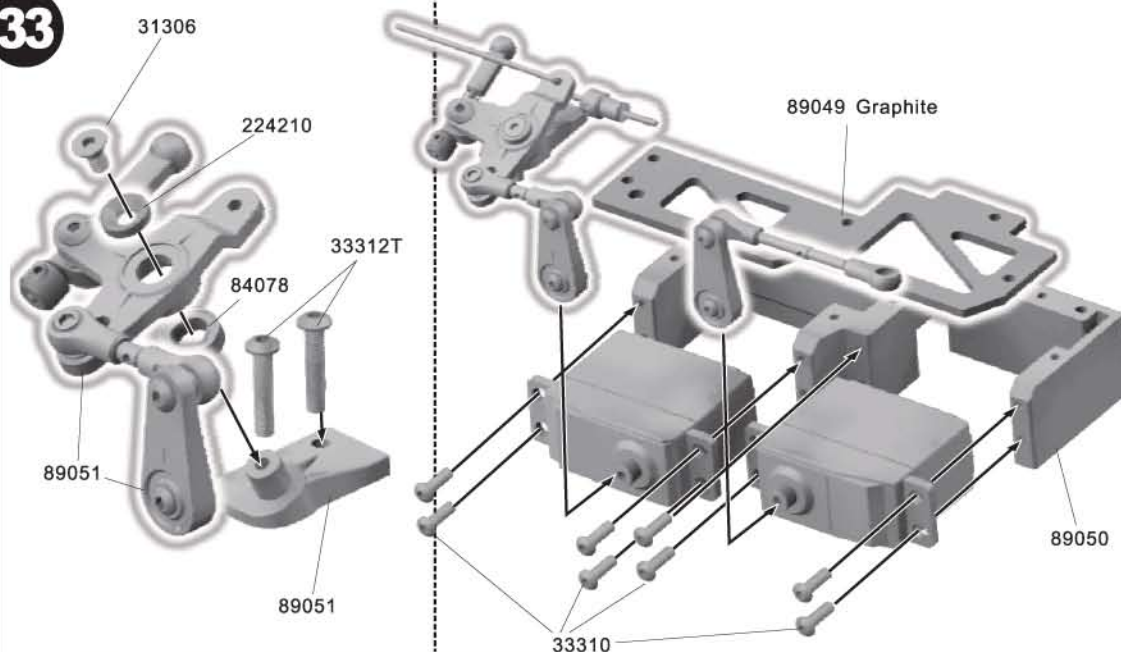


Assembly of Transponder Holder & Front brace

34

89052
89053
5x8mm x5
Ball

33312T
3x12mm x4
Screws

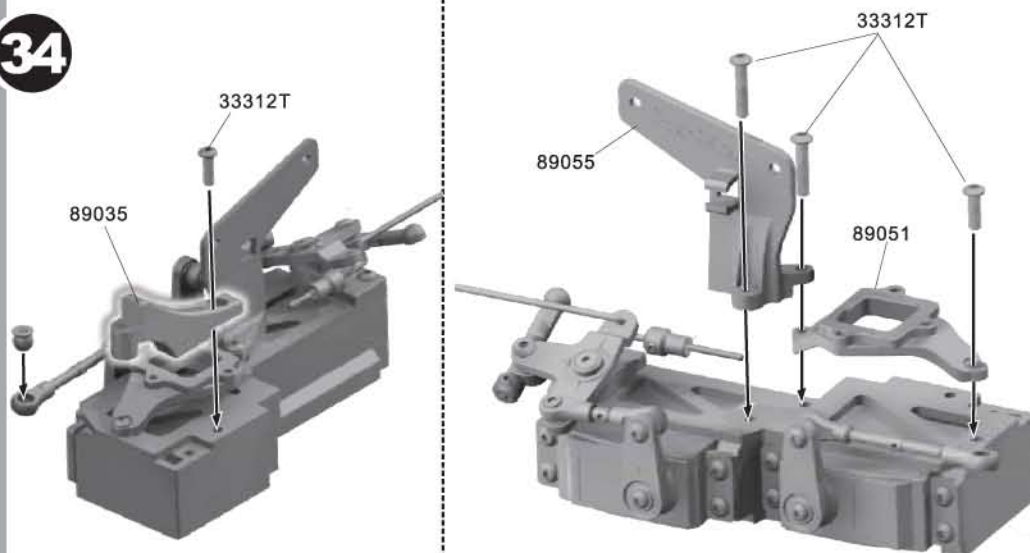

Assembly of Radio Tray onto Chassis


35

SC8015
2.7x6.5x0.6mm
Washer

31312T
3x12mm x5
F/H Screws

33308
3x8mm x1
Screw

33315
3x15mm x1
Screw

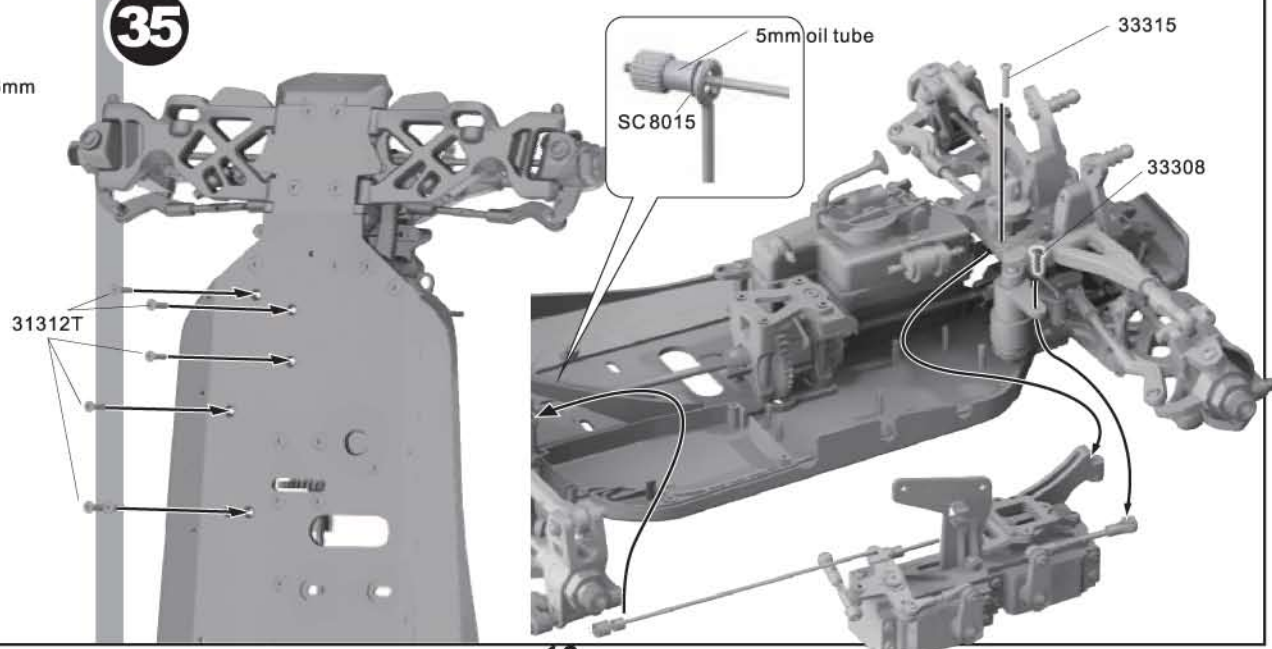

Assembly of Engine Mount & Flywheel


36

32310
3x10mm x4
Cap Screws

SW 3 NI
Spring Washer x4

224044
Clutch nut

88061
Flywheel

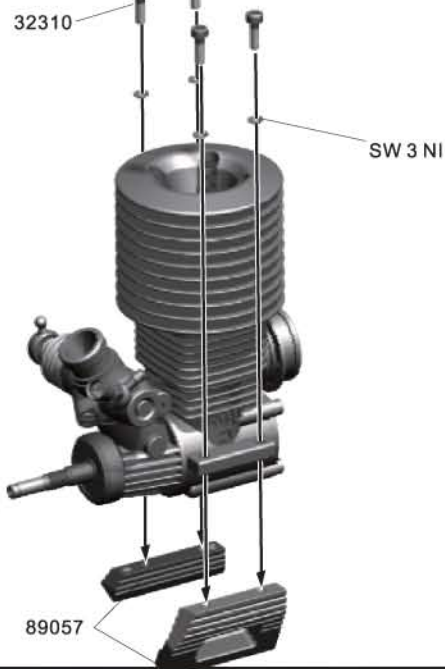


Assembly of Clutch Shoes

37

86121
Clutch shoe x3

86122
Clutch spring x3

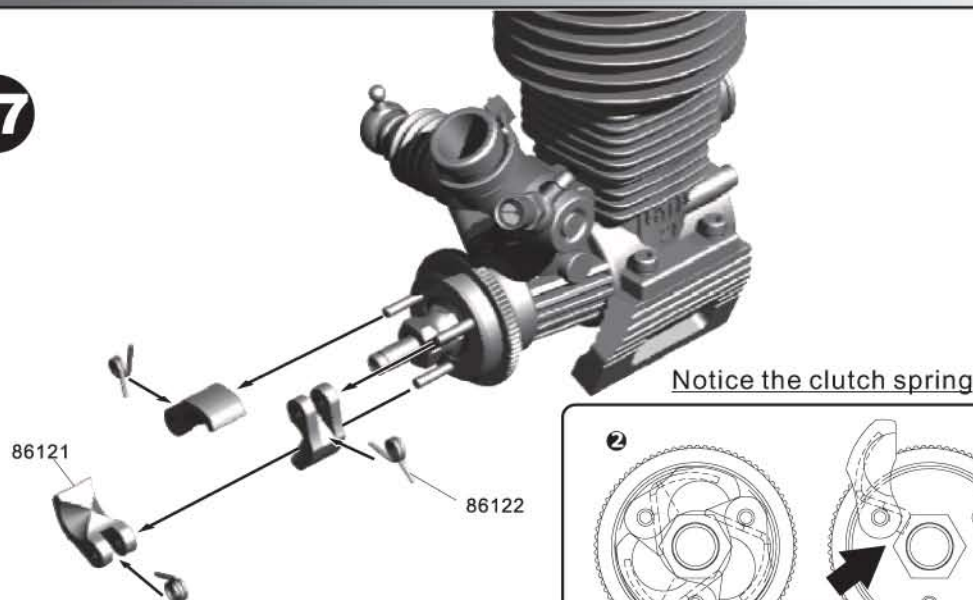

38

32308
3x8mm x1
Cap screw

84187W
3.1x6mm x1
Washer

84187W
5x8mm x5
Washer

84077
5x10mm x2
Bearing

84055
Clutch bell-14T x1



Assembly of Engine onto Chassis





42



33312T
3x12mm x2
Screws



39408
4x8mm x4
I- Screws x4

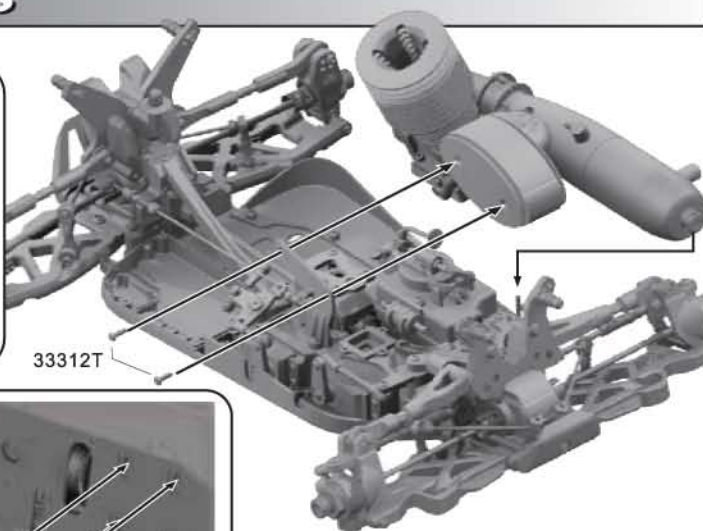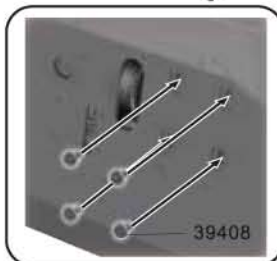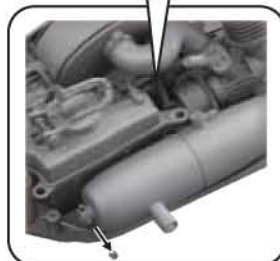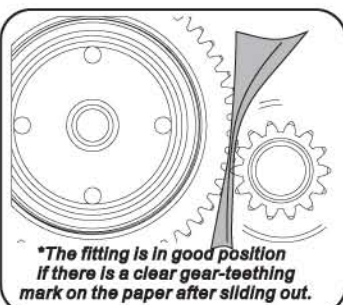

Assembly of Receiver Box






43



31305
3x5mm
F/H Screw




33310T
3x10mm x5
TP screws

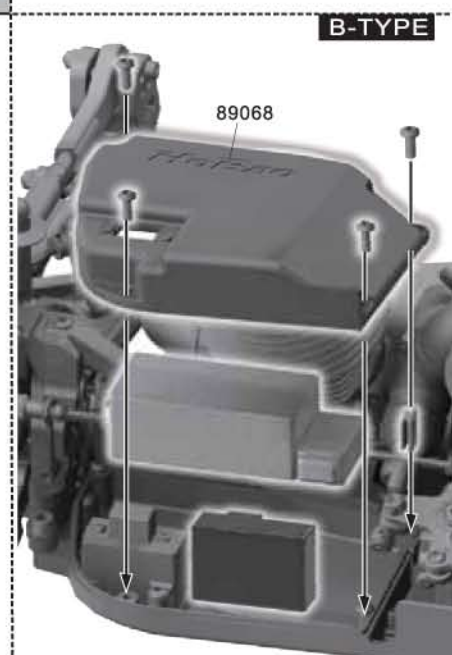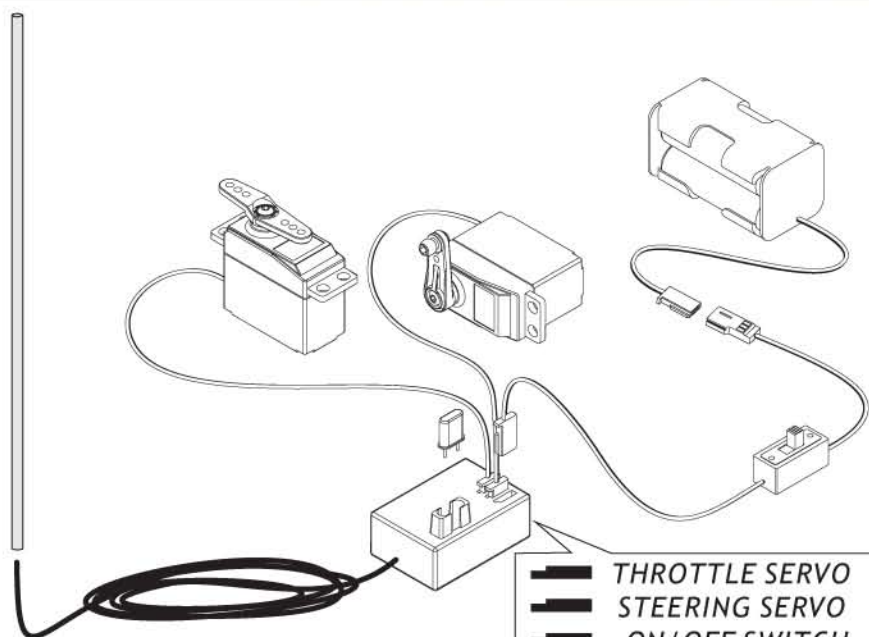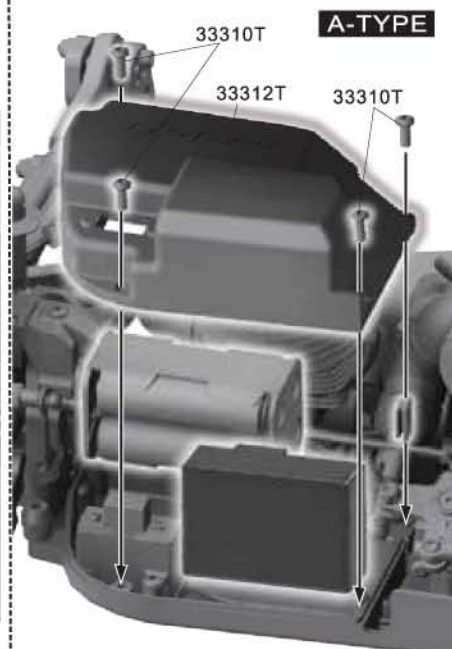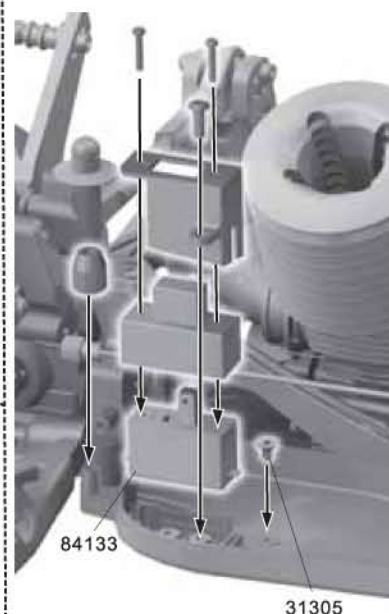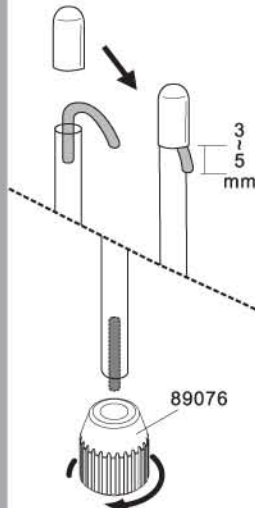

Assembly of Air Filter

39

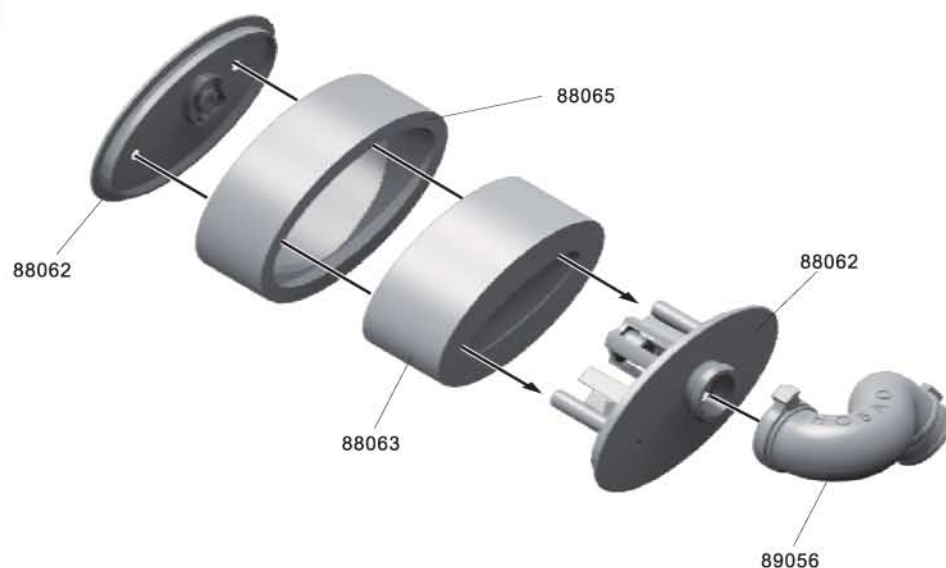


Assembly of Manifold & Muffler

40

21018
Silicone seal x2


22148
S.Manifold spring x3

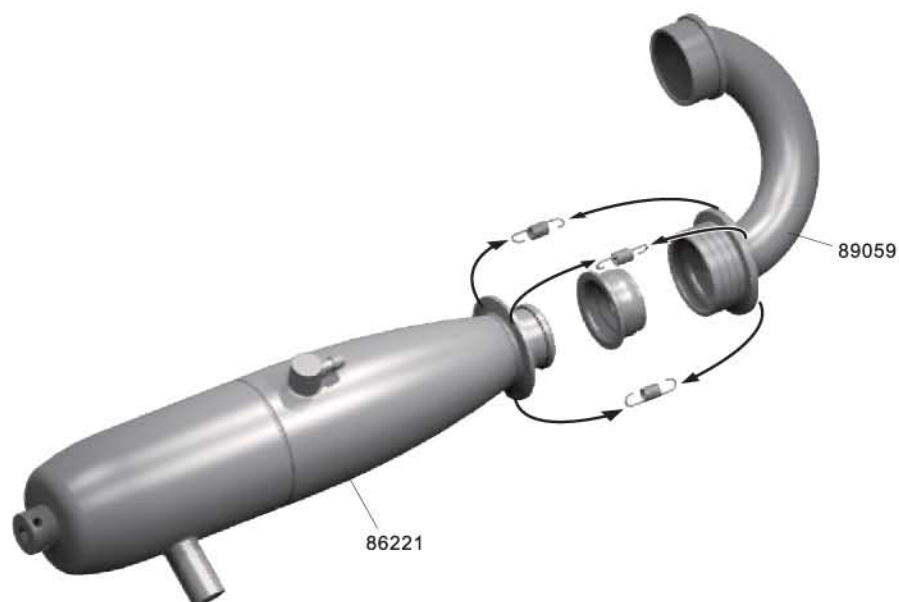

Assembly of Air filter & Muffler onto Engine


41

89059
C-Spring hook

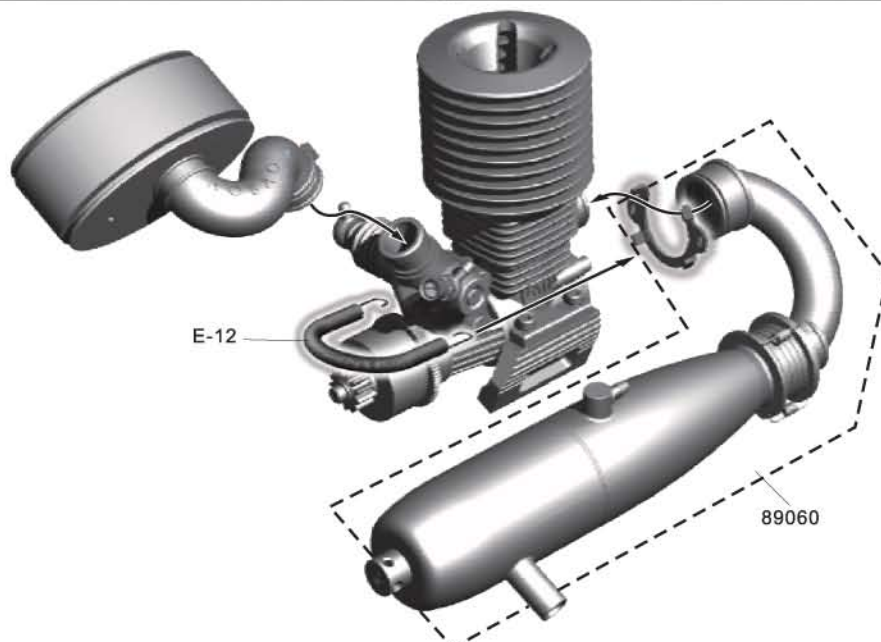

Assembly of Fuel tube


44

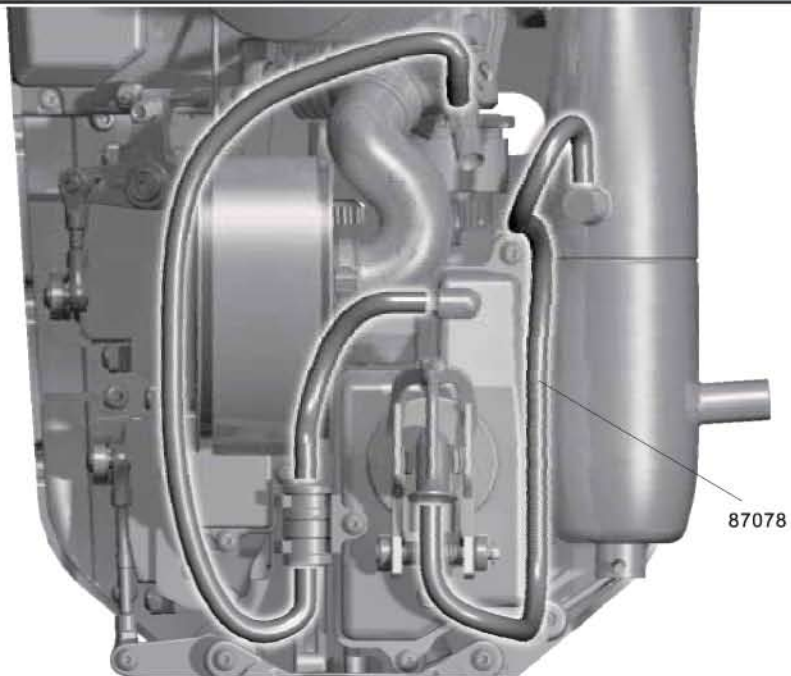

Assembly of Front Shocks

45


-  87125
2.7x6.5x0.5mm
Washer x2
-  87398
O-ring x8
-  87398
Washer x8
-  87398
M-clip x6
-  87016
6.8mm
Steel ball x2

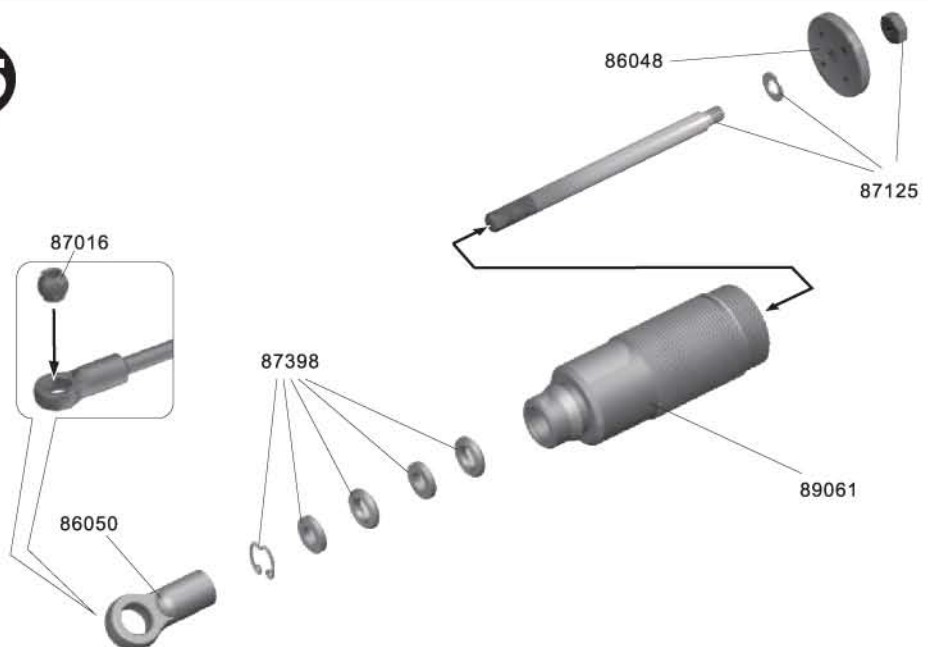

Assembly of Rear Shocks

46

-  87126
2.7x6.5x0.5mm
Washer x2
-  87398
O-ring x8
-  87398
Washer x8
-  87398
M-clip x6
-  87016
6.8mm
Steel ball x2

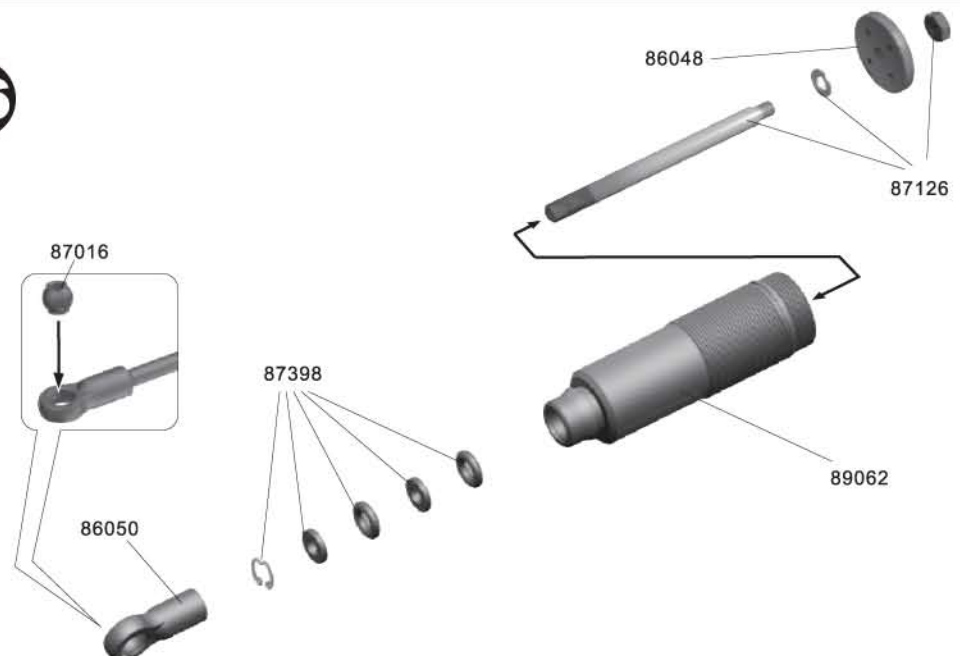

Assembly of Front and Rear Shock

86049
Shock Bladder x4

86050
Shock ball head x4

89061
Shock pro cap x4

89063
Alu shock adjust-
able ring x4

89063
17x1 mm
O-ring x4

47

O-ring

NO Bubbles

Shock Oil

Pull down
the piston.

Move the shaft
up and down
slowly to remove
bubbles.

**X2 SHORT
FOR FRONT**

**X2 LONG
FOR REAR**

Check if
piston moves
smoothly

Assembly of Shock Shaft Dust Covers

48

**X2 SHORT
FOR FRONT**

**X2 LONG
FOR REAR**

87018

Assembly of Front and Rear Shock Springs

49

**X2 SHORT
FOR FRONT**

**X2 LONG
FOR REAR**

86050
Shock spring supporter x4

88123
Shock spring x2

88126
Shock spring x2

89064

89065

88123

88126

86050


Assembly of the Front Shock Absorber

50

LR



32316
3x16mm x2
Cap Screws

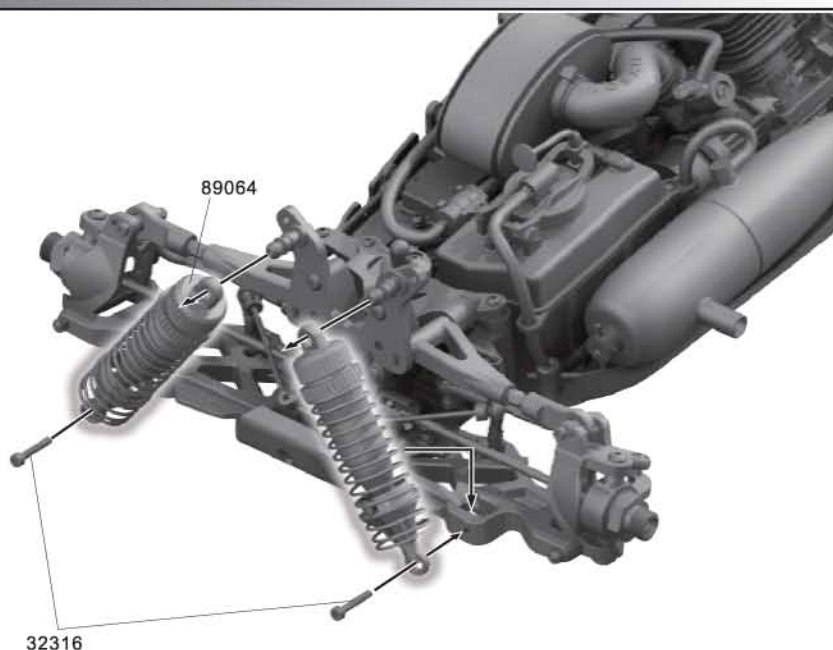


Assembly of Rear Shock Absorber

51

LR




32316
3x16mm x2
Cap Screws

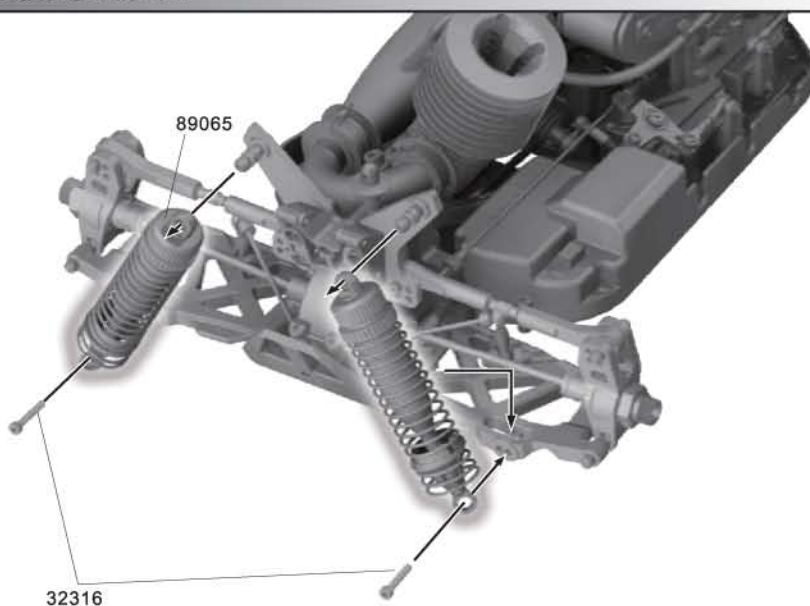

Assembly of Tires & Wheels

52

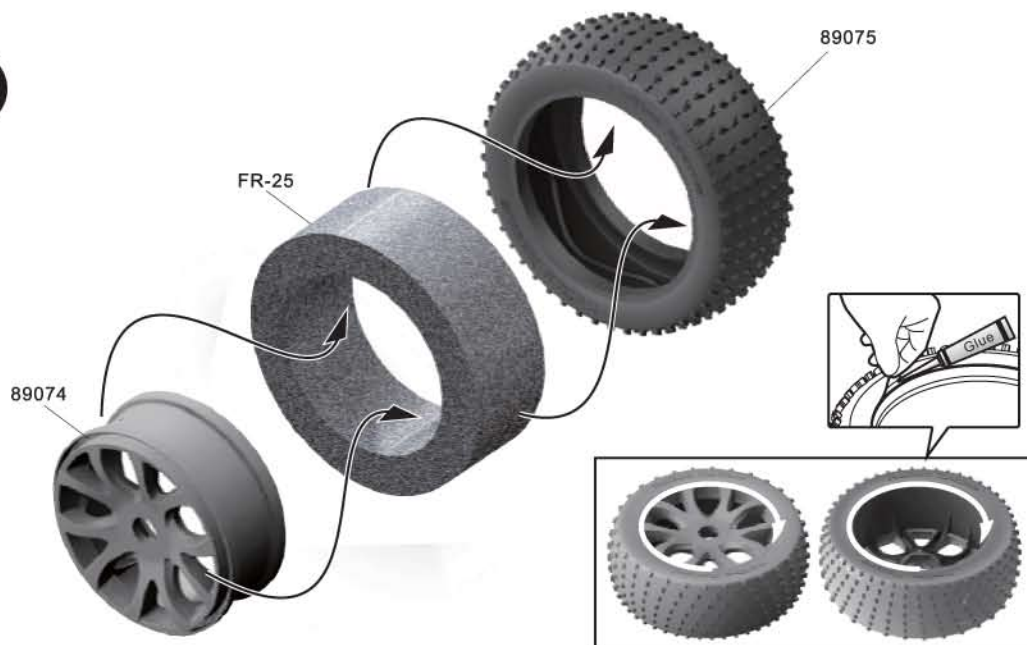

Assembly of the Tires onto Knuckles

53



87027H



Assembly of the Tires onto Rear Hubs

54



87027H




Assembly of Wing with Mount


55



33315
3x15mm x4
Screws

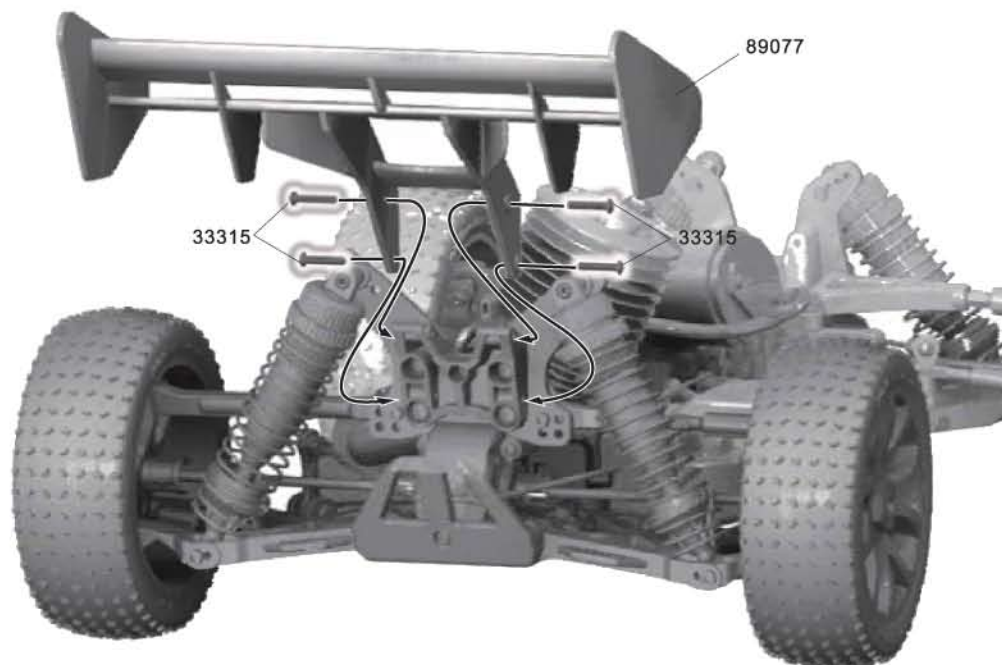



56

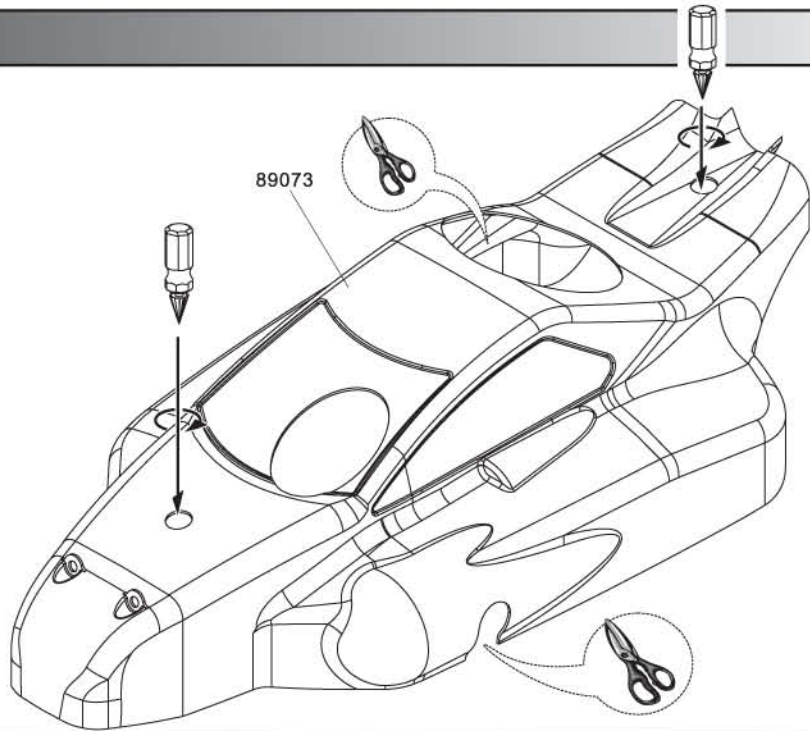


Assembly of the Nose of Body

57

CUT OFF

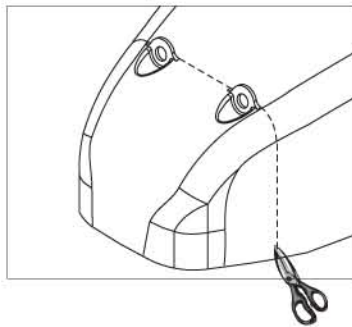

33415T
4x15mm x2
TP Screws

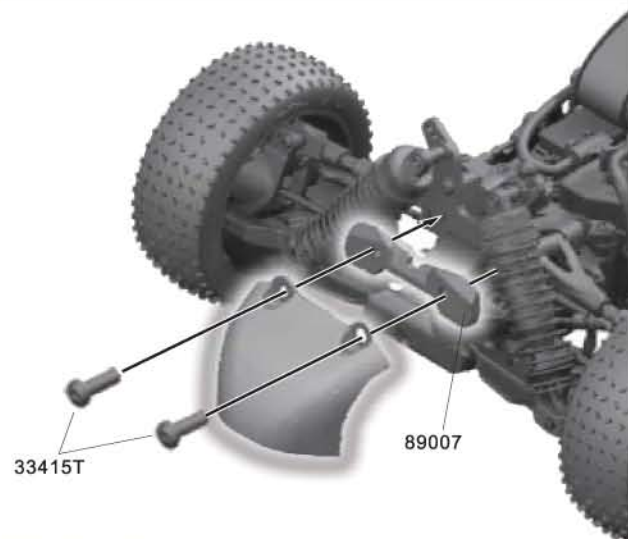

Assembly of the Body Shell Mounting

58

87375

87375
Snap pin



Length: Front width: Rear width: Wheelbase: Height: Weight:

Engine

Type:

Gasket:

Plug:

Fuel:

Diff.Oil

Front:Grease

Center:Grease

Rear:Grease


Clutch bell

13T ☐ 14T ☐ other:


Spur gear

40T ☐ other:

Front Arms:

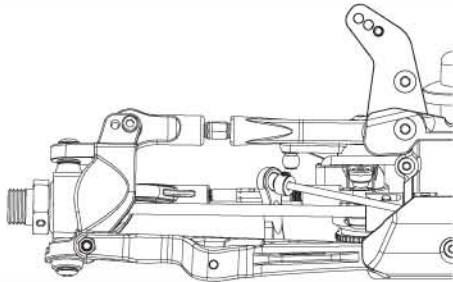


Steering Rod:

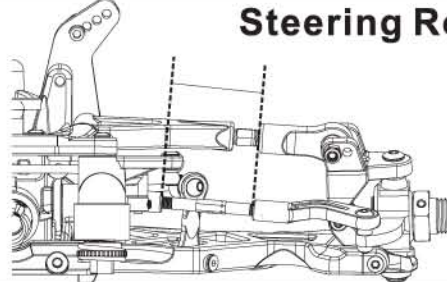


Front Suspension:

Deg.

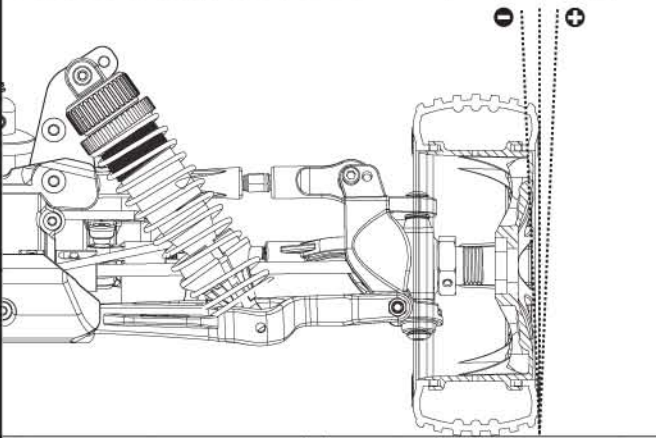


Front Toe angle:


Deg.

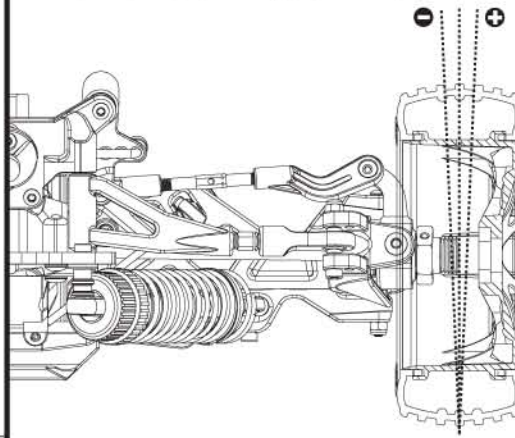



Front Shock:

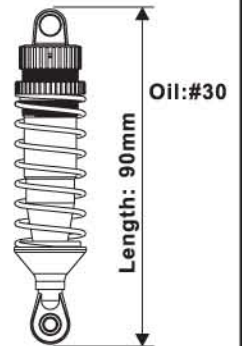

Rear Front Upper Arms:

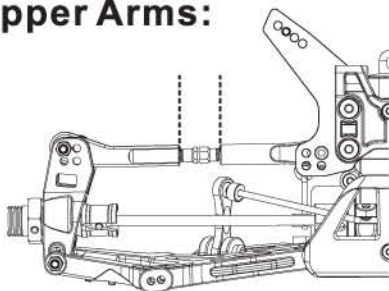

Steering Servo Rod:

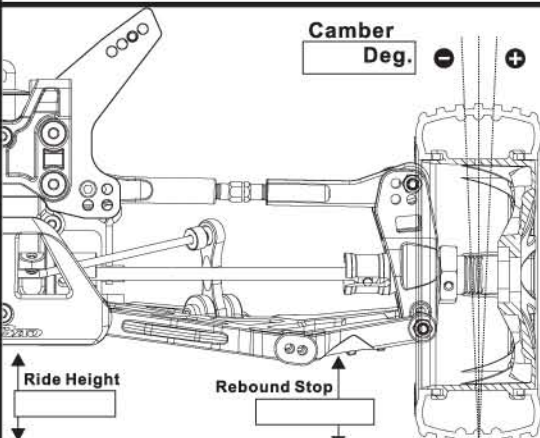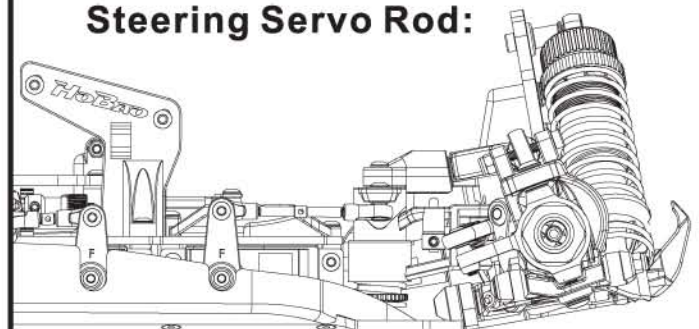

Camber

Deg.


-

+


Rear Toe angle:

-

+

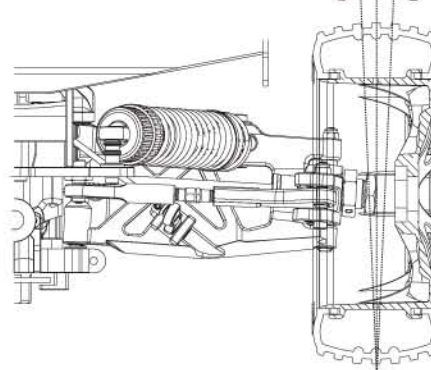


Rear Shock:

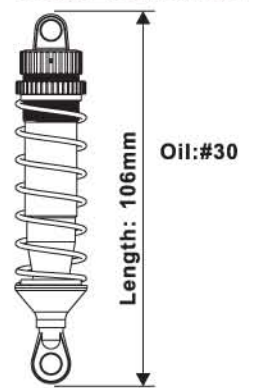


Length:	Front width:	Rear width:	Wheelbase:	Height:	Weight:
Engine		Diff.Oil		Clutch bell	
Type:		Front:Grease		13T ☐ 14T ☐ other:	
Gasket:		Center:Grease		Spur gear	
Plug:		Rear:Grease		40T ☐ other:	
Fuel:					


Front Arms:

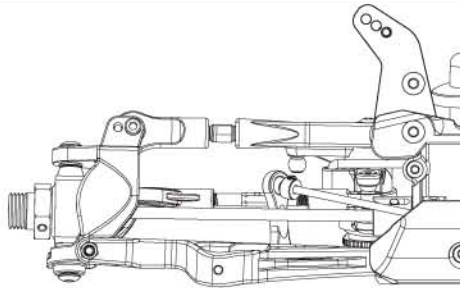


Steering Rod:

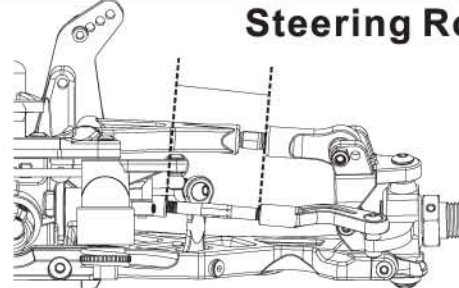


Front Suspension:

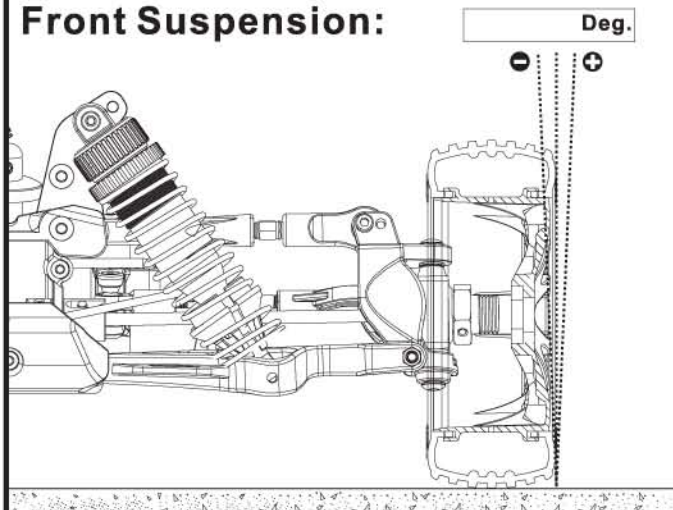


Front Toe angle:

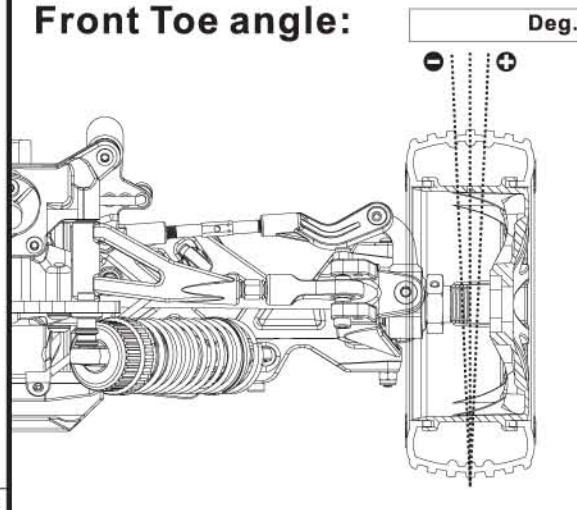



Front Shock:

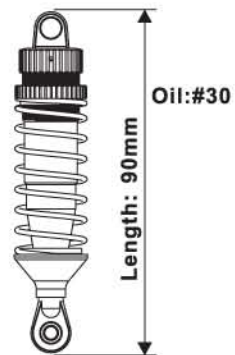


Rear Front Upper Arms:

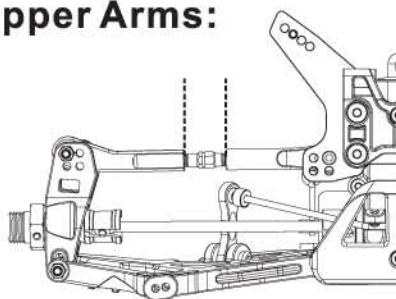


Steering Servo Rod:

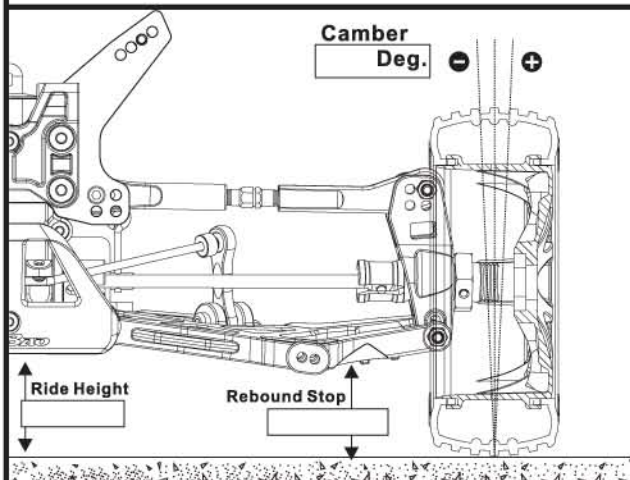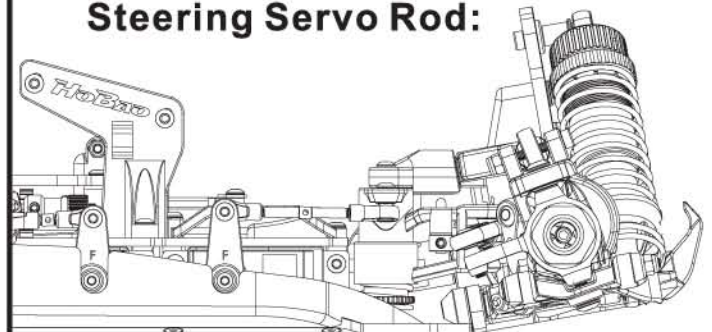



Rear Toe angle:


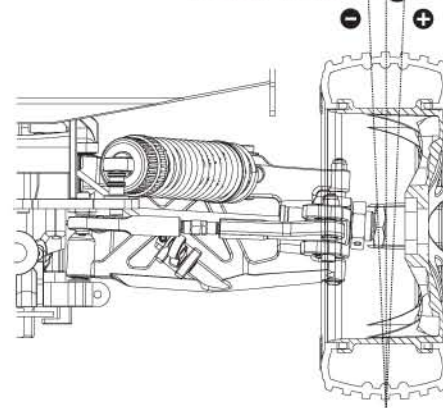





Rear Shock:

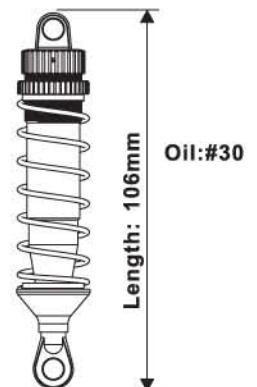






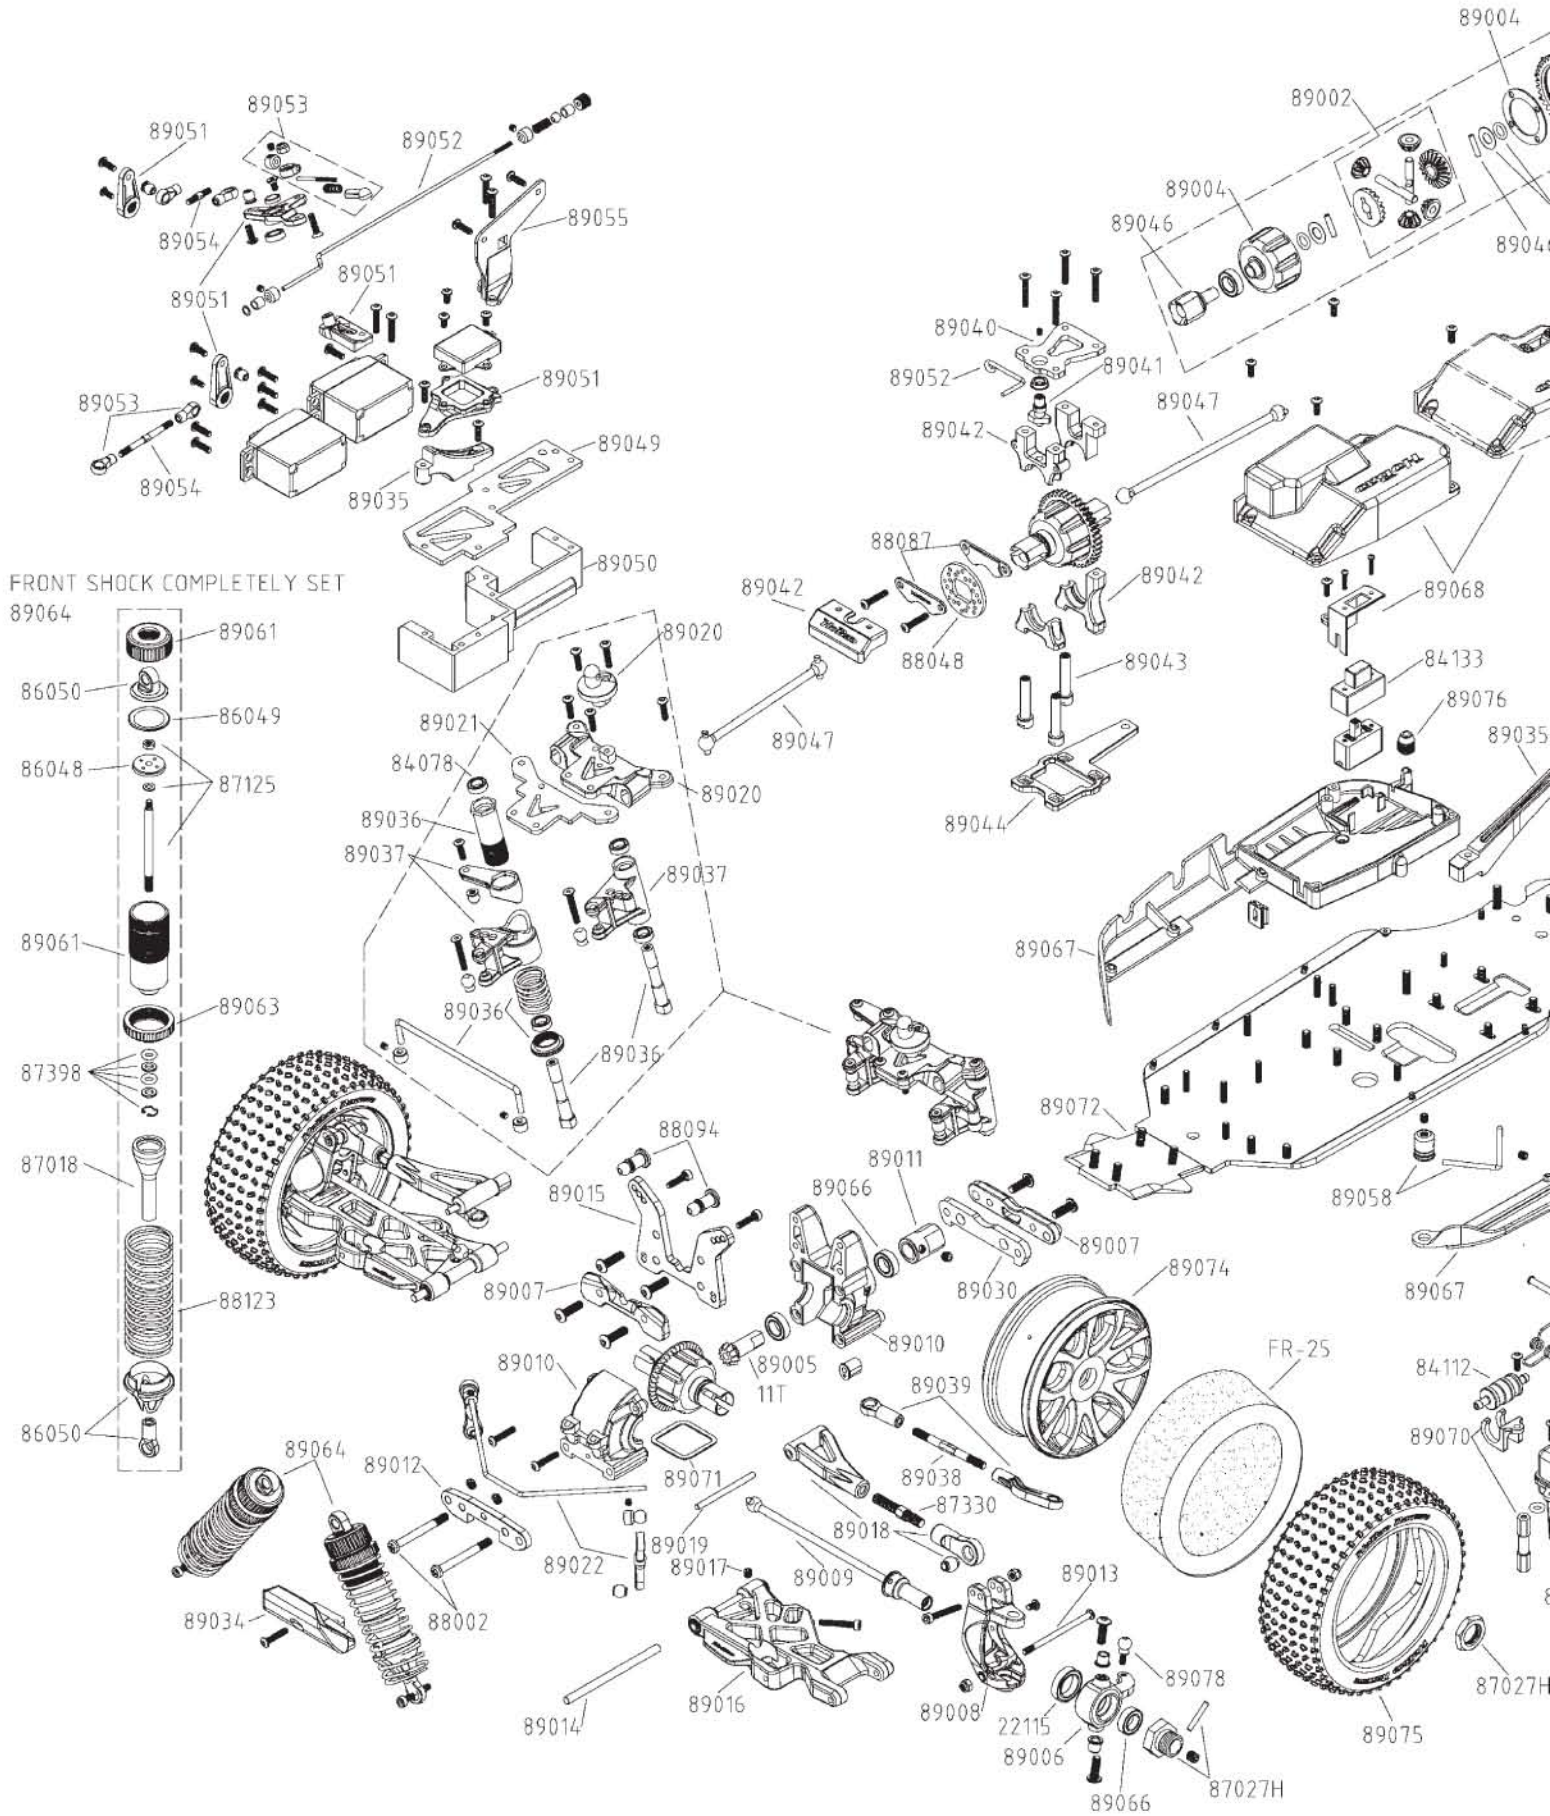


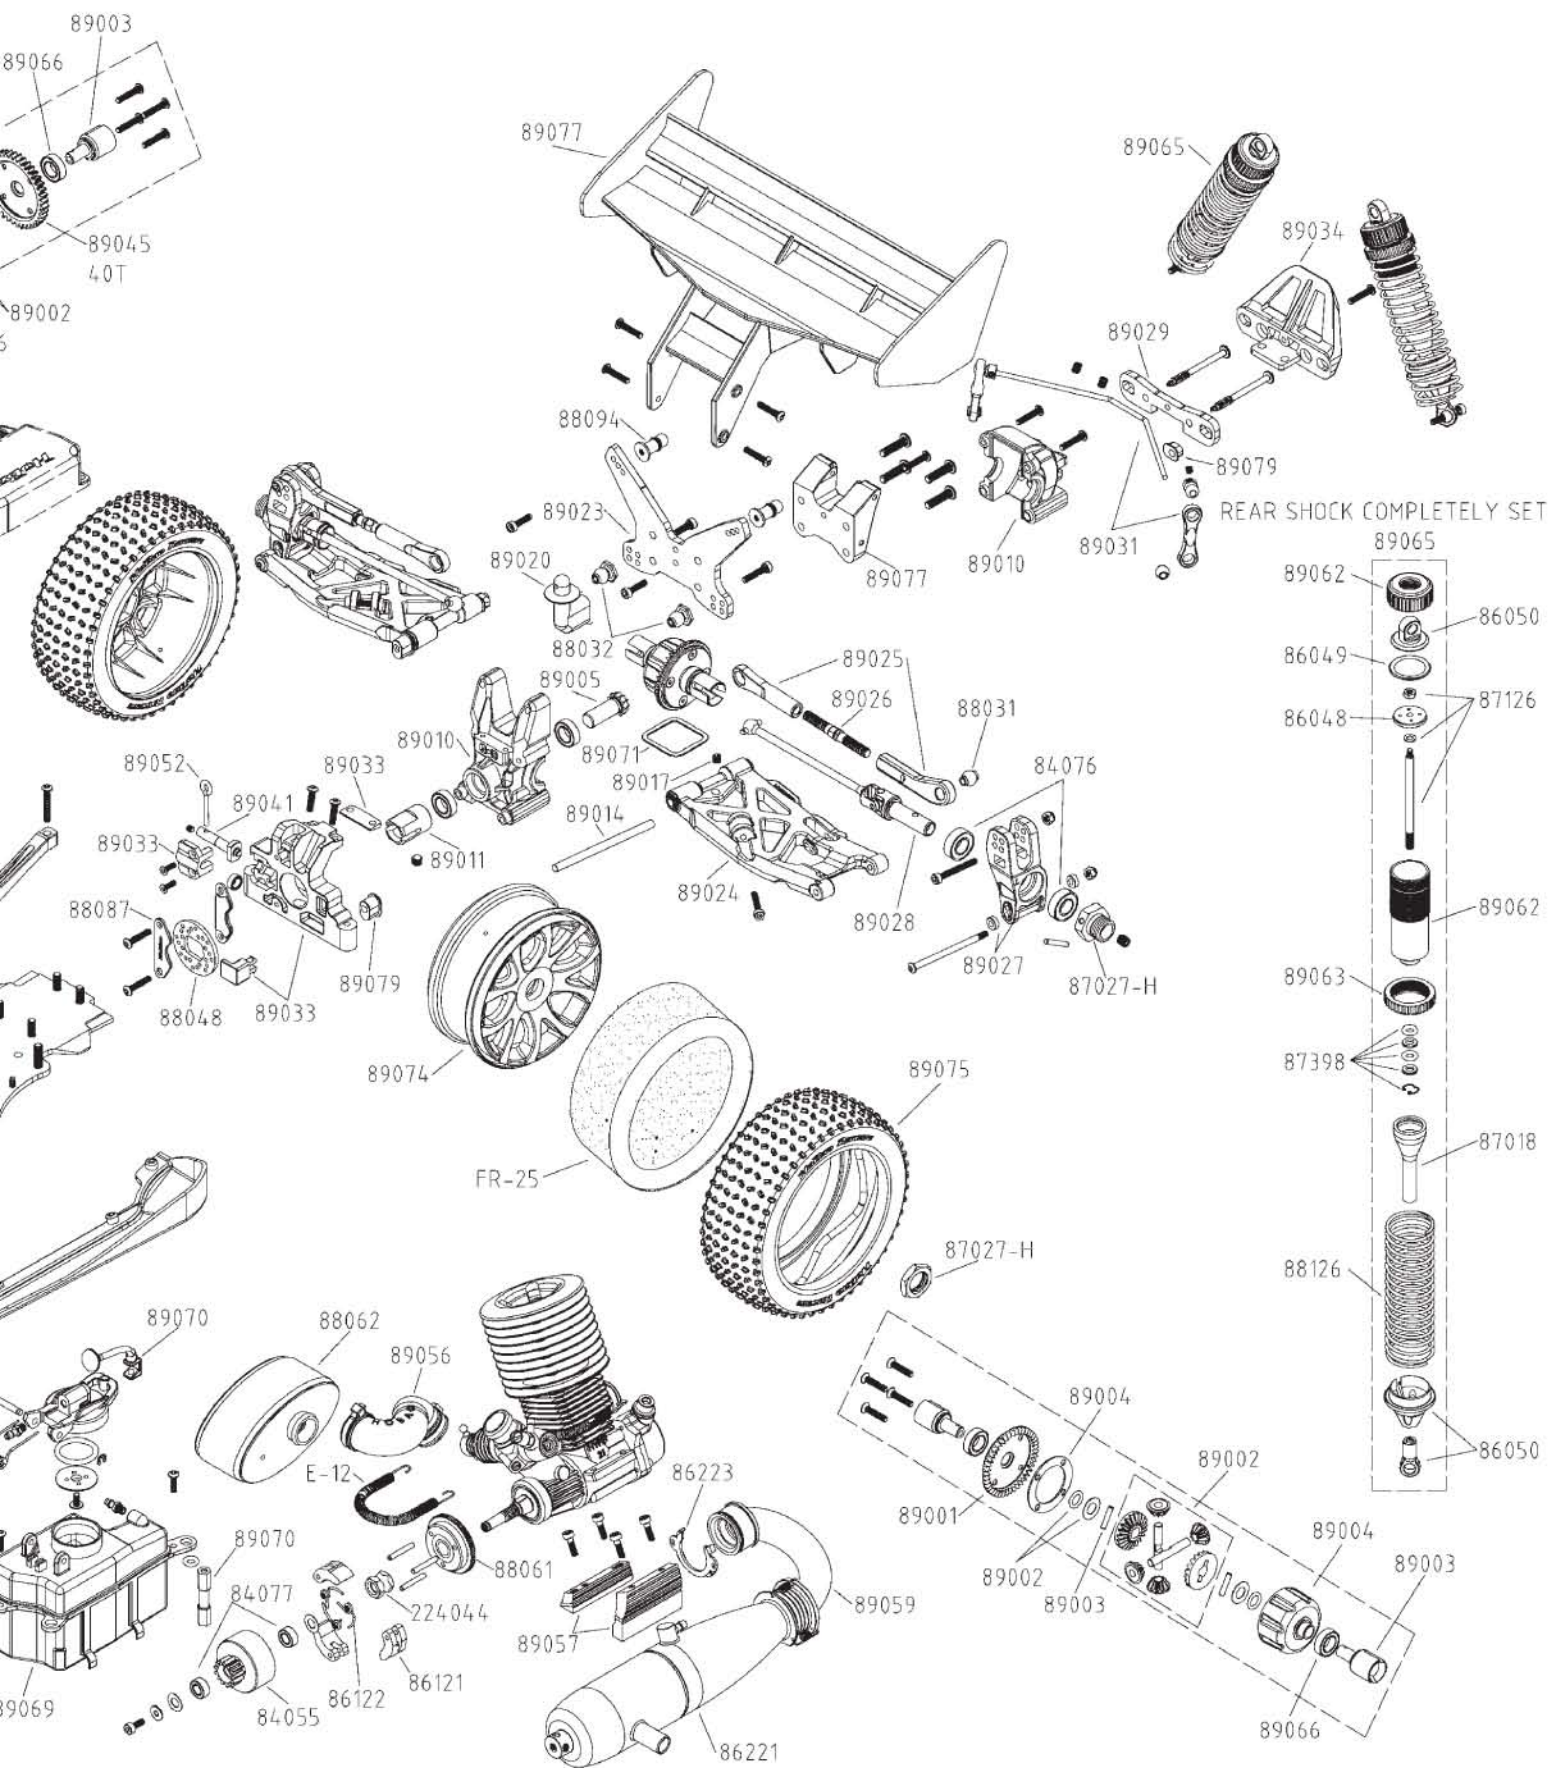



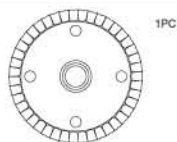

89001

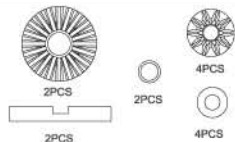89011

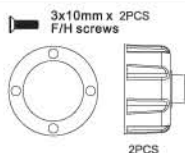5x4mmx2
Set screw










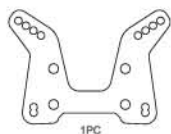
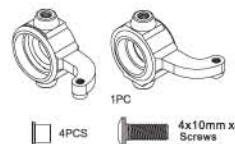
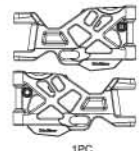
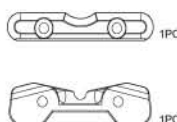
89002

89012

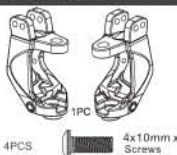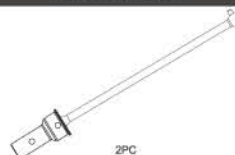89003

89013


89004

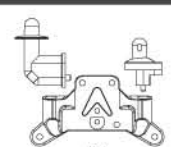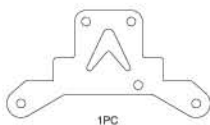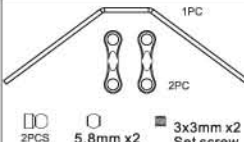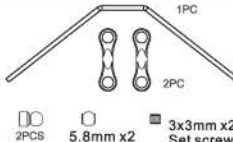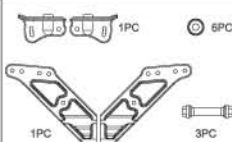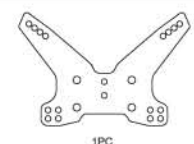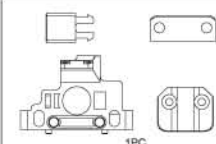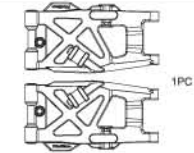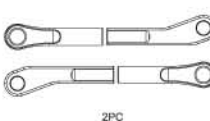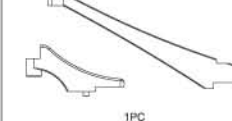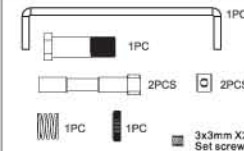89014







89005

89015

89006

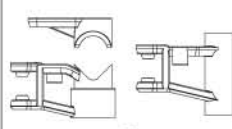89016

89007

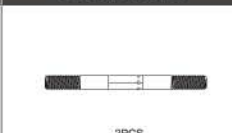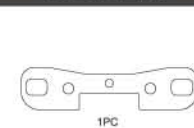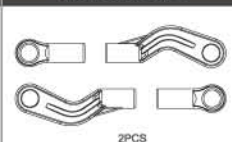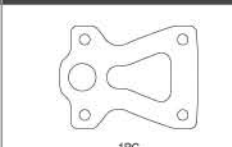89017




5x8mm x4
Set screw




89008

89018

89009

89019

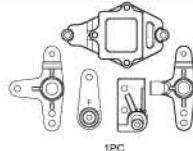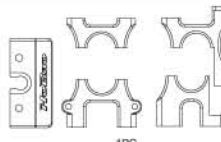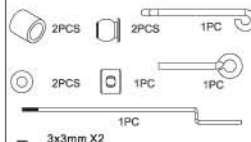89010

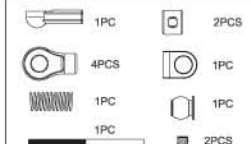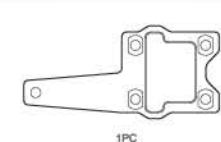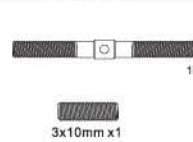
89020

89021

89031

89022

89032

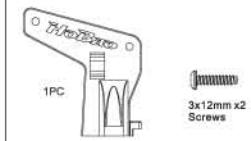89023

89033

89024

89034

89025

89035

89026

89036

89027

89037

89028





89038

89029

89039

89030

89040

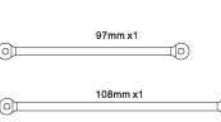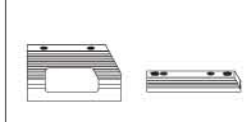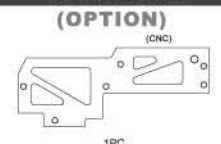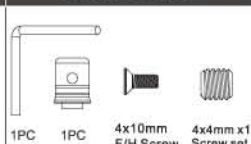89041

3x3mm X2
Set screw




89051

89042

89052

89043

89053

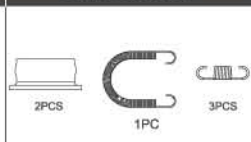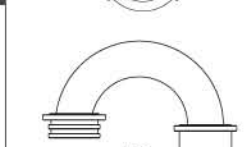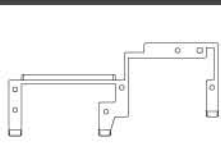89044

89054

89045


























89055

89046

89056

89047

89057

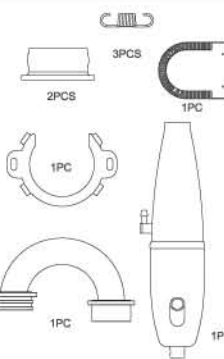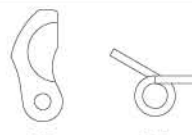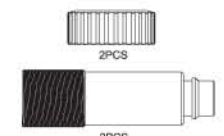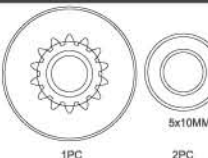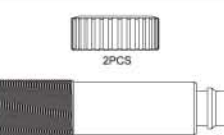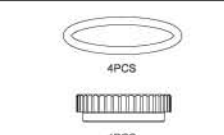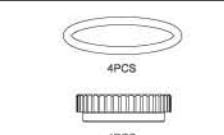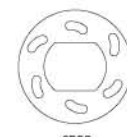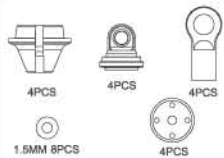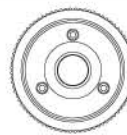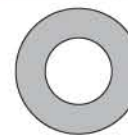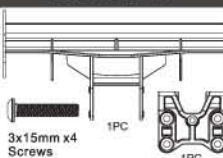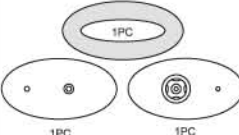89048

89058

89049

89059

89050


HYPER 9 PRO PARTS' LIST

89060 	89069 	89079 	86121 	87126 	88065 
89061 	89070 	84055 	86122 	87330 	88087 
89062 	89071 	84076 	86221 	87375 	88094 
89063 	89072 	84077 	87016 	87398 	88115 
89064 	89073 	84078 	87018 	87562 (OPTION) 	88123 
89065 	89074 	86048 	87027H 	88002 	88126 
89066 	89075 	86049 	87051B 	88048 	E-12 
89067 	89076 	86050 	87052 	88061 	FR-25 
89068 	89077 	84112 	87078 	88062 	21018 
89069 	89078 	84133 	87125 	88063 	22115 

22148



3PCS

224044



2PCS

224064



5x8MM

4PCS

224210



16PCS

84187 W



3x6MM 6PCS

5x8MM 6PCS

STANDARD PARTS		SCREW	
89001 CROWN GEAR	89055 AIR FILTER SUPPORTER	88062 AIR FILTER SET	
89002 BEVEL GEAR	89056 S-SHAPE SILICONE TUBE	88063 AIR FILTER FOAM	
89003 F/R DIFFERENTIAL DRIVE SHAFT	89057 ENGINE MOUNT, PAIR	88065 AIR FILTER FOAM COVER	
89004 DIFFERENTIAL CASE	89058 MUFFLER STAY SET	88087 SP BRAKE PAD	
89005 DRIVE PINION GEAR, 2 PCS	89059 MANIFOLD WITH 4 SPRING	88094 STEEL SHOCK BALL END	
89006 CNC STEERING KNUCKLE - ALUM 7075	89060 IN-LINE MUFFLER/MANIFOLD SET	88115 ALUM COLLAR	
89006-1 STEEL COLLAR	89061 FRONT SHOCK BODY, 2 PCS	88123 FRONT SHOCK SPRING	
89007 FRONT LOWER ARM HOLDER - PLASTIC	89062 REAR SHOCK BODY, 2 PCS	88126 REAR SHOCK SPRING	
89008 FRONT C-HUB SET	89063 ALUM SHOCK ADJUSTABLE RING	E-12 MANIFOLD SPRING	
89009 CVD SHAFT	89064 FRONT SHOCK ABSORBER SET	FR-25 INNER FOAM FOR TIRE	
89010 GEAR BOX, PAIR	89065 REAR SHOCK ABSORBER SET	21018 SILICONE MANIFOLD SEALS	
89011 STEEL JOINT CUP, 2 PCS	89066 BALL BEARING M 8 X 14	22115 BALL BEARING M 12 X 18	
89012 CNC FRONT LOWER ARM HOLDER (FF)	89067 SIDE GUARD, PAIR	22148 SPRING FOR PRO MANIFOLD	
89013 SCREWS M3 X 50 & M 3 X 47	89068 BATTERY BOX	224044 CLUTCH NUT, 2 PCS	
89014 ARM SHAFT M 4 X 66, 4 PCS	89069 FUEL TANK	224064 BALL BEARING 5 X 8 MM	
89015 CNC FRONT SHOCK TOWER - ALUM 7075	89070 FUEL TANK POST & MOUNT	224210 SINK ALUM WASHER 3MM	
89016 FRONT BOTTOM ARM, PAIR	89071 SEAL FOR GEAR BOX ONTO CHASSIS		
89017 SET SCREWS M 5 X 8, 4 PCS	89072 CNC CHASSIS - ALUM 7075	31208 M2.6 X 8 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89018 FRONT UPPER ARM, PAIR	89073 BODY FOR HYPER 9	31305 M3 X 5 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89019 ARM SHAFT M 3 X 42, 2 PCS	89074 WHEEL , 2 PCS	31306 M3 X 6 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89020 FRONT UPPER ARM HOLDER - PLASTIC	89075 TIRE - SQUARE SPIKE, 2 PCS	31308 M3 X 8 HEX SOCKET COUNTERSUNK HEAD SCREWSSTAY SET	
89021 CNC FRONT UPPER PLATE - ALUM 7075	89076 ALUM ANTENNA MOUNT	31316 M3 X 16 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89022 FRONT STABILIZER SET	89077 REAR WING WITH MOUNT	31320 M3 X 20 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89023 CNC REAR SHOCK TOWER - ALUM 7075	89078 STEEL BALL END 6.8MM	31410 M4 X 10 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89024 REAR BOTTOM ARM, PAIR	89079 ADJUSTABLE INSERT SET	31414 M4 X 14 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89025 REAR UPPER ARM	89081 SCREWS SET - A - FOR FRONT/REAR VERSION	31416 M4 X 16 HEX SOCKET COUNTERSUNK HEAD SCREWS	
89026 TITANIUM TURNBUCKLE FOR REAR UPPER ARM	89082 SCREWS SET - B - FOR CENTER VERSION	32308 M3 X 8 HEX SOCKET HEAD CAP SCREWS	
89027 REAR WHEEL HUB, PAIR	89083 SCREWS SET - C - FOR CHASSIS VERSION	32310 M3 X 10 HEX SOCKET HEAD CAP SCREWS	
89028 REAR UNIVERSAL JOINT SHAFT	84055 CLUTCH BELL 14T	32316 M3 X 16 HEX SOCKET HEAD CAP SCREWS	
89029 CNC REAR LOWER ARM HOLDER - ALUM 7075	84076 BALL BEARING M 8 X 16	32322 M3 X 22 HEX SOCKET HEAD CAP SCREWS	
89030 CNC FRONT LOWER ARM HOLDER (FR)	84077 BALL BEARING M 5 X 10	32325 M3 X 25 HEX SOCKET HEAD CAP SCREWS	
89031 REAR STABILIZER SET	84078 BALL BEARING M 6 X 10	33308 M3 X 8 HEX SOCKET BUTTON HEAD SCREWS	
89032 WING MOUNT	84112 FUEL FILTER	33310 M3 X 10 HEX SOCKET BUTTON HEAD SCREWS	
89033 REAR BRAKE MOUNT	84133 SWITCH CAP, 3 PCS	33312 M3 X 12 HEX SOCKET BUTTON HEAD SCREWS	
89034 FRONT/REAR BUMPER SET	84187W WASHER M 3.1 X 6: 6 PCS, M 6.5 X 8: 6 PCS	33315 M3 X 15 HEX SOCKET BUTTON HEAD SCREW	
89035 FRONT/REAR BRACE SET	86048 SHOCK PISTON, 4 PCS	33410 M4 X 10 HEX SOCKET BUTTON HEAD SCREWS	
89036 SERVO SAVER SET	86049 SHOCK BLADDER , 4 PCS	33412 M4 X 12 HEX SOCKET BUTTON HEAD SCREWS	
89037 SERVO SAVER ARMS	86050 SHOCK NYLON SET	35410 M4 X 10 PAN HEAD SCREWS	
89038 TURNBUCKLE FOR STEERING	86121 CNC CLUTCH SHOE	38303 M3 X 3 SET SCREWS	
89039 NYLON STEERING BALL END	86122 CLUTCH SPRING FOR 86121	38404 M4 X 4 SET SCREWS	
89040 CNC ALUM CENTER DIFF HOUSING PLATE	86221 PRO MUFFLER FOR 21 ENGINE	38405 M4 X 5 SET SCREWS	
89041 BRAKE CAM SET	87016 STEEL BALL END M 6.8	38505 M5 X 5 SET SCREWS	
89042 CENTER DIFFERENTIAL MOUNT	87018 SHOCK BOOTS & SPACERS	39008 NYLON NUT M 3	
89043 ALUM CENTER DIFFERENTIAL POST	87027H WHEEL HUB SET - HARD COATING	39408 M4 X 8 HEX SOCKET "I" HEAD SCREWS	
89044 ALUM CNC CENTER BRACE PLATE	87051B BALL BEARING M 5 X 8 FLANGE	31312T M3 X 12 HEX SOCKET COUNTERSUNK TAPPING SCREWS	
89045 STEEL SPUR GEAR - 40 T	87052 HEX HEAD SCREWS M 4 X 16.5	33310T M3 X 10 HEX SOCKET BUTTON HEAD TAPPING SCREWS	
89046 CENTER DIFFERENTIAL DRIVE SHAFT	87078 FUEL TUBE	33312T M3 X 12 HEX SOCKET BUTTON HEAD TAPPING SCREWS	
89047 ALUM CENTER DRIVE SHAFT	87125 FRONT SHOCK SHAFT - M3.5	33413T M4 X 13 HEX SOCKET BUTTON HEAD TAPPING SCREWS	
89049 RADIO TRAY - GRAPHITE	87126 REAR SHOCK SHAFT - M3.5	33415T M4 X 15 HEX SOCKET BUTTON HEAD TAPPING SCREWS	
89050 RADIO TRAY MOUNT	87330 TURNBUCKLE M 5 X 30 FOR FRONT UPPER ARM	33418T M4 X 18 HEX SOCKET BUTTON HEAD TAPPING SCREWS	
89051 COORDINATOR MOUNT FOR 25° SLANTED ENG	87375 BODY CLIP	SC8015 WASHER M 2.7 X 6.5 X 0.6	
89052 THROTTLE ROD SET	87398 M3.5 SHOCK ABSORBER REPAIR SET	SW 3 NI SPRING WASHER M 3	
89053 SERVO LINKAGE ROD SET	88002 HEX SCREW M 4 X 47		
89054 TURNBUCKLE FOR STEERING SERVO	88048 BRAKE DISC		
	88061 FLYWHEEL		



HYPER

HO BAO ENTERPRISING CO.,LTD.

www.hobao-racing.com

E-Mail:hobao@hobao.com.tw

Made in Taiwan